


Wall-Mounted RF Switch Activator

1. Operational Voltage: 12V DC
2. Programming: Follow instructions on RF receiver for programming.
3. Mounting
 - a) Use the below template to mark the screw positions on the wall. Choose either the wall fixing holes or the hanging holes.
 - b) Drill holes in the positions marked on the wall and fit the RF switch activator with the screw and plugs provided.

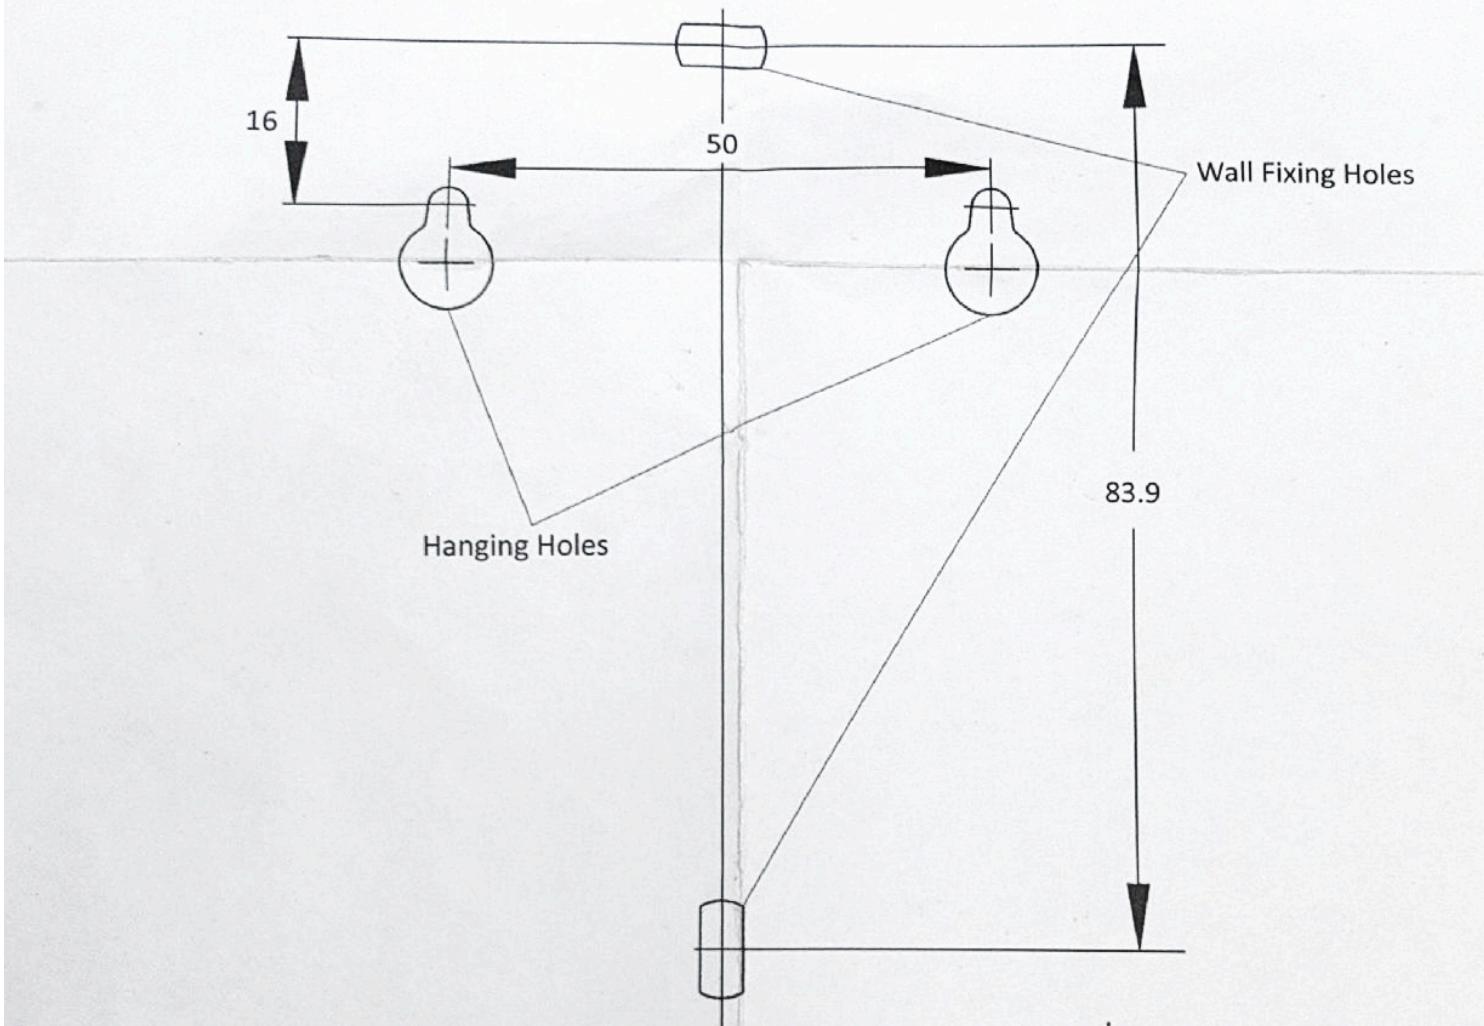

Note! Program BEFORE installation!