


LIVE FROM ESKOM MAINS

LIVE FROM INVERTER

L1 L2 L3 N

L1 L2 L3

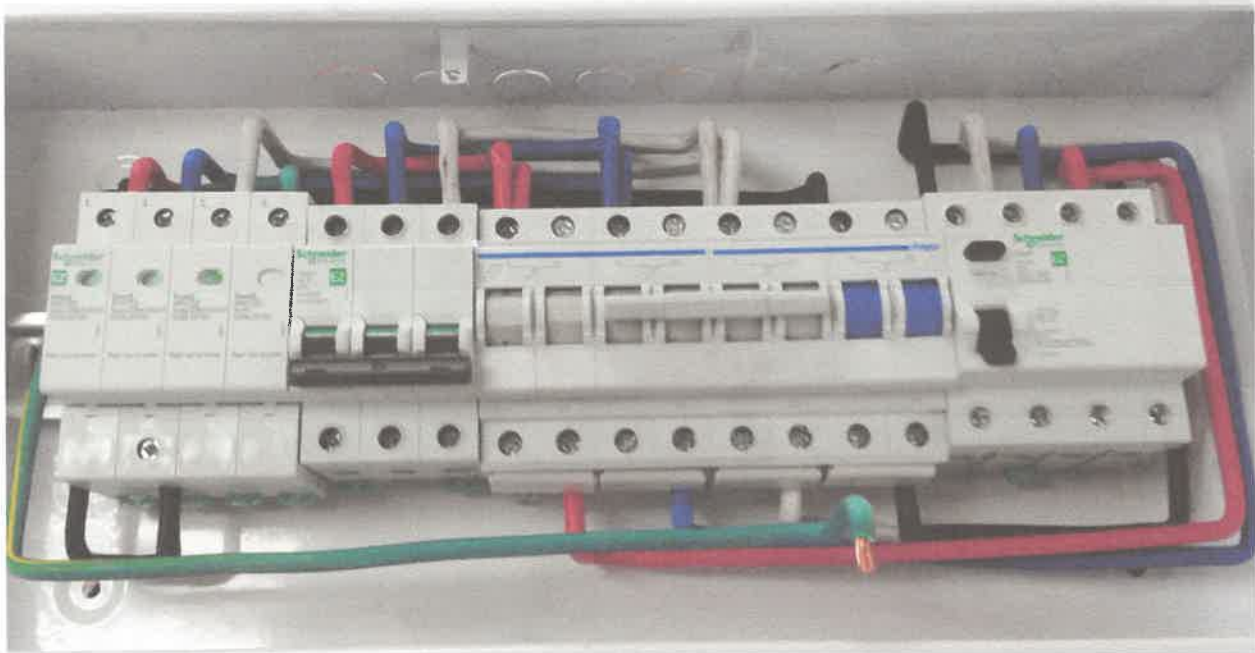

N

NETURAL FROM ESKOM

N L3 L2 L1

TO LOAD

L1 L2 L3

LIVE TO INVERTER

PERMANT EARTH