


OLED display energy tester



Measure dc voltage and current range

0~100V / 0~10A


Multiple functions energy tester

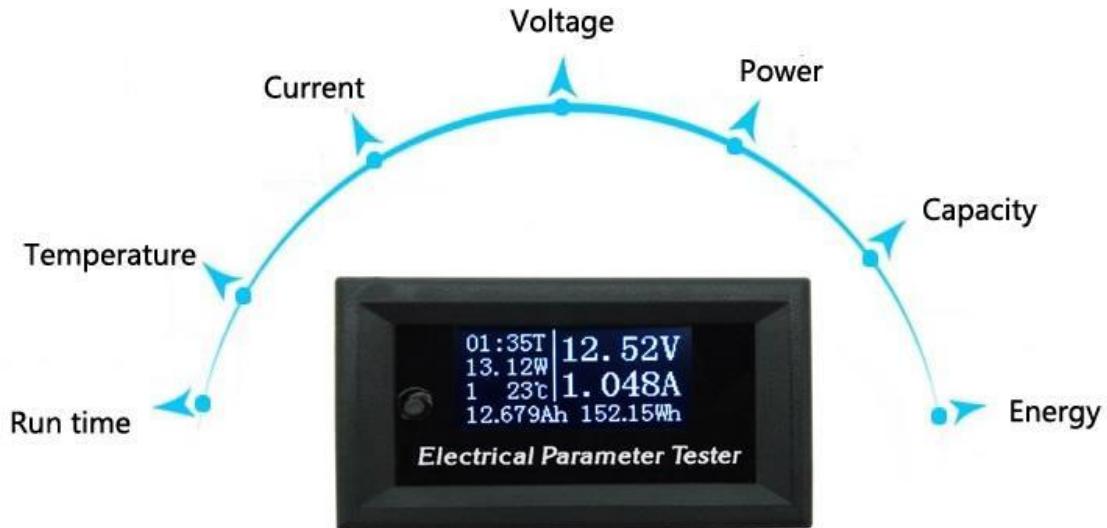

Measure dc voltage and current range


DC: 0~100V / 0~10A

Using Isolated Power Supply

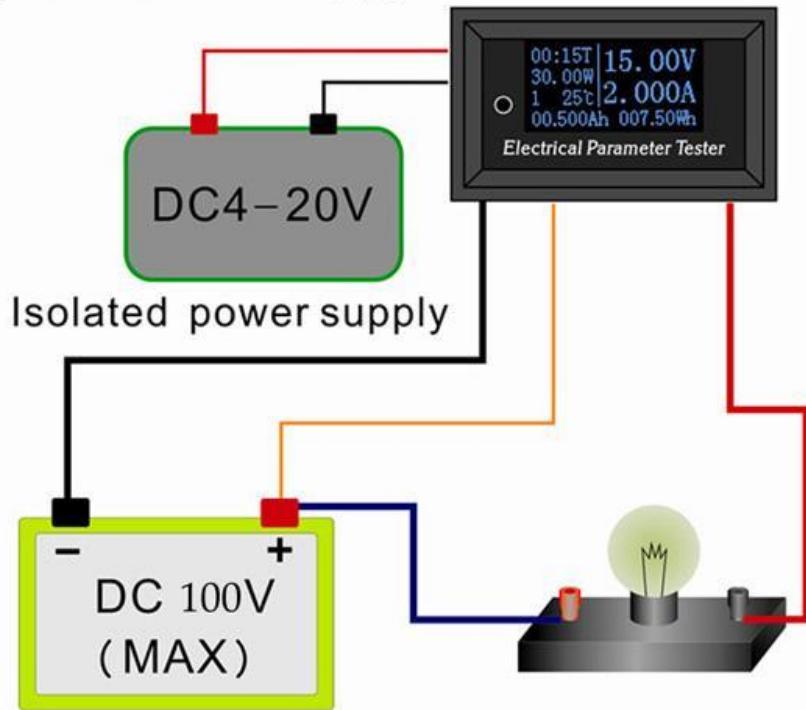


The two power supplies must be isolated and don't connect any load. The highest voltage of isolated power supply is 20V.

Using DC-DC converter to power supply

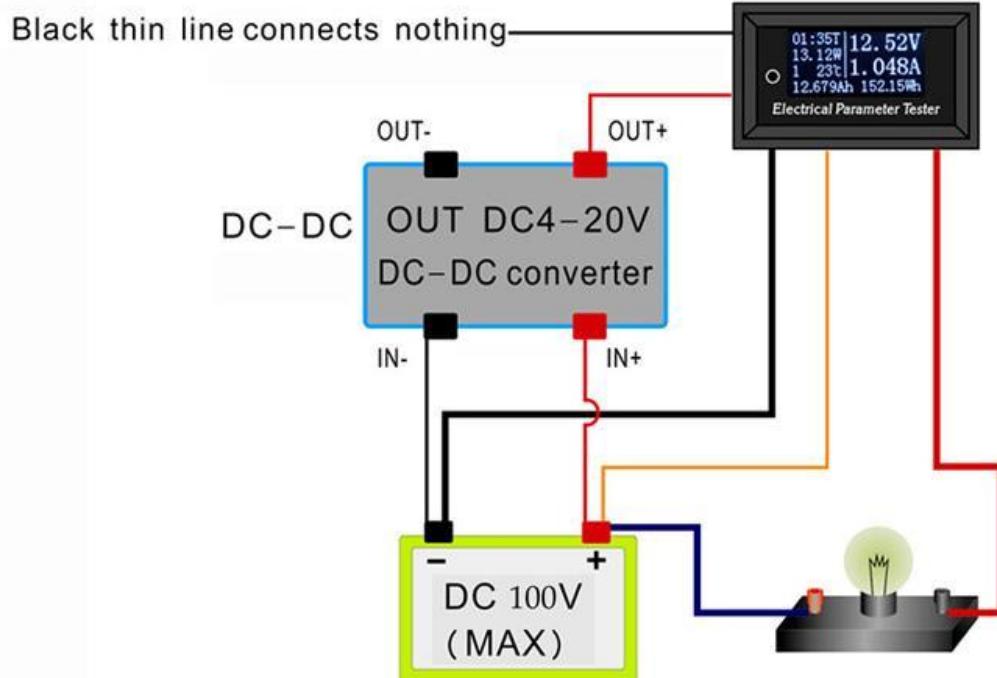


The black thin wire connects nothing and you should use insulator to wrap it to avoid short circuit. The DC-DC converter must be common cathode structure.

Using system to power supply

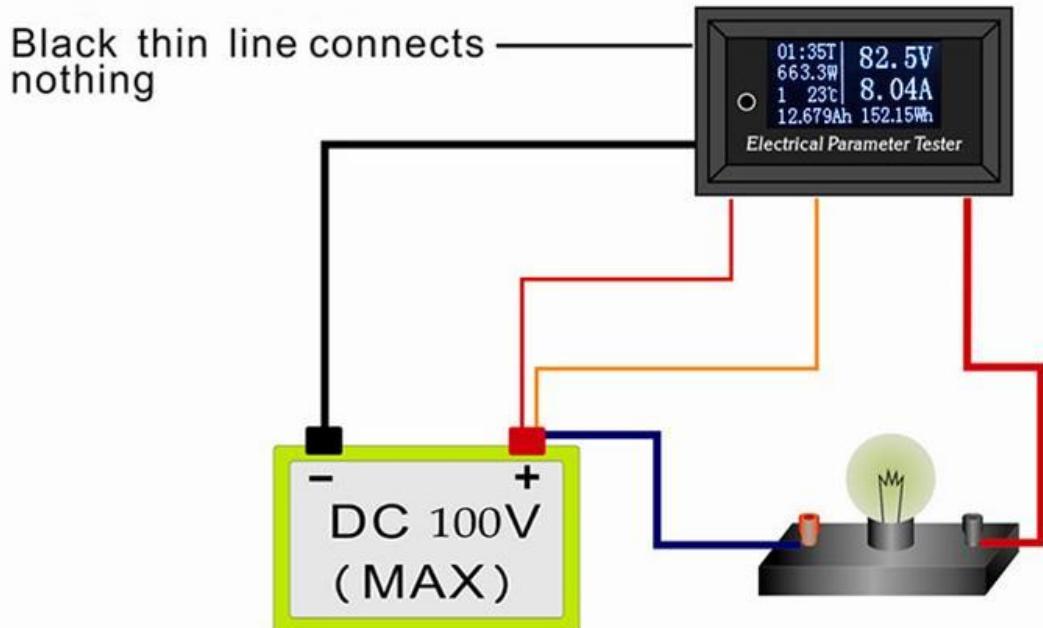

The black thin wire connects nothing and you should use insulator wrap it to avoid short circuit.

Using Isolated Power Supply

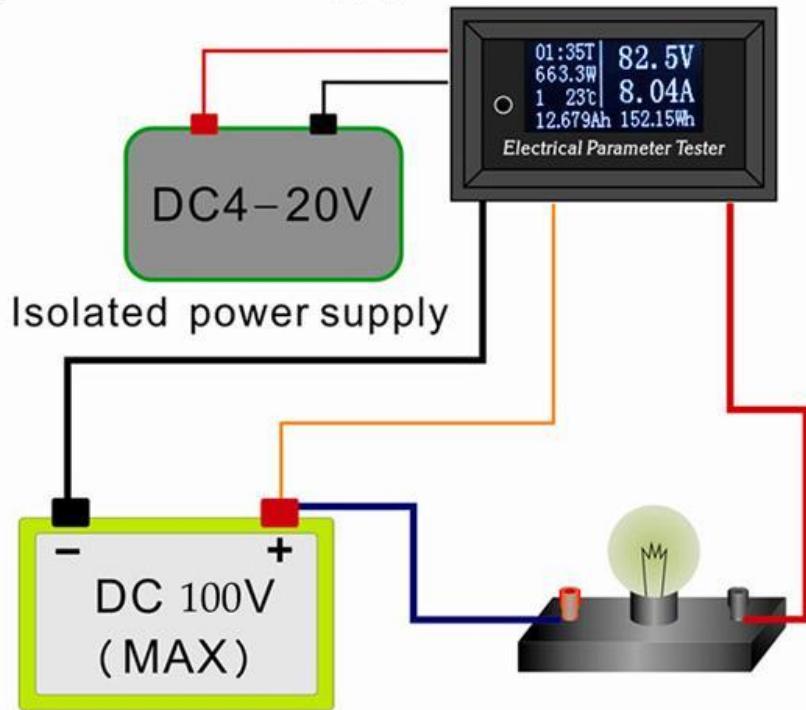

The two power supplies must be isolated and don't connect any load. The highest voltage of isolated power supply is 20V.

Display Interface Instruction



- ① Run time
- ② Power display
- ③ Data set
- ④ Temperature display
- ⑤ Capacity display
- ⑥ Voltage display
- ⑦ Current display
- ⑧ Energy display

Technical Parameter

型号 Model	33V3A	33V10A	100V10A			
电压测量范围 Voltage measurement range	DC00.00~33.00V	DC00.00~33.00V	DC00.0~99.9V			
电流测量范围 Current measurement range	0.000~3.000A	0.00~9.99A	0.00~9.99A			
功率测量范围 Power measurement range	00.00~99.00W	00.00~99.99W -330.0W	00.00~99.99W -999.9W			
能量测量范围 Energy measurement range	0~999.99Wh	0~3300.0Wh	0~9999.9Wh			
电压测量精度 Voltage measurement accuracy	±(0.3%+2个字) ±(0.3% + 2digits)	±(0.3%+2个字) ±(0.3% + 2digits)	±(0.5%+1个字) ±(0.5% + 1digit)			
电流测量精度 Current measurement accuracy	±(0.8%+3个字) ±(0.8% + 3digits)	±(1%+2个字) ±(1% + 2digits)	±(1%+2个字) ±(1% + 2digits)			
容量测量范围 Capacity measurement range	00.00~99.999Ah					
时间测量范围 (Time measurement range): 0~99h59min						
温度测量范围 (Temperature measurement range): -15°C~60°C						
产品重量 (Product weight): 19g	产品尺寸 (Product size): 48mmX29mmX22mm					

Button Function Instruction

In the display interface, click the button to switch data set; keep pressing button to clear the accumulated data to zero.

The component aging and temperature variation after long-term use may appear tiny error when it measures small current. To avoid this error, you can unplug the current wire socket and keep pressing the button to connect power supply, until the screen display "AAA", then loose button.



Please ensure proper wiring in strict accordance with the wiring diagram.