

 
9" ACTIVE CLIP-ON HEADREST DVD PLAYER



FEATURES


- DVD/CD/VCD/MP3/WMA/DivX/MPEG4 Playback System
- HDMI input
- USB 2.0 Port
- SD/MMC/MS Card Reader
- AV Input
- Earphone Socket
- IR Transmitter (2 Ch for Wireless Headphones)
- Wireless FM Modulator (8 Ch for Audio Output)
- On-Board Stereo Speakers
- Remote Control
- 9-Inch LED-TFT Monitor
- 800 x 480 Pixels Resolution
- LED Backlight
- 16:9 Screen Format
- Pole Adapters
- 12V DC Input (1V - 14V)

Appearance and functions

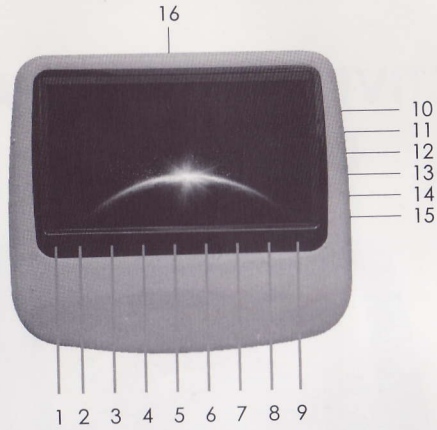


- | | |
|----------------------------------|---------------------------|
| 1. IR window | 9. Remote window |
| 2. Disc in/out | 10. USB port |
| 3. Last | 11. SD port |
| 4. Next | 12. Earphone jack |
| 5. Power switch and Video switch | 13. Video 2 input |
| 6. Volume-/Analogue- | 14. Power/AV input/Output |
| 7. Menu/Play/Pause | 15. DC 12V |
| 8. Volume+/Analogue+ | 16. Disc in/Out mouth |

 GamePad

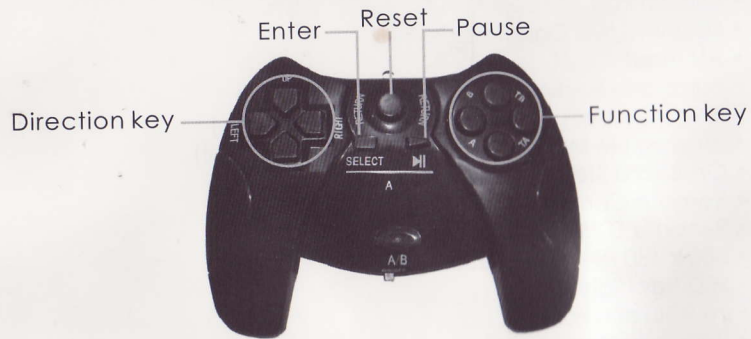

1

 Remote control

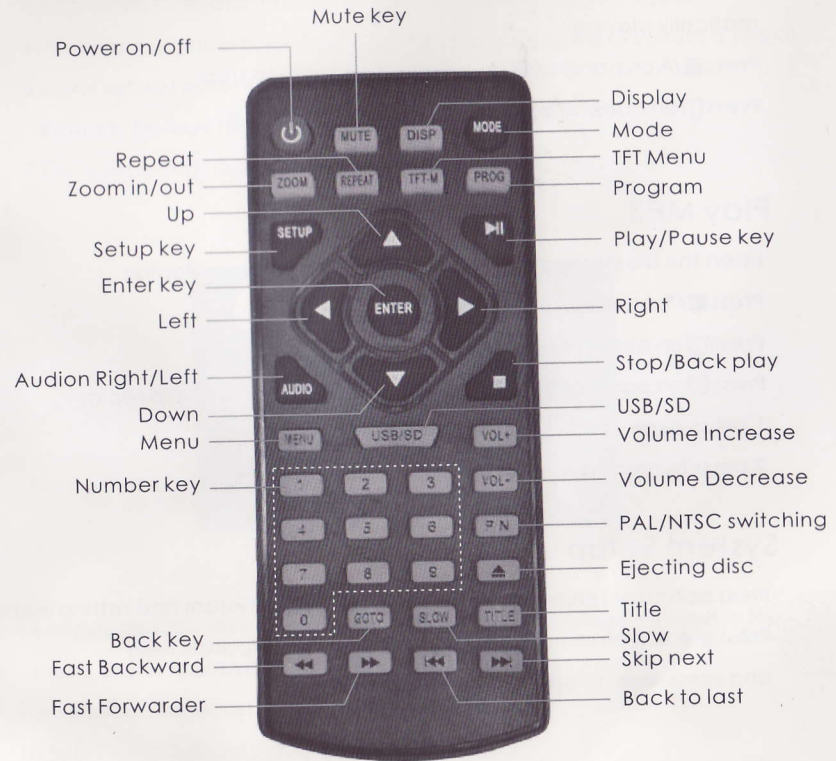

2

Operation of DVD System

Play DVD/DCD/CD

When put the disc into the DVD mouth, pls keep the lable toward back, automatically playing

Press **■/▲** on panel or **■/↶** on remote control to stop

Press **⏸** on panel or **⏸** on remote control to pause.

Play MP3

Insert the file storage media into the DVD Player to autoplay

Press **■/↶** on remote control to stop.

Press **⏸** on panel or **⏸** on remote control to pause.

Press **⏮** on panel or **⏮** on remote control when pausing to replay

 
1. press **AMS RPT** to repeat one or more songs
2. press numeric key to directly play the specified song

System Setup

Press button of setup on remote control to enter system and setting menu.

Press **↑ ↓ ← →** on remote control to choose modification item


and press **ENTER** to enter, as below picture.

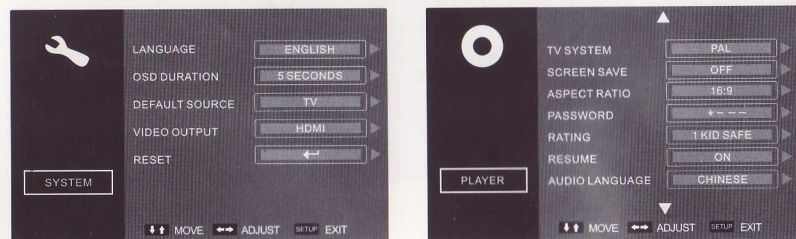

1. TV system: set DVD output image format and three formats NTSC/PAL/AUTO can be chosen.
2. Resume play: switch of resuming play after power off
3. Screen saver: switch of screen protection icon
4. Screen picture ratio: choose image output ratio as per request
5. Password: set new password and the initial password of system is [0000]
6. Level set: set parents lock as per different levels
Remark: Default rating password is [0000]
7. Default setting: restore factory's initial settings



 8. Language showed on the screen: choose the language showed in the menu as per request
9. Audio language: set disc output language
10. Subtitle language: set disc subtitle language
11. Menu language: set menu language of disc
Remark: the disc must support audio language, subtitle language and menu language.
12. Video setup: Set DVD, video screen display effect.

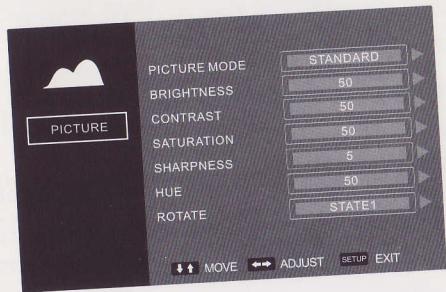


Introduction of USB/SD Function

1. Enter: press **SD** under DVD mode and switch to the mode you need in DVD, USB and SD mode.
2. Exit: press **HOME** or **SD** under USB/SD mode and then switch to DVD mode.

Menu Function Setup

In Av1 or Av2 state press **HOME** on panel or **TFT MENU** on remote control to enter the main menu. Then press **LEFT/RIGHT** on panel or **UP/DOWN** on remote control to setup and adjust

 wiring Diagram

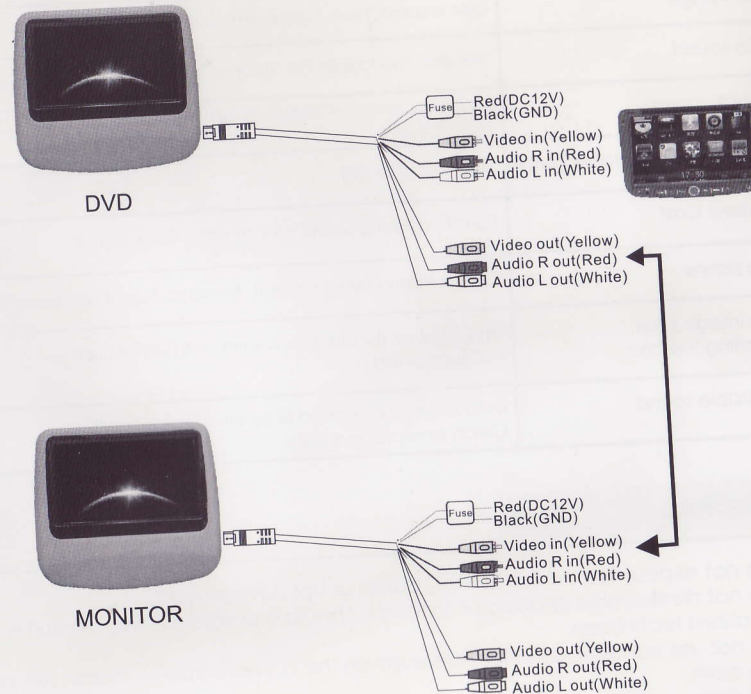

Trouble Shooting

| Problem | Comment |
|---------------------------------|--|
| No sound and image | Power is disconnected. Turn the machine on. |
| No image | Disc is scratched. Signal wire is disconnected. |
| No sound | Volume too low or the volume setup needs checking. |
| Black screen | Incorrect setup of image brightness and contrast. Low voltage. |
| Blurring and unstable image | Disc is scratched. |
| Colour Cast | Function menu setup is incorrect. Weak signal. |
| No power | Check interconnect circuit. Replace fuse if necessary. |
| No image after loading the disc | Only audio on the disc. Disc is scratched. Disc format is not supported |
| Unstable sound | DVD is dirty, scratched or seriously damaged. Clean or replace the disc |

GENERAL

1. Do not expose the device to wet, damp or hot environments.
2. Do not disassemble or attempt to repair. Should a problem arise, consult a qualified technician.
3. Do not use abrasive chemical cleaners on the LCD or cabinet. Please use a soft dry cloth.
4. The storage temperature for this device is from -20°C to 70°C and the operating temperature is from -10° to 60°C.
5. This device supports DIVX/MPEG4/DVD/DVD+R/SVCD/VCD/DVCD/CD/MP3/WMA/CD-R/RW/HDCD+-R/JPEG or CD-ROM7.
6. In the interests of safety, please do not operate this device within view of the driver.
7. Power supply: DC12V (voltage range: 10V - 14V), negative ground.

NOTE:

When in use, the LED panel may contain a small number of bright spots on the screen. This is a normal phenomenon in active matrix display technology and does not mean the product is defective.