

# INT-GSM TOUCH RFID ALRM KIT100

## 1. LCD screen ( Resolution: 128x64);

Default with English and Chinese display (other languages also possible if required).

## 2. Status LED:

**POWER:** power and working status indicator.

-flashing once per second means the external power supply is disconnected and the panel is run by backup battery;

-keeps on without flash means the external power supply is normal.

**SIGNAL:** wireless signal indicator.

**ALARM:** -flashing quickly when the system is sending alarm SMS or making call;

-comfort LED flashing (flash very slowly like breath): delay alarming.

## 3. Touch keypad: this keypad is Resistive Touch Panel which requires press with certain strength. But please do not push it heavily.



: when pressed; the system will enter AWAY ARM status.

If user set delay arm time, it will enter ARM status after the preset time.



: when pressed; the system will enter HOME ARM status.



: used to make call. Enter the number you want to call, and then keep pressing this button. Pressing it during the phone call will hang up the call.



: short press it, it will clear the input content or back to last operation.



: keep pressing it without loosing, the panel will make SOS alarm.



: confirm.

## 4. RFID card reader: when the RFID card is put near this area, there will be blue light flashing. Users can use card to arm or disarm the system.

**Arm:** swipe the card over this area and take it away when you hear one beep sound and the voice "away arm".

**Disarm:** swipe the card over this area and do not take it away for 3 seconds until you hear "disarm".