



32-Zone Wireless Transceiver Security Systems

MG5000 • MG5050

Version 4.7



4 to 32-Zone Expandable Security Systems

SP5500 • SP6000 • SP7000

Version 4.7

SP4000 • SP65

Version 4.8

Programming Guide



Warranty

For complete warranty information on this product please refer to the Limited Warranty Statement found on our Web site: www.paradox.com. Your use of this Paradox product signifies your acceptance of all warranty terms and conditions.

Limitations of Alarm Systems

It must be understood that while your Paradox alarm system is highly advanced and secure, it does not offer any guaranteed protection against burglary, fire or other emergency (fire and emergency options are only available on certain Paradox models). This is due to a number of reasons, including but not limited to inadequate or improper installation/positioning, sensor limitations, battery performance, wireless signal interruption, inadequate maintenance or the potential for the system or telephone lines to be compromised or circumvented. As a result, Paradox does not represent that the alarm system will prevent personal injury or property damage, or in all cases provide adequate warning or protection.

Your security system should therefore be considered as one of many tools available to reduce risk and/or damage of burglary, fire or other emergencies, such other tools include but are not limited to insurance coverage, fire prevention and extinguish devices, and sprinkler systems.

We also strongly recommend that you regularly maintain your security systems and stay aware of new and improved Paradox products and developments.

TBR-21: In order to comply with TBR-21, standard force dialing must be enabled.

UL And ULC Warnings

This equipment has the capability of being programmed with features not verified for use in UL installations. To stay within UL and ULC standards, the installer should use the following guidelines when configuring the system:

- All components of the system should be UL listed for the intended application.
- If used for fire detection, the installer should refer to NFPA Standards #72, Chapter 2. In addition, once installation is complete, the local fire authority must be notified of the installation.
- **WARNING: This equipment must be installed and maintained by qualified service personnel only**
- This equipment must be verified by a qualified technician once every three years.
- All keypads must use an anti-tamper switch.
- Do not bypass fire zones.
- Maximum allowed entry delay is 45 seconds.
- Maximum allowed exit delay is 60 seconds.
- Minimum 4 minutes for bell cut-off time.
- The following features do not comply with UL requirements: Bypass Recall and Auto Trouble Shutdown.
- Do not connect the primary indicating device to a relay. The installer must use the bell output.
- To comply with UL985, the auxiliary power output should not exceed 200mA.
- Do not connect the zone ground terminal with UL Listed products.
- The metallic enclosure must be grounded to the cold water pipe.
- All outputs are Class 2 or power-limited, except for the battery terminal. The Class 2 and power-limited fire alarm circuits shall be installed using CL3, CL3R, CL3P, or substitute cable permitted by the National Electrical Code, ANSI/NFPA 70.
- EOL resistor part #2011002000
- **For UL Installations:** Universal UB1640W 16.5VAC min **40VA**
- All outputs are rated from 11.3 Vdc to 12.7 Vdc
- 12 Vdc 4 Ah rechargeable acid/lead or gel cell backup battery (YUASA model #NP7-12 recommended) for residential use. Use a 7 Ah battery to comply with fire requirements.
- Wheelock 46T-12 siren


Things You Need to Know

About this Programming Guide

Use this programming guide to record programmed settings for your Magellan or Spectra SP control panel. This programming guide should be used along with the Magellan and Spectra SP Reference & Installation Manual (available online), whenever installing or programming your Magellan or Spectra SP system.

Conventions

The following typographical conventions are used throughout this guide:

Default Settings: Values which appear in bold typeface signify the default value: e.g., Access code length: <input type="checkbox"/> 6 digits <input checked="" type="checkbox"/> 4 digits (4 digits is the default value)	 : Installer Quick Menu (indicates that information on the topic can also be found in the Installer Quick Menu on page 7)
Section numbers and keypad keys also appear in bold typeface, enclosed by brackets: e.g., Section [706] must be enabled...	WARNING: Important information
Throughout this guide, Magellan (MG) and Spectra (SP) will be referred to as MG/SP	NOTE: Suggestion or reminder

Installer Code

The default installer code is **0000** or **000000**. This code allows you to enter programming mode, where you can program all features, options, and commands of the control panel, except for user codes. To change this code, see *System Codes* on page 29.

Maintenance Code

Similar to the installer code, the maintenance code allows you to enter programming mode and program all sections, except for user codes and communication settings (sections **[395]**, **[397]**, **[398]**, **[815]**, **[816]**, **[817]**, **[910]**, **[911]**, **[970]**, and **[975]**) – these sections can only be accessed using the installer code. Since there is no default code, see *System Codes* on page 29 to set a default.

System Master Code

The default system master code is **1234** or **123456**. The system master code allows you to utilize any arming method, as well as program user codes. To change the default code, see *System Codes* on page 29.

Panel Reset

Performing a panel reset will reset all panel settings to their preset, default values.

SP4000 / SP65 panels

To perform a panel reset for a SP4000 or SP65 control panel, proceed as follows:

1. Verify that the installer lock is disabled.
2. Remove the battery and AC power from the control panel.
3. Remove all connected wires and devices from the PG1 and zone 1 terminals.
4. Using a wire, short the PG1 and zone 1 terminals.
5. Reconnect the AC and battery power to the panel. Once connected, the following will occur: 1) **STATUS** LED flashes; 2) **STATUS** LED remains illuminated, indicating a reset is in progress; 3) **STATUS** LED flashes, indicating the reset is complete.
6. Remove the jumper wire.

All other MG/SP panels

To perform a panel reset for all other MG/SP panels:

1. Press and hold the panel's **RESET** button until the **STATUS** LED flashes (5 seconds).
2. Release the **RESET** button, and then push it once more, within two seconds.

To reset the panel to its default settings using section programming, see section **[950]** in *Usability Sections*, on page 51.

Entering Programming Mode

To enter programming mode, proceed as follows:

1. Press **ENTER**.
2. Enter your installer or maintenance code. Upon entering your code, the **ARM** and **STAY** LEDs will flash. To modify codes, see *System Codes* on page 29.
3. Enter the three-digit section you wish to program. The **ARM** and **STAY** LEDs remain illuminated.
4. Enter required data.

WARNING: To enter programming mode, all zones must be disarmed and StayD mode deactivated. To deactivate StayD, press OFF, enter your master or user code, and then press OFF.

Data Entry and Display

To access the data display mode, access the desired section and press **ENTER** before entering any data. Depending on the keypad(s) configured to your system, specific LEDs or icons will flash, thus indicating that you are in data display mode. Each time **ENTER** is pressed, the keypad will display the next digit in the current section, and will continue to do so through all the remaining sections, one digit at a time, without changing the programmed values; this is not available for sections using the *multiple feature select method*. Press **CLEAR** at any time, to exit data display mode.

There are two methods that can be used to enter data when in programming mode: *single digit data entry* and *feature select programming*.

Single Digit Data Entry Method

After entering programming mode, some sections will require you to enter decimal values from 000 to 255. Other sections will require that you enter hexadecimal values from 0 to F. The required data will be clearly indicated in this guide. When entering the final digit in a section, the panel will automatically save and advance to the next section. See *Decimal and Hexadecimal Programming* for details on the various keys, and their equivalent decimal and hexadecimal values.

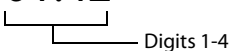
Feature Select Programming Method

After entering certain sections, eight options will be displayed. In these instances, each option (from 1 to 8) represent a specific feature. To turn enable the option, press the key corresponding to the desired option. Press the key again to remove the digit, thereby, disabling the option. Press **SLEEP** to disable all eight options. When the options are set, press **ENTER** to save your settings and advance to the next section.

Viewing Version Numbers

Table 1: Viewing panel and keypad version numbers

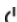
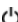
Step	Action	Details	When Viewing Keypad Version
1	Enter viewing mode: <ul style="list-style-type: none"> For panel version, enter section [980] For keypad version, enter installer programming, then press and hold ARM 	The first digit is displayed (usually 0)	Digit 1: ARM is illuminated
2	Press ENTER	The second digit is displayed	Digit 2: SLEEP is illuminated
3	Press ENTER	The third digit is displayed	Digit 3: STAY is illuminated
4	Press ENTER	The fourth digit is displayed	Digit 4: OFF is illuminated

Example: Version **01.42**

 Digits 1-4

NOTE: For keypads K10V/H and K636, the keypad version numbers cannot be viewed.

Decimal and Hexadecimal Programming

Table 2: Decimal and hexadecimal values for 10 and 32-Zone LED keypads

Value or Action	Key	Result	
		32-Zone LED	10-Zone LED
Value 0/replace current digit with 0	SLEEP	Erase digit and remain in section	Erase digit and remain in section
Values 1 to 9	1 to 9	Zone 1 to 9	Keys 1 to 9
A (hex only)	0	Zone 10	Key 0 (10)
B (hex only)	OFF	Zone 11	OFF
C (hex only)	BYP	Zone 12	BYP
D (hex only)	MEM	Zone 13	MEM
E (hex only)	TBL	Zone 14	TBL
F (hex only)		Zone 15	
Exit without saving	CLEAR	Arm and Stay LEDs flash	Arm and Stay LEDs flash
Save data (hex only)	ENTER	Advances to next section	Advances to next section

Contents

Installer Quick Menu	7	Wireless Repeater Programming (RPT1)	30
Zones	7	Wireless Repeater Assignment	30
Delays	7	Wireless Repeater Signal Strength	31
Time and Date	7	Wireless Repeater Options	31
Walk Test Mode	7	Wireless Repeater Labels	32
Installer and Maintenance Codes	7	Wireless Keypad Programming	32
WinLoad/BabyWare	7	Automatic Wireless Keypad Assignment	32
Monitoring Phone Number	7	Compatibility Check (K37 only)	32
Communicator	8	Standard Wireless Keypad Assignment	32
Cancel Communication	8	Wireless Keypad, Repeater, and Siren Options	32
Keypad Programming	8	Wireless Keypad Signal Strength	33
PGMs	8	Wireless Keypad Labels	33
System Planning	9	Remote Control Programming	33
Bus Module Planning	9	Remote Control Button Assignment	33
Wireless Keypad Planning	10	User Assignment for Remote Controls	35
Wireless Siren Planning	10	Wireless Siren Programming	35
Programmable Output (PGM) Planning	11	Wireless Siren Assignment	35
Wireless Repeater Planning	11	Wireless Siren Signal Strength	35
Zone Planning	11	Wireless Siren Labels	35
Zone Recognition	13	Cancelling the Tamper Supervision for Wireless Sirens	36
MG Series	13	Description of Sections [700] to [704]	36
SP Series	14	Zone Options	37
Zone Definitions	16	ATZ Options	37
Custom Zone Definitions	18	General Zone Options	37
Zone Timers	18	System Timers	37
MG Series	18	Keypad Lockout	38
SP Series	18	Programming the Daylight Savings Feature	38
Wireless Zone Assignment	19	Country Codes	38
Wireless Transmitter Signal Strength	19	Customized Daylight Savings Features	38
Zone Report Codes and Labels	19	Partition Programming	39
Zone Report Codes	19	Partition Options	39
Zone Labels	20	Partition Timers	39
Programmable Output Programming	20	Partition Labels	39
Programmable Output Recognition	20	SMS and Bus Module Programming	39
Description of MG/SP Events	21	SMS Site Name	39
PGM Activation/Deactivation Events	27	Bus Module Labels	40
PGM Options	27	Communication Programming	40
PGM Delays	28	Dialer Options	40
PGM Serial Numbers	28	Event Call Direction Options	41
Wireless PGM Signal Strength	28	GSM Options	41
PGM Labels	28	IP/GPRS Options	42
User Programming	29	Report Codes and Partition Accounts	42
System Codes	29	Landline and GSM Communication	42
User Code Options	29	Timers	42
User Report Codes	30	VDMP3 Options	43
User Labels	30	Test Report and Report Delays	43
		GSM Settings	43

System and Communication Report Codes 43

Entering Report Codes43
Special Arming and Disarming Report Codes43
Special Alarm Report Codes43
System Trouble Report Codes44
System Trouble Restore Codes44
System Special Report Codes44
Installer Function Keys44
Contact ID Report Codes45
Automatic Report Codes47
Communication Report Codes49
Communication Restore Report Codes49

Software Options and Additional Timers 49

Additional Communication Timers49
WinLoad/BabyWare Options50

IP and Software Configurations 50

IP Account Numbers50
Software and PCS Connection Settings50
IP Receiver Configurations50

Usability Sections 51

Description of Sections [950], [955], and [960]51
Description of Section [965]51
Description of Sections [966] and [967]52
Description of Sections [970], [975], and [980]52

Label Programming with LCD Keypads 52

Function keys52
Catalogues of Special Characters53
Keypad Letter Assignments54

Trouble Display 54

Product Compatibility Chart 56

Notes

List of Worksheets

Worksheet 1: Planning Bus Modules 9
Worksheet 2: Planning Wireless Keypads 10
Worksheet 3: Planning Wireless Sirens 10
Worksheet 4: Planning Programmable Outputs 11
Worksheet 5: Planning Wireless Repeaters 11
Worksheet 6: Planning Zones..... 11
Worksheet 7: Zone Definitions..... 17
Worksheet 8: Custom Zone Definitions..... 18
Worksheet 9: Zone Timers for the MG Series..... 18
Worksheet 10: Zone Timers for the SP Series 18
Worksheet 11: Wireless Zones..... 19
Worksheet 12: Zone Report Codes..... 19
Worksheet 13: Zone Labels 20
Worksheet 14: PGM Activation/Deactivation Events..... 27
Worksheet 15: PGM Delays..... 28
Worksheet 16: PGM Serial Numbers 28
Worksheet 17: PGM Labels 28
Worksheet 18: User System Codes 29

Worksheet 19: User Code Options..... 29
Worksheet 20: User Report Codes 30
Worksheet 21: User Labels..... 30
Worksheet 22: Wireless Repeater Assignment..... 30
Worksheet 23: Wireless Repeater Labels..... 32
Worksheet 24: Wireless Keypad Assignment..... 32
Worksheet 25: Wireless Keypad Labels..... 33
Worksheet 26: Programming Remote Controls..... 34
Worksheet 27: Wireless Siren Assignment..... 35
Worksheet 28: Wireless Siren Labels..... 35
Worksheet 29: System Timers 37
Worksheet 30: Keypad Lockout 38
Worksheet 31: Daylight Savings Time 38
Worksheet 32: Partition Timers..... 39
Worksheet 33: Partition Labels 39
Worksheet 34: SMS Site Name 39
Worksheet 35: Bus Module Labels 40
Worksheet 36: Report Codes and Partition Accounts..... 42
Worksheet 37: Landline and GSM Communication Settings..... 42
Worksheet 38: Communication Timers 42
Worksheet 39: VDMP3 Maximum Attempts 43
Worksheet 40: Test Report and Report Delays..... 43
Worksheet 41: GSM Settings (PCS series)..... 43
Worksheet 42: Special Arming and Disarming Report Codes 43
Worksheet 43: Special Alarm Report Codes 43
Worksheet 44: Special Trouble Report Codes 44
Worksheet 45: System Trouble Restore Codes..... 44
Worksheet 46: System Special Report Codes 44
Worksheet 47: Communication Report Codes..... 49
Worksheet 48: Communication Restore Report Codes..... 49
Worksheet 49: Additional Communication Timers 49
Worksheet 50: WinLoad/BabyWare Options..... 50
Worksheet 51: IP Account Numbers 50
Worksheet 52: Software and PCS Connection Settings 50
Worksheet 53: IP Receiver 1 Configuration 51
Worksheet 54: IP Receiver 2 Configuration 51
Worksheet 55: IP Receiver Backup Configuration..... 51



Installer Quick Menu

Zones

Step	Action	Details
1	+ installer code	= flash; programmed zones are lit (buttons or LED, depending on keypad); maintenance code may also be used
2	Zone number	Two digits: 01 to 32
3	Enroll or erase zone	Wireless zone: open/close cover or press LEARN/TAMPER switch; hardwired zone: press ENTER ; to erase a programmed zone, press and hold SLEEP for three seconds
4	Zone type	See <i>Zone Definitions</i> on page 16, for the zone type
5	Assign partition (1 and/or 2 + ENTER)	If applicable, assign the zone to one or both partitions, and then press ENTER ; by default, all zones are assigned to partition 1

NOTE: If applicable, partition 2 status LEDs display signal strength of selected wireless zone (4 LEDs = best signal; 1 LED = weak signal; no LEDs = hardwired panel/keypad zone).

Delays

Step	Action	Details
1	+ installer code	= flash; maintenance code may also be used
2		-
3	1 = entry delay 1	Default: 045 sec.
	2 = entry delay 2	Default: 045 sec.
	3 = exit delay	Default: 060 sec.
	4 = bell cut-off	Default: 004 min.
4	000 to 255	Entry/exit delay = seconds; bell cut-off = minutes

Time and Date

Step	Action	Details
1	+ installer code	= flash; maintenance code may also be used
2	+ 5	-
3	Time (HH:MM)	If HH = 13 or more, go to step 5
4	Time format	1 = 24 hr. format, 2 = AM, 3 = PM
5	Date (YYYY/MM/DD)	Enter the year/month/day

NOTE: For SP4000 and SP65 systems, the time format must be entered in 24 hr. format, therefore, omit step 4.

Walk Test Mode

Step	Action	Details
1	+ installer code	= flash; maintenance code may also be used
2		-
3	6	Activates or deactivates walk test mode

Installer and Maintenance Codes

Step	Action	Details
1	+ installer code	= flash
2		-
3	<ul style="list-style-type: none"> • 7 for installer code • 8 for maintenance code 	-
4	Code	Enter a four or six-digit code
5	Confirm code	Re-enter the four or six-digit code, to confirm

NOTE: To erase a code, press and hold **SLEEP** for three seconds.

WinLoad/BabyWare

Step	Action	Details
1	+ installer code	= flash
2		-
3	9	-
4	Phone # + ENTER	Enter PC phone number (up to 32 digits), and then press ENTER
5	Panel ID	Enter four-digit panel ID
6	PC password	Enter four-digit PC password

NOTE: To erase the WinLoad/BabyWare phone number, panel ID, and PC password, press and hold **SLEEP** for three seconds.

Monitoring Phone Number

Step	Action	Details
1	+ installer code	= flash
2		-
3	1	-
4	Phone # + ENTER	Enter monitoring station phone number (up to 32 digits), and then press ENTER
5	Partition 1 account #	-
6	<ul style="list-style-type: none"> • 1 for CID • 2 for SIA 	SIA is not supported with GPRS/IP reporting
7	Partition 2 account #	-

NOTE: To erase monitoring phone number, reporting format, and account numbers, press and hold **SLEEP** for three seconds.

Communicator

Step	Action	Details
1	+ installer code	= flash; maintenance code may also be used
2		-
3	2 = backup phone #	-
	3 = personal phone #1	
	4 = personal phone #2	
	5 = personal phone #3	
	6 = personal phone #4	
	7 = personal phone #5	
8 = pager #		
4	Phone # + ENTER	Enter phone number (up to 32 digits), and then press ENTER to proceed to the next phone number, or go to step 5 if option 8 was selected
5	Message + ENTER	Enter pager message, and then press ENTER ; this step applies only to the pager number

NOTE: To erase a phone number pager message, press and hold **SLEEP** for three seconds.

Cancel Communication

Step	Action	Details
1	+ installer code	= flash; maintenance code may also be used
2		-
3	9	Cancel all communication with WinLoad, BabyWare, and GSM module

Keypad Programming

Assigning Keypad Zone Numbers

Step	Action	Details
1	ENTER + installer code	ARM + STAY = flash; maintenance code may also be used
2	Press and hold for three seconds	ARM + STAY = ON
3	Zone number + ENTER	K35, K32, K32LCD, K32LX = two digits: 01 to 32 ; K636, K10V/H = one digit: 1 to 0 (10)

NOTE: To erase a keypad zone number, press **CLEAR**, and then **ENTER**.

Entry Point Zone Assignment (StayD)

Step	Action	Details
1	ENTER + installer code	ARM + STAY = flash
2	Press and hold OFF for three seconds	ARM + STAY = ON
3	Zone number	K35, K32RF, K37, K32LCD, K32LX = two digits: 01 to 32 ; K636, K10V/H = one digit: 1 to 0 (10; maximum ten zones); the first zone programmed will be the designated entry point and will flash; up to three more path zones can be added – these zones will light up and remain lit
4	ENTER	Press ENTER to save and exit

Keypad Input/Output Configuration (K636 V2.0 and higher)

Step	Action	Details
1	ENTER + installer code	ARM + STAY = flash
2	Press and hold ENTER for three seconds	ARM + STAY = ON
3	Option 1	ON = output switches to ground following system arming (blue wire, maximum 150 mA) OFF = input (keypad zone input)
4	Option 2	ON = output N.C. OFF = output N.O.

NOTE: When configuring as an output, clear the assigned keypad zone first.

PGMs

Step	Action	Details
1	+ installer code	= flash; maintenance code may also be used
2		-
3	PGM number	Two digits: 01 to 16
4	Enroll or erase PGM	Wireless PGM = open/close cover; hardwired PGM = press ENTER
5	PGM type	1 = Follow button or •
		2 = Follow button or
		3 = Follow zone
		4 = Follow alarm
		5 = Follow bell
		6 = Follow arm
		7 = Follow Stay arm
		8 = Follow Sleep arm
6	If PGM type is 1, 2, 3, or 4 , enter activation delay	1 = Follow
		2 = 1 second
		3 = 5 seconds
		4 = 15 seconds
		5 = 30 seconds
		6 = 1 minute
		7 = 5 minutes
		8 = 15 minutes
		9 = 30 minutes
6	If PGM type is 5 , proceed to the next available PGM	-
	If PGM type is 6, 7, or 8 , enter 1 and/or 2 + ENTER	If system is partitioned, select partition(s), and then press ENTER to proceed to the next available PGM
7	If PGM type is 1 or 2 , enter two-digit remote control #	01 to 32 (00 = all remote controls); the control panel proceeds to the next available PGM
	If PGM type is 3 , enter two-digit zone #	01 to 32 (00 = all zones); the control panel proceeds to the next available PGM
	If PGM type is 4 , enter 1 and/or 2 + ENTER	If system is partitioned, select partition(s), and then press ENTER to proceed to the next available PGM

NOTE: To erase a PGM, press and hold **SLEEP** for three seconds.

System Planning

Bus Module Planning

Worksheet 1: Planning Bus Modules

<i>Serial # Sticker</i>	<i>Description</i>	<i>Path Zone (Entry Point)</i>	<i>Path Zone</i>	<i>Path Zone</i>	<i>Path Zone</i>
Bus Module 1					
Bus Module 2					
Bus Module 3					
Bus Module 4					
Bus Module 5					
Bus Module 6					
Bus Module 7					
Bus Module 8					
Bus Module 9					
Bus Module 10					
Bus Module 11					
Bus Module 12					
Bus Module 13					
Bus Module 14					
Bus Module 15					

NOTE: Paths are only applicable when StayD is enabled.

Wireless Keypad Planning

Worksheet 2: Planning Wireless Keypads

Serial # Sticker	Description	Path Zone (Entry Point)	Path Zone	Path Zone	Path Zone
Wireless Keypad 1					
Wireless Keypad 2					
Wireless Keypad 3					
Wireless Keypad 4					
Wireless Keypad 5					
Wireless Keypad 6					
Wireless Keypad 7					
Wireless Keypad 8					

NOTE: When deleting a wireless keypad (K32RF/K37) from the system, the corresponding StayD path zones will also be deleted.

Wireless Siren Planning

Worksheet 3: Planning Wireless Sirens

Serial # Sticker	Description
Siren 1	
Siren 2	

Serial # Sticker	Description
Siren 3	
Siren 4	

Programmable Output (PGM) Planning

Worksheet 4: Planning Programmable Outputs

Serial # Sticker	Description
PGM 1	
PGM 2	
PGM 3	
PGM 4	
PGM 5	
PGM 6	
PGM 7	
PGM 8	

Serial # Sticker	Description
PGM 9	
PGM 10	
PGM 11	
PGM 12	
PGM 13	
PGM 14	
PGM 15	
PGM 16	

Wireless Repeater Planning

Worksheet 5: Planning Wireless Repeaters

Serial # Sticker	Description
Repeater 1	

Serial # Sticker	Description
Repeater 2	

Zone Planning

Worksheet 6: Planning Zones

Serial # Sticker	Zone #	Zone Description	Arming Method		
			Stay	Sleep	Full
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Serial # Sticker	Zone #	Zone Description	Arming Method		
			Stay	Sleep	Full
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Worksheet 6: Planning Zones (Continued)

Serial # Sticker	Zone #	Zone Description	Arming Method			Serial # Sticker	Zone #	Zone Description	Arming Method		
			Stay	Sleep	Full				Stay	Sleep	Full
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Zone			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Zone Recognition

NOTE: For keypad zone programming, see *Keypad Programming* on page 8.

MG Series

When expanding zones via ZX8, up to three ZX8 modules can be added to the system, and they are identified by the ZX8 three-position jumpers: +1, +9, and +17. Table 3 displays zone recognition information for MG control panels.

Table 3: Zone recognition information for the MG series

MG5000 (without ATZ)			MG5000 (with ATZ)			MG5050 (without ATZ)			MG5050 (with ATZ)		
Type	Zone	Description	Type	Zone	Description	Type	Zone	Description	Type	Zone	Description
Panel	1	Panel input 1	Panel	1	Panel input 1A	Panel	1	Panel input 1	Panel	1	Panel input 1A
	2	Panel input 2		2	Panel input 2A		2	Panel input 2		2	Panel input 2A
ZX8 Jumper Panel + 1	3	Input 1		3	Panel input 1B		3	Panel input 3		3	Panel input 3A
	4	Input 2		4	Panel input 2B		4	Panel input 4		4	Panel input 4A
	5	Input 3	ZX8 Jumper Panel + 1	5	Input 1		5	Panel input 5		5	Panel input 5A
	6	Input 4		6	Input 2	6	Input 1	6		Panel input 1B	
	7	Input 5		7	Input 3	7	Input 2	7		Panel input 2B	
	8	Input 6		8	Input 4	8	Input 3	8		Panel input 3B	
	9	Input 7		9	Input 5	9	Input 4	9		Panel input 4B	
	10	Input 8		10	Input 6	10	Input 5	10		Panel input 5B	
ZX8 Jumper Panel + 9	11	Input 1		11	Input 7	11	Input 6	ZX8 Jumper Panel + 1	11	Input 1	
	12	Input 2		12	Input 8	12	Input 7		12	Input 2	
	13	Input 3	ZX8 Jumper Panel + 9	13	Input 1	13	Input 8		13	Input 3	
	14	Input 4		14	Input 2	14	Input 1		14	Input 4	
	15	Input 5		15	Input 3	15	Input 2		15	Input 5	
	16	Input 6		16	Input 4	16	Input 3		16	Input 6	
	17	Input 7		17	Input 5	17	Input 4		17	Input 7	
	18	Input 8		18	Input 6	18	Input 5		18	Input 8	
ZX8 Jumper Panel + 17	19	Input 1		19	Input 7	ZX8 Jumper Panel + 9	19	Input 6	ZX8 Jumper Panel + 1	19	Input 1
	20	Input 2		20	Input 8		20	Input 7		20	Input 2
	21	Input 3	ZX8 Jumper Panel + 17	21	Input 1		21	Input 8		21	Input 3
	22	Input 4		22	Input 2		22	Input 1		22	Input 4
	23	Input 5		23	Input 3		23	Input 2		23	Input 5
	24	Input 6		24	Input 4		24	Input 3		24	Input 6
	25	Input 7		25	Input 5		25	Input 4		25	Input 7
	26	Input 8		26	Input 6		26	Input 5		26	Input 8
-	27	-		27	Input 7	ZX8 Jumper Panel + 17	27	Input 6	ZX8 Jumper Panel + 17	27	Input 1
	28	-		28	Input 8		28	Input 7		28	Input 2
	29	-	-	29	-		29	Input 8		29	Input 3
	30	-		30	-		30	-		30	Input 4
	31	-		31	-		31	-		31	Input 5
	32	-		32	-		32	-		32	Input 6

NOTE: If a device is assigned to a zone which is already programmed, a wireless zone will overwrite a keypad/hardwire zone and a keypad zone will overwrite a hardwire zone.

SP Series

When expanding zones via ZX8, up to three ZX8 modules can be added to the system, and they are identified by the ZX8 three-position jumpers: +1, +9, and +17. Table 4 displays zone recognition information for SP control panels.

Table 4: Zone recognition information for the SP series

SP4000 (without ATZ)			SP4000 (with ATZ)			SP5000 (without ATZ)			SP5000 (with ATZ)			SP6000 (without ATZ)			SP6000 (with ATZ)							
Type	Zone	Description	Type	Zone	Description	Type	Zone	Description	Type	Zone	Description	Type	Zone	Description	Type	Zone	Description					
Panel	1	Panel input 1	Panel	1	Panel input 1A	Panel	1	Panel input 1	Panel	1	Panel input 1A	Panel	1	Panel input 1	Panel	1	Panel input 1A					
	2	Panel input 2		2	Panel input 2A		2	Panel input 2		2	Panel input 2A		2	Panel input 2		2	Panel input 2A					
	3	Panel input 3		3	Panel input 3A		3	Panel input 3		3	Panel input 3A		3	Panel input 3		3	Panel input 3A					
	4	Panel input 4		4	Panel input 4A		4	Panel input 4		4	Panel input 4A		4	Panel input 4		4	Panel input 4A					
ZX8 Jumper Panel + 1	5	Input 1	ZX8 Jumper Panel + 1	5	Panel input 1B	ZX8 Jumper Panel + 1	5	Panel input 5	ZX8 Jumper Panel + 1	5	Panel input 5A	ZX8 Jumper Panel + 1	5	Panel input 5	Panel	5	Panel input 5A					
	6	Input 2		6	Panel input 2B		6	Input 1		6	Panel input 1B		6	Panel input 6		6	Panel input 6A					
	7	Input 3		7	Panel input 3B		7	Input 2		7	Panel input 2B		7	Panel input 7		7	Panel input 7A					
	8	Input 4		8	Panel input 4B		8	Input 3		8	Panel input 3B		8	Panel input 8		8	Panel input 8A					
	9	Input 5		ZX8 Jumper Panel + 1	9		Input 1	ZX8 Jumper Panel + 1		9	Input 4		ZX8 Jumper Panel + 1	9		Panel input 4B	ZX8 Jumper Panel + 1	9	Input 1	Panel	9	Panel input 1B
	10	Input 6			10		Input 2			10	Input 5			10		Panel input 5B		10	Input 2		10	Panel input 2B
	11	Input 7			11		Input 3			11	Input 6			11		Input 1		11	Input 3		11	Panel input 3B
	12	Input 8			12		Input 4			12	Input 7			12		Input 2		12	Input 4		12	Panel input 4B
ZX8 Jumper Panel + 9	13	Input 1	ZX8 Jumper Panel + 9	13	Input 5	ZX8 Jumper Panel + 9	13	Input 8	ZX8 Jumper Panel + 9	13	Input 3	ZX8 Jumper Panel + 9	13	Input 5	Panel	13	Panel input 5B					
	14	Input 2		14	Input 6		14	Input 1		14	Input 4		14	Input 6		14	Panel input 6B					
	15	Input 3		15	Input 7		15	Input 2		15	Input 5		15	Input 7		15	Panel input 7B					
	16	Input 4		16	Input 8		16	Input 3		16	Input 6		16	Input 8		16	Panel input 8B					
	17	Input 5		ZX8 Jumper Panel + 9	17		Input 1	ZX8 Jumper Panel + 9		17	Input 4		ZX8 Jumper Panel + 9	17		Input 7	ZX8 Jumper Panel + 9	17	Input 1	ZX8 Jumper Panel + 1	17	Input 1
	18	Input 6			18		Input 2			18	Input 5			18		Input 8		18	Input 2		18	Input 2
	19	Input 7			19		Input 3			19	Input 6			19		Input 1		19	Input 3		19	Input 3
	20	Input 8			20		Input 4			20	Input 7			20		Input 2		20	Input 4		20	Input 4
ZX8 Jumper Panel + 17	21	Input 1	ZX8 Jumper Panel + 17	21	Input 5	ZX8 Jumper Panel + 17	21	Input 8	ZX8 Jumper Panel + 17	21	Input 3	ZX8 Jumper Panel + 17	21	Input 5	ZX8 Jumper Panel + 1	21	Input 5					
	22	Input 2		22	Input 6		22	Input 1		22	Input 4		22	Input 6		22	Input 6					
	23	Input 3		23	Input 7		23	Input 2		23	Input 5		23	Input 7		23	Input 7					
	24	Input 4		24	Input 8		24	Input 3		24	Input 6		24	Input 8		24	Input 8					
	25	Input 5		ZX8 Jumper Panel + 17	25		Input 1	ZX8 Jumper Panel + 17		25	Input 4		ZX8 Jumper Panel + 17	25		Input 7	ZX8 Jumper Panel + 17	25	Input 1	ZX8 Jumper Panel + 9	25	Input 1
	26	Input 6			26		Input 2			26	Input 5			26		Input 8		26	Input 2		26	Input 2
	27	Input 7			27		Input 3			27	Input 6			27		Input 1		27	Input 3		27	Input 3
	28	Input 8			28		Input 4			28	Input 7			28		Input 2		28	Input 4		28	Input 4
-	29	-	ZX8 Jumper Panel + 17	29	Input 5	-	29	Input 8	ZX8 Jumper Panel + 17	29	Input 3	ZX8 Jumper Panel + 17	29	Input 5	ZX8 Jumper Panel + 9	29	Input 5					
	30	-		30	Input 6		30	-		30	Input 4		30	Input 6		30	Input 6					
	31	-		31	Input 7		31	-		31	Input 5		31	Input 7		31	Input 7					
	32	-		32	Input 8		32	-		32	Input 6		32	Input 8		32	Input 8					

Table 4: Zone recognition information for the SP series (Continued)

SP65 (without ATZ)			SP65 (with ATZ)			SP7000 (without ATZ)			SP7000 (with ATZ)		
Type	Zone	Description	Type	Zone	Description	Type	Zone	Description	Type	Zone	Description
Panel	1	Panel input 1	Panel	1	Panel input 1A	Panel	1	Panel input 1	Panel	1	Panel input 1A
	2	Panel input 2		2	Panel input 2A		2	Panel input 2		2	Panel input 2A
	3	Panel input 3		3	Panel input 3A		3	Panel input 3		3	Panel input 3A
	4	Panel input 4		4	Panel input 4A		4	Panel input 4		4	Panel input 4A
	5	Panel input 5		5	Panel input 5A		5	Panel input 5		5	Panel input 5A
	6	Panel input 6		6	Panel input 6A		6	Panel input 6		6	Panel input 6A
	7	Panel input 7		7	Panel input 7A		7	Panel input 7		7	Panel input 7A
	8	Panel input 8		8	Panel input 8A		8	Panel input 8		8	Panel input 8A
	9	Panel input 9		9	Panel input 9A		9	Panel input 9		9	Panel input 9A
ZX8 Jumper Panel + 1	10	Input 1	Panel	10	Panel input 1B	Panel	10	Panel input 10	Panel	10	Panel input 10A
	11	Input 2		11	Panel input 2B		11	Panel input 11		11	Panel input 11A
	12	Input 3		12	Panel input 3B		12	Panel input 12		12	Panel input 12A
	13	Input 4		13	Panel input 4B		13	Panel input 13		13	Panel input 13A
	14	Input 5		14	Panel input 5B		14	Panel input 14		14	Panel input 14A
	15	Input 6		15	Panel input 6B		15	Panel input 15		15	Panel input 15A
	16	Input 7		16	Panel input 7B		16	Panel input 16		16	Panel input 16A
	17	Input 8		17	Panel input 8B		ZX8 Jumper Panel + 1	17		Input 1	Panel
ZX8 Jumper Panel + 9	18	Input 1	ZX8 Jumper Panel + 1	18	Panel input 9B	18		Input 2	18	Panel input 2B	
	19	Input 2		19	Input 1	19		Input 3	19	Panel input 3B	
	20	Input 3		20	Input 2	20		Input 4	20	Panel input 4B	
	21	Input 4		21	Input 3	21		Input 5	21	Panel input 5B	
	22	Input 5		22	Input 4	22		Input 6	22	Panel input 6B	
	23	Input 6		23	Input 5	23		Input 7	23	Panel input 7B	
	24	Input 7		24	Input 6	24		Input 8	24	Panel input 8B	
	25	Input 8		25	Input 7	ZX8 Jumper Panel + 9	25	Input 1	25	Panel input 9B	
ZX8 Jumper Panel + 17	26	Input 1	ZX8 Jumper Panel + 9	26	Input 8		26	Input 2	26	Panel input 10B	
	27	Input 2		27	Input 1		27	Input 3	27	Panel input 11B	
	28	Input 3		28	Input 2		28	Input 4	28	Panel input 12B	
	29	Input 4		29	Input 3		29	Input 5	29	Panel input 13B	
	30	Input 5		30	Input 4		30	Input 6	30	Panel input 14B	
	31	Input 6		31	Input 5		31	Input 7	31	Panel input 15B	
32	Input 7	32	Input 6	32	Input 8		32	Panel input 16B			

NOTE: If a device is assigned to a zone which is already programmed, a wireless zone will overwrite a keypad/hardwire zone and a keypad zone will overwrite a hardwire zone.

Zone Definitions

NOTE: If a device is assigned to a zone which is already programmed, a wireless zone will overwrite a keypad/hardwire zone and a keypad zone will overwrite a hardwire zone.

To define zones on your MG/SP control panel:

1. Press **ENTER**, and then enter your installer code (maintenance code may also be used). The **ARM** and **STAY** functions will flash.
2. Enter the three-digit zone number you wish to program (e.g., **001** to **032**). The **ARM** and **STAY** functions will remain illuminated.
3. Enter a two-digit zone definition, by referring to table 5.
4. Assign a partition, by referring to table 6. By default, all zones are assigned to partition 1.
5. Select or deselect zone options, using buttons **1** to **8** (see tables 7 and 8).
6. Press **ENTER** to save and proceed to the next zone.
7. Repeat steps 3 to 6 for all remaining zones.

Table 5: Zone definitions for MG/SP panels

Input Value	Description	Arming Type		
		Stay Arm	Sleep Arm	Fully Arm
00	Disabled (default)	-	-	-
01	Entry delay 1	Entry delay 1	Entry delay 1	Entry delay 1
02	Entry delay 2	Entry delay 2	Entry delay 2	Entry delay 2
03	Entry delay 1 (Full Arm)	Not armed	Not armed	Entry delay 1
04	Entry delay 2 (Full Arm)	Not armed	Not armed	Entry delay 2
05	Follow	Follow*	Follow*	Follow
06	Follow (sleep/full arm)	Not armed	Follow*	Follow
07	Follow (full arm)	Not armed	Not armed	Follow
08	Instant	Instant*	Instant*	Instant
09	Instant (sleep/full arm)	Not armed	Instant*	Instant
10	Instant (full arm)	Not armed	Not armed	Instant
11	Instant fire†	-	-	-
12	Delayed fire†	-	-	-
13	Instant fire silent†	-	-	-
14	Delayed fire silent†	-	-	-
15	24 hr. buzzer	-	-	-
16	24 hr. burglary	-	-	-
17	24 hr. hold-up	-	-	-
18	24 hr. gas	-	-	-
19	24 hr. heat	-	-	-
20	24 hr. water	-	-	-
21	24 hr. freeze	-	-	-
22	24 hr. panic‡	-	-	-
23	Follow no pre-alarm	-	-	-
24	Instant no pre-alarm	-	-	-
25	Keyswitch maintain**	-	-	-
26	Keyswitch momentary**	-	-	-
33	Instant no pre-alarm (stay/sleep)	Instant	Instant	Not armed
34	Instant no pre-alarm (sleep)	Not armed	Instant	Not armed
35	Entry delay 1 (stay/full)/instant	Entry delay 1	Instant	Entry delay 1
36	Entry delay 1 (full arm)/instant	Instant	Instant	Entry delay 1

* Flex-instant: zone will follow the delay at section [720] (default is 15 seconds/0 = instant zone).

** On-board, hardwire, control panel zones only.

† ZX8 inputs do not support fire zones. For two-wire smoke installations (not supported by SP4000/SP5500/SP65), these definitions apply to zone 1 input only. Section [706], option 3, must be enabled. For four-wire smoke installations, use any panel, on-board zone input.

‡ This alarm will follow the panic 1 option (section [702], option 1).

Table 6: Partition assignment for MG/SP panels

Input Value	Description
1	Assign to partition 1
2	Assign to partition 2
3	Assign to both partitions

NOTE: When using the K636 keypad, only partition 1 is available.

Table 7: Zone options for MG/SP panels

Input Value	Description	
1	Auto zone shutdown	
2	Bypassable zone	
3	RF zone supervision	
6	Intellizone	
7	Delay arm transmission	
8	Force zone	
Input Value	Zone Alarm Type	
4	5	
OFF	OFF	Audible alarm
OFF	ON	Pulsed alarm
ON	OFF	Silent alarm
ON	ON	Report only

NOTE: For additional zone options, see *Zone Options* on page 37.

Table 8: Keyswitch options for MG/SP panels

Input Value	Description
1	-
2	-
3	-
4	OFF = Disarm; ON = Disarm only if Stay/Sleep armed
5	Arm only
6	Stay arming*
7	Sleep arming*
8	-

* Select only one. If all are OFF, keyswitch will regular arm.

Table 9: Permitted zone definitions for MG/SP panels

Input Value	Description	Arming Type			
		Disarm	Stay Arm	Sleep Arm	Fully Arm
00	Zone disabled	✓	✓	✓	✓
01	Entry delay 1	-	✓	✓	✓
02	Entry delay 2	-	✓	✓	✓
03	Entry delay 1 (Full Arm)	-	-	-	✓
04	Entry delay 2 (Full Arm)	-	-	-	✓
05	Follow	-	✓	✓	✓
06	Follow (sleep/full arm)	-	-	✓	✓
07	Follow (full arm)	-	-	-	✓
08	Instant	-	✓	✓	✓
09	Instant (sleep/full arm)	-	-	✓	✓
10	Instant (full arm)	-	-	-	✓
11	Instant fire	✓	✓	✓	✓
12	Delayed fire	✓	✓	✓	✓
13	Instant fire silent	✓	✓	✓	✓
14	Delayed fire silent	✓	✓	✓	✓
15	24 hr. buzzer	✓	✓	✓	✓

Input Value	Description	Arming Type			
		Disarm	Stay Arm	Sleep Arm	Fully Arm
16	24 hr. burglary	✓	✓	✓	✓
17	24 hr. hold-up	✓	✓	✓	✓
18	24 hr. gas	✓	✓	✓	✓
19	24 hr. heat	✓	✓	✓	✓
20	24 hr. water	✓	✓	✓	✓
21	24 hr. freeze	✓	✓	✓	✓
22	24 hr. panic	✓	✓	✓	✓
23	Follow no pre-alarm	-	✓	✓	✓
24	Instant no pre-alarm	-	✓	✓	✓
25	Keypad maintain	✓	✓	✓	✓
26	Keypad momentary	✓	✓	✓	✓
33	Instant no pre-alarm (stay/sleep)	-	✓	✓	-
34	Instant no pre-alarm (sleep)	-	-	✓	-
35	Entry delay 1 (stay/full)/instant	-	✓	✓	✓
36	Entry delay 1 (full arm)/instant	-	✓	✓	✓

Worksheet 7: Zone Definitions

Section	Zone	Description (see tables 3 and 4)	Zone Definition	Partition	Zone Options	Section	Zone	Description (see tables 3 and 4)	Zone Definition	Partition	Zone Options
[001]	1	_____	___/___	_____	1 2 3 4 5 6 7 8	[017]	17	_____	___/___	_____	1 2 3 4 5 6 7 8
[002]	2	_____	___/___	_____	1 2 3 4 5 6 7 8	[018]	18	_____	___/___	_____	1 2 3 4 5 6 7 8
[003]	3	_____	___/___	_____	1 2 3 4 5 6 7 8	[019]	19	_____	___/___	_____	1 2 3 4 5 6 7 8
[004]	4	_____	___/___	_____	1 2 3 4 5 6 7 8	[020]	20	_____	___/___	_____	1 2 3 4 5 6 7 8
[005]	5	_____	___/___	_____	1 2 3 4 5 6 7 8	[021]	21	_____	___/___	_____	1 2 3 4 5 6 7 8
[006]	6	_____	___/___	_____	1 2 3 4 5 6 7 8	[022]	22	_____	___/___	_____	1 2 3 4 5 6 7 8
[007]	7	_____	___/___	_____	1 2 3 4 5 6 7 8	[023]	23	_____	___/___	_____	1 2 3 4 5 6 7 8
[008]	8	_____	___/___	_____	1 2 3 4 5 6 7 8	[024]	24	_____	___/___	_____	1 2 3 4 5 6 7 8
[009]	9	_____	___/___	_____	1 2 3 4 5 6 7 8	[025]	25	_____	___/___	_____	1 2 3 4 5 6 7 8
[010]	10	_____	___/___	_____	1 2 3 4 5 6 7 8	[026]	26	_____	___/___	_____	1 2 3 4 5 6 7 8
[011]	11	_____	___/___	_____	1 2 3 4 5 6 7 8	[027]	27	_____	___/___	_____	1 2 3 4 5 6 7 8
[012]	12	_____	___/___	_____	1 2 3 4 5 6 7 8	[028]	28	_____	___/___	_____	1 2 3 4 5 6 7 8
[013]	13	_____	___/___	_____	1 2 3 4 5 6 7 8	[029]	29	_____	___/___	_____	1 2 3 4 5 6 7 8
[014]	14	_____	___/___	_____	1 2 3 4 5 6 7 8	[030]	30	_____	___/___	_____	1 2 3 4 5 6 7 8
[015]	15	_____	___/___	_____	1 2 3 4 5 6 7 8	[031]	31	_____	___/___	_____	1 2 3 4 5 6 7 8
[016]	16	_____	___/___	_____	1 2 3 4 5 6 7 8	[032]	32	_____	___/___	_____	1 2 3 4 5 6 7 8

NOTE: See worksheet 11 on page 19, for assigning wireless zones to your MG/SP control panel.

Custom Zone Definitions

With MG/SP control panels you can create up to four custom zone definition templates (use worksheet 8). Custom zone definition templates (sections [033] to [036]) will overwrite zone definitions 33 to 36 in table 5 on page 16. Modifications can be made in accordance with table 9 (*Permitted zone definitions for MG/SP panels*), on page 17.

Worksheet 8: Custom Zone Definitions

Section	Description	Disarm	Stay Arm	Sleep Arm	Full Arm
[033]	Zone definition template 1	___/___	___/___	___/___	___/___
[034]	Zone definition template 2	___/___	___/___	___/___	___/___
[035]	Zone definition template 3	___/___	___/___	___/___	___/___
[036]	Zone definition template 4	___/___	___/___	___/___	___/___

Zone Timers

Use the following section to program zone timers for your MG/SP control panel. Use worksheets 9 and 10 to record your settings.

NOTE: When both ATZ and EOL are enabled, the zone speed should not be set below 300 msec.

MG Series

Worksheet 9: Zone Timers for the MG Series

Section	Zone	MG5000	MG5050		Data	Description (default: 060)
[041]	1	(Z1)	(Z1)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 1
[042]	2	(Z2)	(Z2)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 2
[043]	3	(Z1 ATZ)	(Z3)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 3
[044]	4	(Z2 ATZ)	(Z4)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 4
[045]	5		(Z5)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 5
[046]	6		(Z1 ATZ)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 6
[047]	7		(Z2 ATZ)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 7
[048]	8		(Z3 ATZ)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 8
[049]	9		(Z4 ATZ)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 9
[050]	10		(Z5 ATZ)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 10
[051]	11			___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 11
[052]	12			___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 12
[053]	13			___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 13
[054]	14			___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 14
[055]	15			___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 15
[056]	16			___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 16

SP Series

Worksheet 10: Zone Timers for the SP Series

Section	Zone	SP4000	SP5500	SP6000	SP65*	SP7000**		Data	Description (default: 060)
[041]	1	(Z1)	(Z1)	(Z1)	(Z1)	(Z1)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 1
[042]	2	(Z2)	(Z2)	(Z2)	(Z2)	(Z2)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 2
[043]	3	(Z3)	(Z3)	(Z3)	(Z3)	(Z3)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 3
[044]	4	(Z4)	(Z4)	(Z4)	(Z4)	(Z4)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 4
[045]	5	(Z1 ATZ)	(Z5)	(Z5)	(Z5)	(Z5)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 5
[046]	6	(Z2 ATZ)	(Z1 ATZ)	(Z6)	(Z6)	(Z6)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 6
[047]	7	(Z3 ATZ)	(Z2 ATZ)	(Z7)	(Z7)	(Z7)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 7
[048]	8	(Z4 ATZ)	(Z3 ATZ)	(Z8)	(Z8)	(Z8)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 8
[049]	9		(Z4 ATZ)	(Z1 ATZ)	(Z9)	(Z9)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 9
[050]	10		(Z5 ATZ)	(Z2 ATZ)	(Z1 ATZ)	(Z10)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 10
[051]	11			(Z3 ATZ)	(Z2 ATZ)	(Z11)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 11
[052]	12			(Z4 ATZ)	(Z3 ATZ)	(Z12)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 12
[053]	13			(Z5 ATZ)	(Z4 ATZ)	(Z13)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 13
[054]	14			(Z6 ATZ)	(Z5 ATZ)	(Z14)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 14
[055]	15			(Z7 ATZ)	(Z6 ATZ)	(Z15)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 15
[056]	16			(Z8 ATZ)	(Z7 ATZ)	(Z16)	___/___/___	(000 to 255) x 10 msec.	Speed of hardwire zone 16

* For zones 17-18 (ATZ), the zone timer is set to 600 msec.

** For zones 17-32 (ATZ), the zone timer is set to 600 msec.

Wireless Zone Assignment

Use the following section to program the wireless zones on your MG/SP control panel. Use worksheet 11 to record your settings.

Worksheet 11: Wireless Zones

Section	Zone	Wireless Zone (Serial #)	Section	Zone	Wireless Zone (Serial #)	Section	Zone	Wireless Zone (Serial #)
[061]	1	___/___/___/___/___	[072]	12	___/___/___/___/___	[083]	23	___/___/___/___/___
[062]	2	___/___/___/___/___	[073]	13	___/___/___/___/___	[084]	24	___/___/___/___/___
[063]	3	___/___/___/___/___	[074]	14	___/___/___/___/___	[085]	25	___/___/___/___/___
[064]	4	___/___/___/___/___	[075]	15	___/___/___/___/___	[086]	26	___/___/___/___/___
[065]	5	___/___/___/___/___	[076]	16	___/___/___/___/___	[087]	27	___/___/___/___/___
[066]	6	___/___/___/___/___	[077]	17	___/___/___/___/___	[088]	28	___/___/___/___/___
[067]	7	___/___/___/___/___	[078]	18	___/___/___/___/___	[089]	29	___/___/___/___/___
[068]	8	___/___/___/___/___	[079]	19	___/___/___/___/___	[090]	30	___/___/___/___/___
[069]	9	___/___/___/___/___	[080]	20	___/___/___/___/___	[091]	31	___/___/___/___/___
[070]	10	___/___/___/___/___	[081]	21	___/___/___/___/___	[092]	32	___/___/___/___/___
[071]	11	___/___/___/___/___	[082]	22	___/___/___/___/___			

NOTE: When assigning wireless zones, either enter the serial number or press **TAMPER/LEARN**. To delete the serial number, enter **000000**.

Wireless Transmitter Signal Strength

The signal strength test for wireless transmitters is performed in sections [101] to [132]; these sections represent zones 1 to 32, respectively. To test the wireless transmitter strength of your various wireless devices, proceed as follows:

1. Enter the zone's respective section (e.g., for zone 1, enter section [101]).
2. Press the transmitter's anti-tamper switch and note the number of beeps which are emitted. As shown in table 10, the number of beeps correspond to a preset signal strength range.

Table 10: Signal strength indicator for wireless transmitters

Number of Beeps	Signal Strength	Result
3	8 to 10	Strong signal
2	5 to 7	Average signal
1	1 to 4	Weak signal (relocate)

NOTE: The visual representation of a transmitter's signal strength is dependent on the type of keypad. For LED keypads, zones 1 through 10 will illuminate, depending on the signal strength. For instance, a signal strength of 8 will result in zones 1 through 8 to illuminate. For LCD keypads, a ten-level progress bar composed of arrows will appear, followed by the numeric value. For a signal strength of 8, eight arrows will appear, followed by the number 8.

Zone Report Codes and Labels

Use the following section to program zone report codes and labels on your MG/SP control panel.

Zone Report Codes

Use worksheet 12 to record your settings when programming zone report codes.

Worksheet 12: Zone Report Codes

Section	Zone	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes	Section	Zone	Alarm Report Codes	Alarm Restore Report Codes	Tamper Report Codes	Tamper Restore Report Codes
[141]	1	___/___	___/___	___/___	___/___	[157]	17	___/___	___/___	___/___	___/___
[142]	2	___/___	___/___	___/___	___/___	[158]	18	___/___	___/___	___/___	___/___
[143]	3	___/___	___/___	___/___	___/___	[159]	19	___/___	___/___	___/___	___/___
[144]	4	___/___	___/___	___/___	___/___	[160]	20	___/___	___/___	___/___	___/___
[145]	5	___/___	___/___	___/___	___/___	[161]	21	___/___	___/___	___/___	___/___
[146]	6	___/___	___/___	___/___	___/___	[162]	22	___/___	___/___	___/___	___/___
[147]	7	___/___	___/___	___/___	___/___	[163]	23	___/___	___/___	___/___	___/___
[148]	8	___/___	___/___	___/___	___/___	[164]	24	___/___	___/___	___/___	___/___
[149]	9	___/___	___/___	___/___	___/___	[165]	25	___/___	___/___	___/___	___/___
[150]	10	___/___	___/___	___/___	___/___	[166]	26	___/___	___/___	___/___	___/___
[151]	11	___/___	___/___	___/___	___/___	[167]	27	___/___	___/___	___/___	___/___
[152]	12	___/___	___/___	___/___	___/___	[168]	28	___/___	___/___	___/___	___/___
[153]	13	___/___	___/___	___/___	___/___	[169]	29	___/___	___/___	___/___	___/___
[154]	14	___/___	___/___	___/___	___/___	[170]	30	___/___	___/___	___/___	___/___
[155]	15	___/___	___/___	___/___	___/___	[171]	31	___/___	___/___	___/___	___/___
[156]	16	___/___	___/___	___/___	___/___	[172]	32	___/___	___/___	___/___	___/___

Zone Labels

Use worksheet 13 to record your settings when programming zone labels.

Worksheet 13: Zone Labels

Section	Zone	Zone Label	Section	Zone	Zone Label
[181]	1	_____	[197]	17	_____
[182]	2	_____	[198]	18	_____
[183]	3	_____	[199]	19	_____
[184]	4	_____	[200]	20	_____
[185]	5	_____	[201]	21	_____
[186]	6	_____	[202]	22	_____
[187]	7	_____	[203]	23	_____
[188]	8	_____	[204]	24	_____
[189]	9	_____	[205]	25	_____
[190]	10	_____	[206]	26	_____
[191]	11	_____	[207]	27	_____
[192]	12	_____	[208]	28	_____
[193]	13	_____	[209]	29	_____
[194]	14	_____	[210]	30	_____
[195]	15	_____	[211]	31	_____
[196]	16	_____	[212]	32	_____

Programmable Output Programming

Use the following section to program programmable outputs (PGMs) on your MG/SP control panel.

Programmable Output Recognition

Table 11: Programmable outputs for MG/SP panels

PGM	PGM Output	Control Panel						
		MG5000	MG5050	SP4000	SP5500	SP6000	SP65	SP7000
1	Control panel output 1	✓	✓	✓	✓	✓	✓	✓
2	Control panel output 2	✓	✓	-	✓	✓	✓	✓
3	Control panel output 3	-	✓	-	-	Optional	✓	✓
4	Control panel output 4	-	✓	-	-	Optional	-	✓
5	Control panel relay	-	-	-	-	Optional	-	✓
6	ZX8 ID = 1 output	✓	✓	✓	✓	✓	✓	✓
7	ZX8 ID = 2 output	✓	✓	✓	✓	✓	✓	✓
8	ZX8 ID = 3 output	✓	✓	✓	✓	✓	✓	-
9	PGM4 relay 1	✓	✓	✓	✓	✓	✓	✓
10	PGM4 relay 2	✓	✓	✓	✓	✓	✓	✓
11	PGM4 relay 3	✓	✓	✓	✓	✓	✓	✓
12	PGM4 relay 4	✓	✓	✓	✓	✓	✓	✓
13	RTX3/RX1 output 1	-	-	✓	✓	✓	✓	✓
14	RTX3/RX1 output 2	-	-	✓	✓	✓	✓	✓
15	RTX3 output 3 (relay)	-	-	✓	✓	✓	✓	✓
16	RTX3 output 4 (relay)	Optional	Optional	Optional	Optional	Optional	Optional	Optional

NOTE: A wireless PGM module can be assigned to any PGM. These modules will work in parallel with the control panel output (not applicable to the SP4000).

Programmable Output on the K32LCD/K32LX

The on-board PGM of the K32LCD and K32LX (not programmable) will follow the arm status of any partition, via any arming method, including StayD. This only applies to versions 5.10 and higher, with an ECO number of J014.

Description of MG/SP Events

Table 12: List of events for MG/SP control panels


Event Group	Event Group Description	Sub-group	Sub-group Description		
00	Zone OK	01 to 32	Zone number		
01	Zone open	99	Any zone number		
02	Partition status	00 to 01	-		
		02	Silent alarm		
		03	Buzzer alarm		
		04	Steady alarm		
		05	Pulsed alarm		
		06	Strobe		
		07	Alarm stopped		
		08	Squawk ON (partition 1 only)		
		09	Squawk OFF (partition 1 only)		
		10	Ground start (partition 1 only)		
		11	Disarm partition		
		12	Arm partition		
		13	Entry delay started		
		14	Exit delay started		
		15	Pre-alarm delay		
		16	Report confirmation		
		99	Any partition status event		
		03	Bell status (partition 1 only)	00	Bell OFF
				01	Bell ON
02	Bell squawk arm				
03	Bell squawk disarm				
99	Any bell status event				
06	Non-reportable event	00	Telephone line trouble		
		01	CLEAR + ENTER , or  was pressed for 3 secs. (partition 1 only)		
		02	-		
		03	Arm in Stay mode		
		04	Arm in Sleep mode		
		05	Arm in Force mode		
		06	Full arm when armed in Stay mode		
		07	PC fail to communicate (partition 1 only)		
		08	Utility key 1 pressed (keys 1 and 2 ; partition 1 only)		
		09	Utility key 2 pressed (keys 4 and 5 ; partition 1 only)		
		10	Utility key 3 pressed (keys 7 and 8 ; partition 1 only)		
		11	Utility key 4 pressed (keys 2 and 3 ; partition 1 only)		
		12	Utility key 5 pressed (keys 5 and 6 ; partition 1 only)		
		13	Utility key 6 pressed (keys 8 and 9 ; partition 1 only)		
		14	Tamper generated alarm		
		15	Supervision loss generated alarm		
		16	-		
		17	-		
		18	-		
		19	-		
		20	Full arm when armed in Sleep mode		
		21	Firmware upgrade (partition 1 only; non-PGM event)		
		22	-		
		23	StayD mode activated		
24	StayD mode deactivated				

Table 12: List of events for MG/SP control panels (Continued)

Event Group	Event Group Description	Sub-group	Sub-group Description
06 (Cont.)	Non-reportable event (Cont.)	25	IP registration status change
		26	GPRS registration status change
		99	Any non-reportable event
08	Button pressed on remote (see <i>Default Data B</i> , in worksheet 26 on page 34)	01 to 32	Remote control number
		99	Any remote control number
09	Button pressed on remote (see <i>Default Data C</i> , in worksheet 26 on page 34)	01 to 32	Remote control number
		99	Any remote control number
10	Button pressed on remote (see <i>Default Data D</i> , in worksheet 26 on page 34)	01 to 32	Remote control number
		99	Any remote control number
11	Button pressed on remote (see <i>Default Data E</i> , in worksheet 26 on page 34)	01 to 32	Remote control number
		99	Any remote control number
12	Cold start wireless zone	01 to 32	Zone number
		99	Any zone number
13	Cold start wireless module (partition 1 only)	01 to 16	Output number
		17 to 18	Wireless repeater
		19 to 26	Wireless keypad
		27 to 30	Wireless siren
		99	Any output number
14	Bypass programming	01 to 32	User number
		99	Any user number
15	User code activated output (partition 1 only)	01 to 32	User number
		99	Any user number
16	Wireless smoke maintenance signal	01 to 32	Zone number
		99	Any zone number
17	Delay zone alarm transmission	01 to 32	Zone number
		99	Any zone number
18	Zone signal strength weak 1 (partition 1 only)	01 to 32	Zone number
		99	Any zone number
19	Zone signal strength weak 2 (partition 1 only)	01 to 32	Zone number
		99	Any zone number
20	Zone signal strength weak 3 (partition 1 only)	01 to 32	Zone number
		99	Any zone number
21	Zone signal strength weak 4 (partition 1 only)	01 to 32	Zone number
		99	Any zone number
22	Button pressed on remote (see option 5, in table 22 on page 33)	01 to 32	Remote control number
		99	Any remote control number
23	Button pressed on remote (see option 6, in table 22 on page 33)	01 to 32	Remote control number
		99	Any remote control number
24	Fire delay started	01 to 32	Zone number
		99	Any zone number
25	-	-	-
26	Software access (VDMP3, IP100, WinLoad, BabyWare)	00	Non-valid source ID
		01	WinLoad/BabyWare direct
		02	WinLoad/BabyWare through IP module
		03	WinLoad/BabyWare through GSM module
		04	WinLoad/BabyWare through modem
		09	IP100 direct
		10	VDMP3 direct
		11	Voice through GSM module
12	Remote access		

Table 12: List of events for MG/SP control panels (Continued)

Event Group	Event Group Description	Sub-group	Sub-group Description
26 (Cont.)	Software access (VDMP3, IP100, WinLoad, BabyWare) (Cont.)	13	SMS through GSM module
		99	Any software access
27	Bus module event	00	A bus module was added
		01	A bus module was removed
		02	2-way RF module communication failure
		03	2-way RF module communication restored
		99	Any bus module event
		01 to 32	Zone number
28	StayD pass acknowledged	99	Any zone number
		01 to 32	User number
29	Arming with user	99	Any user number
		30	Special arming
01	Late to close		
02	No movement arming		
03	Partial arming		
04	Quick arming		
05	Arming through WinLoad/BabyWare		
06	Arming with keyswitch		
99	Any special arming		
31	Disarming with user	01 to 32	User number
		99	Any user number
32	Disarming after an alarm with user	01 to 32	User number
		99	Any user number
33	Alarm cancelled with user	01 to 32	User number
		99	Any user number
34	Special disarming	00	Auto-arm cancelled (on-time/no movement)
		01	Disarming through WinLoad/BabyWare
		02	Disarming through WinLoad/BabyWare after alarm
		03	Alarm cancelled through WinLoad/BabyWare
		04	Paramedical alarm cancelled
		05	Disarm with keyswitch
		06	Disarm with keyswitch after an alarm
		07	Alarm cancelled with keyswitch
99	Any special disarming		
35	Zone bypassed	01 to 32	Zone number
		99	Any zone number
36	Zone in alarm	01 to 32	Zone number
		99	Any zone number
37	Fire alarm	01 to 32	Zone number
		99	Any zone number
38	Zone alarm restore	01 to 32	Zone number
		99	Any zone number
39	Fire alarm restore	01 to 32	Zone number
		99	Any zone number
40	Special alarm	00	Panic non-medical emergency
		01	Panic medical (this panic alarm is not UL approved)
		02	Panic fire
		03	Recent closing
		04	Global shutdown
		05	Duress alarm

Table 12: List of events for MG/SP control panels (Continued)

Event Group	Event Group Description	Sub-group	Sub-group Description
40 (Cont.)	Special alarm (Cont.)	06	Keypad lockout (partition 1 only)
		99	Any special alarm event
41	Zone shutdown	01 to 32	Zone number
		99	Any zone number
42	Zone tampered	01 to 32	Zone number
		99	Any zone number
43	Zone tamper restore	01 to 32	Zone number
		99	Any zone number
44	New trouble (partition 1 only, except sub-group 07, which is for both partitions)	00	-
		01	AC failure
		02	Battery failure
		03	Auxiliary current overload
		04	Bell current overload
		05	Bell disconnected
		06	Clock loss
		07	Fire loop trouble
		08	Fail to communicate with monitoring station telephone # 1
		09	Fail to communicate with monitoring station telephone # 2
		11	Fail to communicate with voice report
		12	RF jamming
		13	GMS RF jamming
		14	GSM no service
		15	GSM supervision lost
		16	Fail to communicate IP receiver 1 (GPRS)
		17	Fail to communicate IP receiver 2 (GPRS)
		18	IP module no service
		19	IP module supervision loss
		20	Fail to communicate IP receiver 1 (IP)
		21	Fail to communicate IP receiver 2 (IP)
99	Any new trouble event		
45	Trouble restored	00	Telephone line restored
		01	AC failure restore
		02	Battery failure restore
		03	Auxiliary current overload
		04	Bell current overload restore
		05	Bell disconnected restore
		06	Clock loss restore
		07	Fire loop trouble restore
		08	Fail to communicate with monitoring station tel. # 1 restore
		09	Fail to communicate with monitoring station tel. # 2 restore
		11	Fail to communicate with voice report restore
		12	RF jamming restore
		13	GMS RF jamming restore
		14	GSM no service restore
		15	GSM supervision lost restore
		16	Fail to communicate restore IP receiver 1 (GPRS)
		17	Fail to communicate restore IP receiver 2 (GPRS)
		18	IP module no service restore
		19	IP module supervision loss restore
		20	Fail to communicate restore IP receiver 1 (IP)

Table 12: List of events for MG/SP control panels (Continued)

Event Group	Event Group Description	Sub-group	Sub-group Description
45 (Cont.)	Trouble restored (Cont.)	21	Fail to communicate restore IP receiver 2 (IP)
		99	Any new trouble restored event
46	Bus/EBus/wireless module new trouble (partition 1 only)	00	Bus/EBus/wireless module communication fault
		01	Tamper trouble
		02	Power fail
		03	Battery failure
		99	Any bus module new trouble event
		00	Bus/EBus/wireless module communication fault restore
47	Bus/EBus/wireless module trouble restored (partition 1 only)	01	Tamper trouble restore
		02	Power fail restore
		03	Battery failure restore
		99	Any bus module new trouble restored event
		00	System power up
48	Special (partition1 only)	01	Reporting test
		02	Software log on
		03	Software log off
		04	Installer in programming mode
		05	Installer exited programming mode
		06	Maintenance in programming mode
		07	Maintenance exited programming mode
		08	Closing delinquency delay elapsed
		99	Any special event
		49	Low battery on zone
99	Any zone number		
50	Low battery on zone restore	01 to 32	Zone number
		99	Any zone number
51	Zone supervision trouble	01 to 32	Zone number
		99	Any zone number
52	Zone supervision restore	01 to 32	Zone number
		99	Any zone number
53	Wireless module supervision trouble (partition 1 only)	01 to 16	Output
		17 to 18	Wireless repeater
		19 to 22	Wireless keypad
		27 to 30	Wireless siren
		99	Any output number
54	Wireless module supervision restore (partition 1 only)	01 to 16	Output
		17 to 18	Wireless repeater
		19 to 22	Wireless keypad
		27 to 30	Wireless siren
		99	Any output number
55	Wireless module tamper trouble (partition 1 only)	01 to 16	Output
		17 to 18	Wireless repeater
		19 to 22	Wireless keypad
		27 to 30	Wireless siren
		99	Any output number
56	Wireless module tamper restore (partition 1 only)	01 to 16	Output
		17 to 18	Wireless repeater
		19 to 22	Wireless keypad
		27 to 30	Wireless siren
		99	Any output number

Table 12: List of events for MG/SP control panels (Continued)

Event Group	Event Group Description	Sub-group	Sub-group Description
57	Non-medical alarm (paramedic)	01 to 32	User number
		99	Any user number
58	Zone forced	01 to 32	Zone number
		99	Any zone number
59	Zone included	01 to 32	Zone number
	Zone included (Cont.)	99	Any zone number
64	System status (on-board PGMs only)	00	Follow ARM LED status*: PGM pulse fast in alarm PGM pulse fast in exit delay, below 10 sec. PGM pulse slow in exit delay, over 10 sec. PGM steady ON, if armed PGM OFF, if disarmed * This event can be assigned to partition 1 or 2. If assigned to both partitions, the PGM event will follow the list order above, with number 1 being the highest priority.

PGM Activation/Deactivation Events

Use worksheet 14 to record your settings for the MG/SP PGM events. See table 12 on page 21, for a list of these events.

Worksheet 14: PGM Activation/Deactivation Events

Section	PGM	Event	Event Group	Sub-group	Partition (99 for both)	Default	Section	PGM	Event	Event Group	Sub-group	Partition (99 for both)	Default
[220]	PGM 1	Activation	___/___	___/___	___/___	08/99/99*	[236]	PGM 9	Activation	___/___	___/___	___/___	00/00/00
[221]		Deactivation	___/___	___/___	___/___	00/00/00	[237]		Deactivation	___/___	___/___	___/___	00/00/00
[222]	PGM 2	Activation	___/___	___/___	___/___	09/99/99**	[238]	PGM 10	Activation	___/___	___/___	___/___	00/00/00
[223]		Deactivation	___/___	___/___	___/___	00/00/00	[239]		Deactivation	___/___	___/___	___/___	00/00/00
[224]	PGM 3	Activation	___/___	___/___	___/___	00/00/00	[240]	PGM 11	Activation	___/___	___/___	___/___	00/00/00
[225]		Deactivation	___/___	___/___	___/___	00/00/00	[241]		Deactivation	___/___	___/___	___/___	00/00/00
[226]	PGM 4	Activation	___/___	___/___	___/___	00/00/00	[242]	PGM 12	Activation	___/___	___/___	___/___	00/00/00
[227]		Deactivation	___/___	___/___	___/___	00/00/00	[243]		Deactivation	___/___	___/___	___/___	00/00/00
[228]	PGM 5	Activation	___/___	___/___	___/___	00/00/00	[244]	PGM 13	Activation	___/___	___/___	___/___	08/99/01
[229]		Deactivation	___/___	___/___	___/___	00/00/00	[245]		Deactivation	___/___	___/___	___/___	08/99/01
[230]	PGM 6	Activation	___/___	___/___	___/___	00/00/00	[246]	PGM 14	Activation	___/___	___/___	___/___	09/99/01
[231]		Deactivation	___/___	___/___	___/___	00/00/00	[247]		Deactivation	___/___	___/___	___/___	09/99/01
[232]	PGM 7	Activation	___/___	___/___	___/___	00/00/00	[248]	PGM 15	Activation	___/___	___/___	___/___	00/00/00
[233]		Deactivation	___/___	___/___	___/___	00/00/00	[249]		Deactivation	___/___	___/___	___/___	00/00/00
[234]	PGM 8	Activation	___/___	___/___	___/___	00/00/00	[250]	PGM 16	Activation	___/___	___/___	___/___	00/00/00
[235]		Deactivation	___/___	___/___	___/___	00/00/00	[251]		Deactivation	___/___	___/___	___/___	00/00/00

* Section [220], PGM 1 activation event: default = option B remote assignment. Button pressed on any remote/any partition (see table 22 on page 33).

** Section [222], PGM 2 activation event: default = option C remote assignment. Button pressed on any remote/any partition (see table 22 on page 33).

PGM Options

Table 13: Description of PGM options

Option	Description	PGM 1 [261]		PGM 2 [262]		PGM 3 [263]		PGM 4 [264]		PGM 5 [265]		PGM 6 [266]		PGM 7 [267]		PGM 8 [268]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	PGM base time (OFF = sec., ON = min.)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
2	PGM state (OFF = N.O.; ON = N.C.)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
3	PGM supervision (not applicable to SP4000)	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲
4	PGM activation mode (OFF = steady; ON = pulse)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
5	PGM pulse once every 30 seconds, if armed	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
6	PGM pulse on any alarm	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
7	PGM pulse on any alarm (OFF = partition 1; ON = partition 2)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
8	Flexible PGM deactivation option (OFF ¹ = PGM delay only, two activation events; ON = PGM delay or deactivation event, whichever comes first)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□

Option	Description	PGM 9 [269]		PGM 10 [270]		PGM 11 [271]		PGM 12 [272]		PGM 13 [273]		PGM 14 [274]		PGM 15 [275]		PGM 16 [276]	
		OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
1	PGM base time (OFF = sec., ON = min.)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
2	PGM state (OFF = N.O.; ON = N.C.)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
3	PGM supervision (not applicable to SP4000)	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲
4	PGM activation mode (OFF = steady; ON = pulse)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
5	PGM pulse once every 30 seconds, if armed	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
6	PGM pulse on any alarm	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
7	PGM pulse on any alarm (OFF = partition 1; ON = partition 2)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□
8	Flexible PGM deactivation option (OFF ¹ = PGM delay only, two activation events; ON = PGM delay or deactivation event, whichever comes first)	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□	▲	□

▲ = Default Setting

¹ If a PGM delay is programmed (OFF option), the deactivation event can be used as a second activation event.

Section [277] for SP65

Table 14: Description of section [277] for SP65

Option	Option Type	Description	[277]	
			OFF	ON
1	Voltage output (OFF = negative trigger, 0V; ON = positive trigger, 12V)	PGM 1	▲	□
2		PGM 2	▲	□
3		PGM 3	▲	□

▲ = Default Setting

NOTE: Section [277] only applies to the SP65 system.

User Programming

Use the following section to program the various user features on your MG/SP control panel.

System Codes

Use worksheet 18 to record your settings for the MG/SP system codes. For access options, see section [701], in table 25 on page 36.

NOTE: The maintenance code cannot access the following sections: [395] (Installer code lock); [397] (Installer code); [398] (Maintenance code); [815] (Monitoring station telephone number 1); [816] (Monitoring station telephone number 2); [817] (Backup monitoring station telephone); [910] (Panel ID); [911] (PC password); [970] (Download memory key into panel); [975] (Upload panel into the memory key).

Worksheet 18: User System Codes

Section	Data	Description	Default Setting
[395]	__/_/___	Installer code lock*	000
[397]	__/_/___/___/___/___	Installer code	000000
[398]	__/_/___/___/___/___	Maintenance code	-
[399]	__/_/___/___/___/___	System master code	123456

* Enter 147 to lock entire control panel. Once locked, enter any other three-digit combination to unlock.

WARNING: The installer and system master codes may consist of four or six digits (see option 1 of section [701], in table 25 on page 36). The control panel automatically removes the last two digits of these codes, if the length is changed from six digits to four. However, if the access code length is changed from four digits to six, the control panel adds the code's first two digits to the end of the code.

User Code Options

Use worksheet 19 to record your settings for the MG/SP user code options. See table 16 for details on these options.

Table 16: User code options for MG/SP control panels

Option	Description
1	Partition 1 access
2	Partition 2 access
3	Bypass programming
4	Stay/Sleep arming
5	Force arming
6	Arm only
7	PGM activation only
8	Duress

WARNING: When section [400] is accessed, the control panel will copy the saved value of that section to all user option sections (sections [404] to [432]).

Worksheet 19: User Code Options

Section	User	Options	Section	User	Options
[400]	Default option	1 2 3 4 5 6 7 8	[417]	User 17	1 2 3 4 5 6 7 8
[401]	System master	① ② ③ ④ ⑤ 6 7 8	[418]	User 18	1 2 3 4 5 6 7 8
[402]	Master 1	① 2 ③ ④ ⑤ 6 7 8	[419]	User 19	1 2 3 4 5 6 7 8
[403]	Master 2	1 ② ③ ④ ⑤ 6 7 8	[420]	User 20	1 2 3 4 5 6 7 8
[404]	User 4	1 2 3 4 5 6 7 8	[421]	User 21	1 2 3 4 5 6 7 8
[405]	User 5	1 2 3 4 5 6 7 8	[422]	User 22	1 2 3 4 5 6 7 8
[406]	User 6	1 2 3 4 5 6 7 8	[423]	User 23	1 2 3 4 5 6 7 8
[407]	User 7	1 2 3 4 5 6 7 8	[424]	User 24	1 2 3 4 5 6 7 8
[408]	User 8	1 2 3 4 5 6 7 8	[425]	User 25	1 2 3 4 5 6 7 8
[409]	User 9	1 2 3 4 5 6 7 8	[426]	User 26	1 2 3 4 5 6 7 8
[410]	User 10	1 2 3 4 5 6 7 8	[427]	User 27	1 2 3 4 5 6 7 8
[411]	User 11	1 2 3 4 5 6 7 8	[428]	User 28	1 2 3 4 5 6 7 8
[412]	User 12	1 2 3 4 5 6 7 8	[429]	User 29	1 2 3 4 5 6 7 8
[413]	User 13	1 2 3 4 5 6 7 8	[430]	User 30	1 2 3 4 5 6 7 8
[414]	User 14	1 2 3 4 5 6 7 8	[431]	User 31	1 2 3 4 5 6 7 8
[415]	User 15	1 2 3 4 5 6 7 8	[432]	User 32	1 2 3 4 5 6 7 8
[416]	User 16	1 2 3 4 5 6 7 8			

NOTE: The system master, master 1, and master 2 user code options cannot be modified. However, if partitioning is not enabled, the user code options for master 2 will match those of master 1.

Wireless Repeater Signal Strength

The signal strength for wireless repeaters is visible in sections [548] and [549]; these sections represent repeaters 1 and 2, respectively. To view the signal strength, proceed as follows:

1. Enter the wireless repeater's respective section (e.g., for repeater 1, enter section [548]).
2. Press the repeater's anti-tamper switch. As shown in table 17, the number of beeps correspond to a preset signal strength range.

Table 17: Signal strength indicator for wireless repeaters

Number of Beeps	Signal Strength	Result
3	8 to 10	Strong signal
2	5 to 7	Average signal
1	1 to 4	Weak signal (relocate)

NOTE: The visual representation of a repeater's signal strength is dependent on the type of keypad. For LED keypads, zones 1 through 10 will illuminate, depending on the signal strength. For instance, a signal strength of 8 will result in zones 1 through 8 to illuminate. For LCD keypads, a ten-level progress bar composed of arrows will appear, followed by the numeric value. For a signal strength of 8, eight arrows will appear, followed by the number 8.

Wireless Repeater Options

Table 18: Description of the wireless repeater options

Option	Description	RPT1 [551]		RPT2 [561]	
		OFF	ON	OFF	ON
1	Repeat wireless keypad 1 signals	▲	□	▲	□
2	Repeat wireless keypad 2 signals	▲	□	▲	□
3	Repeat wireless keypad 3 signals	▲	□	▲	□
4	Repeat wireless keypad 4 signals	▲	□	▲	□
5	Repeat wireless keypad 5 signals	▲	□	▲	□
6	Repeat wireless keypad 6 signals	▲	□	▲	□
7	Repeat wireless keypad 7 signals	▲	□	▲	□
8	Repeat wireless keypad 8 signals	▲	□	▲	□
Option	Description	RPT1 [552]		RPT2 [562]	
		OFF	ON	OFF	ON
1	Repeat wireless zone 1 signals	▲	□	▲	□
2	Repeat wireless zone 2 signals	▲	□	▲	□
3	Repeat wireless zone 3 signals	▲	□	▲	□
4	Repeat wireless zone 4 signals	▲	□	▲	□
5	Repeat wireless zone 5 signals	▲	□	▲	□
6	Repeat wireless zone 6 signals	▲	□	▲	□
7	Repeat wireless zone 7 signals	▲	□	▲	□
8	Repeat wireless zone 8 signals	▲	□	▲	□
Option	Description	RPT1 [553]		RPT2 [563]	
		OFF	ON	OFF	ON
1	Repeat wireless zone 9 signals	▲	□	▲	□
2	Repeat wireless zone 10 signals	▲	□	▲	□
3	Repeat wireless zone 11 signals	▲	□	▲	□
4	Repeat wireless zone 12 signals	▲	□	▲	□
5	Repeat wireless zone 13 signals	▲	□	▲	□
6	Repeat wireless zone 14 signals	▲	□	▲	□
7	Repeat wireless zone 15 signals	▲	□	▲	□
8	Repeat wireless zone 16 signals	▲	□	▲	□

Option	Description	RPT1 [554]		RPT2 [564]	
		OFF	ON	OFF	ON
1	Repeat wireless zone 17 signals	▲	□	▲	□
2	Repeat wireless zone 18 signals	▲	□	▲	□
3	Repeat wireless zone 19 signals	▲	□	▲	□
4	Repeat wireless zone 20 signals	▲	□	▲	□
5	Repeat wireless zone 21 signals	▲	□	▲	□
6	Repeat wireless zone 22 signals	▲	□	▲	□
7	Repeat wireless zone 23 signals	▲	□	▲	□
8	Repeat wireless zone 24 signals	▲	□	▲	□
Option	Description	RPT1 [555]		RPT2 [565]	
		OFF	ON	OFF	ON
1	Repeat wireless zone 25 signals	▲	□	▲	□
2	Repeat wireless zone 26 signals	▲	□	▲	□
3	Repeat wireless zone 27 signals	▲	□	▲	□
4	Repeat wireless zone 28 signals	▲	□	▲	□
5	Repeat wireless zone 29 signals	▲	□	▲	□
6	Repeat wireless zone 30 signals	▲	□	▲	□
7	Repeat wireless zone 31 signals	▲	□	▲	□
8	Repeat wireless zone 32 signals	▲	□	▲	□
Option	Description	RPT1 [556]		RPT2 [566]	
		OFF	ON	OFF	ON
1	Repeat wireless two-way PGM 1 signals	▲	□	▲	□
2	Repeat wireless two-way PGM 2 signals	▲	□	▲	□
3	Repeat wireless two-way PGM 3 signals	▲	□	▲	□
4	Repeat wireless two-way PGM 4 signals	▲	□	▲	□
5	Repeat wireless two-way PGM 5 signals	▲	□	▲	□
6	Repeat wireless two-way PGM 6 signals	▲	□	▲	□
7	Repeat wireless two-way PGM 7 signals	▲	□	▲	□
8	Repeat wireless two-way PGM 8 signals	▲	□	▲	□

Option	Description	RPT1 [557]		RPT2 [567]	
		OFF	ON	OFF	ON
1	Repeat wireless two-way PGM 9 signals	▲	□	▲	□
2	Repeat wireless two-way PGM 10 signals	▲	□	▲	□
3	Repeat wireless two-way PGM 11 signals	▲	□	▲	□
4	Repeat wireless two-way PGM 12 signals	▲	□	▲	□
5	Repeat wireless two-way PGM 13 signals	▲	□	▲	□
6	Repeat wireless two-way PGM 14 signals	▲	□	▲	□
7	Repeat wireless two-way PGM 15 signals	▲	□	▲	□
8	Repeat wireless two-way PGM 16 signals	▲	□	▲	□

▲ = Default Setting

Wireless Repeater Labels

Use worksheet 23 to record your settings for wireless repeater labels. To reset these labels, see *Description of Section [965]* on page 51.

Worksheet 23: Wireless Repeater Labels

Section	Description	Wireless Repeater Label
[568]	Repeater 1	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___
[569]	Repeater 2	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___/___

NOTE: For special characters and keypad letter assignments, see *Label Programming with LCD Keypads* on page 52.

Wireless Keypad Programming

Automatic Wireless Keypad Assignment

After powering-up, the control panel will open a ten-minute window for automatic assignment. To assign a keypad to your MG/SP control panel, press and hold **⏻** and **BYF** for three seconds on the respective keypad. Up to eight wireless keypads can be assigned within this ten-minute period.

Compatibility Check (K37 only)

If the K37 is not compatible with the current MG/SP control panel version, the following trouble will be displayed: **[TROUBLE: FLASH] [17: ON]**. If this occurs, update your MG/SP control panel to version 3.2 or higher.

Standard Wireless Keypad Assignment

Use worksheet 24 to record your settings, when assigning wireless keypads to your MG/SP control panel. To assign your wireless keypads, enter the serial number or press and hold **⏻** and **BYF** for three seconds.

Worksheet 24: Wireless Keypad Assignment

Section	Description	Wireless Keypad Serial Number
[571]	Keypad 1	___/___/___/___/___/___
[572]	Keypad 2	___/___/___/___/___/___
[573]	Keypad 3	___/___/___/___/___/___
[574]	Keypad 4	___/___/___/___/___/___
[575]	Keypad 5	___/___/___/___/___/___
[576]	Keypad 6	___/___/___/___/___/___
[577]	Keypad 7	___/___/___/___/___/___
[578]	Keypad 8	___/___/___/___/___/___

Wireless Keypad, Repeater, and Siren Options

Table 19: Description of section [587]

Option	Description	[587]	
		OFF	ON
1	Repeater 1 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
2	Repeater 2 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
3	Wireless siren 1 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
4	Wireless siren 2 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
5	Wireless siren 3 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
6	Wireless siren 4 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
8	Live display mode	<input type="checkbox"/>	<input checked="" type="checkbox"/>

▲ = Default

NOTE: To cancel the wireless siren tamper supervision, see *Cancelling the Tamper Supervision for Wireless Sirens* on page 36.

Wireless Keypad Options

Table 20: Description of section [588]

Option	Description	[588]	
		OFF	ON
1	Keypad 1 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
2	Keypad 2 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
3	Keypad 3 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
4	Keypad 4 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
5	Keypad 5 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
6	Keypad 6 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
7	Keypad 7 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>
8	Keypad 8 supervision	<input type="checkbox"/>	<input checked="" type="checkbox"/>

▲ = Default

Wireless Keypad Signal Strength

The signal strength for wireless keypads is visible in sections [591] to [598]; these sections represent keypads 1 through 8, respectively. To view the signal strength, proceed as follows:

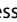
1. Enter the wireless keypad's respective section (e.g., for keypad 1, enter section [591]).
2. Press  on the keypad. As shown in table 21, the number of beeps correspond to a preset signal strength range.

Table 21: Signal strength indicator for wireless keypads








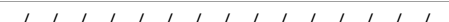
Number of Beeps	Signal Strength	Result
3	8 to 10	Strong signal
2	5 to 7	Average signal
1	1 to 4	Weak signal (relocate)

NOTE: The visual representation of a keypad's signal strength is dependent on the type of keypad. For LED keypads, zones 1 through 10 will illuminate, depending on the signal strength. For instance, a signal strength of 8 will result in zones 1 through 8 to illuminate. For LCD keypads, a ten-level progress bar composed of arrows will appear, followed by the numeric value. For a signal strength of 8, eight arrows will appear, followed by the number 8.

Wireless Keypad Labels

Use worksheet 25 to record your settings for wireless keypad labels. To reset these labels, see *Description of Section [965]* on page 51.

Worksheet 25: Wireless Keypad Labels

Section	Description	Wireless Keypad Label
[599]	Keypad 1	
[600]	Keypad 2	
[601]	Keypad 3	
[602]	Keypad 4	
[603]	Keypad 5	
[604]	Keypad 6	
[605]	Keypad 7	
[606]	Keypad 8	

NOTE: For special characters and keypad letter assignments, see *Label Programming with LCD Keypads* on page 52.

Remote Control Programming

Use the following section to program remote controls for your MG/SP control panel.

Remote Control Button Assignment

Use worksheet 26 on page 34 to record your settings when assigning remote controls to your MG/SP control panel. See table 22 for details on button options for these remotes.

WARNING: Remote controls which are supported by MG/SP control panels are the following: REM1, REM2, RAC1, RAC2, REM3, and REM15.

Table 22: Button options for MG/SP remote controls (see *Decimal and Hexadecimal Programming* on page 4)




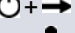
Option	Description	Option	Description
Sleep	Empty/button disabled	8	Panic 1
1	Regular/regular force arming	9	Panic 2
2	Stay/stay force arming	A	Panic 3
3	-	B	PGM activation (event group 8)*
4	Sleep/sleep force arming	C	PGM activation (event group 9)*
5	PGM activation (event group 22)*	D	PGM activation (event group 10)*
6	PGM activation (event group 23)*	E	PGM activation (event group 11)*
7	Activate window mode (StayD)	F	Paramedic alarm

* For descriptions on the event groups, see *Description of MG/SP Events* on page 21.

NOTE: The disarm button () cannot be modified.

Worksheet 26: Programming Remote Controls

		REM3 Remote Control							
		PGM 1 9	PGM 2 0	PGM 3 x	PGM 4 ✓	PGM 5 ●	PGM 6 ●	PGM 3 & 4 x + ✓	PGM 5 & 6 ● + ●
Default Data		B	C	D	E	5	6	Disabled	Disabled
RC #	Section								
All	[610]	_____	_____	_____	_____	_____	_____	_____	_____
1	[611]	_____	_____	_____	_____	_____	_____	_____	_____
2	[612]	_____	_____	_____	_____	_____	_____	_____	_____
3	[613]	_____	_____	_____	_____	_____	_____	_____	_____
4	[614]	_____	_____	_____	_____	_____	_____	_____	_____
5	[615]	_____	_____	_____	_____	_____	_____	_____	_____
6	[616]	_____	_____	_____	_____	_____	_____	_____	_____
7	[617]	_____	_____	_____	_____	_____	_____	_____	_____
8	[618]	_____	_____	_____	_____	_____	_____	_____	_____
9	[619]	_____	_____	_____	_____	_____	_____	_____	_____
10	[620]	_____	_____	_____	_____	_____	_____	_____	_____
11	[621]	_____	_____	_____	_____	_____	_____	_____	_____
12	[622]	_____	_____	_____	_____	_____	_____	_____	_____
13	[623]	_____	_____	_____	_____	_____	_____	_____	_____
14	[624]	_____	_____	_____	_____	_____	_____	_____	_____
15	[625]	_____	_____	_____	_____	_____	_____	_____	_____
16	[626]	_____	_____	_____	_____	_____	_____	_____	_____
17	[627]	_____	_____	_____	_____	_____	_____	_____	_____
18	[628]	_____	_____	_____	_____	_____	_____	_____	_____
19	[629]	_____	_____	_____	_____	_____	_____	_____	_____
20	[630]	_____	_____	_____	_____	_____	_____	_____	_____
21	[631]	_____	_____	_____	_____	_____	_____	_____	_____
22	[632]	_____	_____	_____	_____	_____	_____	_____	_____
23	[633]	_____	_____	_____	_____	_____	_____	_____	_____
24	[634]	_____	_____	_____	_____	_____	_____	_____	_____
25	[635]	_____	_____	_____	_____	_____	_____	_____	_____
26	[636]	_____	_____	_____	_____	_____	_____	_____	_____
27	[637]	_____	_____	_____	_____	_____	_____	_____	_____
28	[638]	_____	_____	_____	_____	_____	_____	_____	_____
29	[639]	_____	_____	_____	_____	_____	_____	_____	_____
30	[640]	_____	_____	_____	_____	_____	_____	_____	_____
31	[641]	_____	_____	_____	_____	_____	_____	_____	_____
32	[642]	_____	_____	_____	_____	_____	_____	_____	_____

		REM1/REM2/RAC1/RAC2/REM15			
					
Default Data		1	B	C	Disabled
RC #	Section				
All	[610]	_____	_____	_____	_____
1	[611]	_____	_____	_____	_____
2	[612]	_____	_____	_____	_____
3	[613]	_____	_____	_____	_____
4	[614]	_____	_____	_____	_____
5	[615]	_____	_____	_____	_____
6	[616]	_____	_____	_____	_____
7	[617]	_____	_____	_____	_____
8	[618]	_____	_____	_____	_____
9	[619]	_____	_____	_____	_____
10	[620]	_____	_____	_____	_____
11	[621]	_____	_____	_____	_____
12	[622]	_____	_____	_____	_____
13	[623]	_____	_____	_____	_____
14	[624]	_____	_____	_____	_____
15	[625]	_____	_____	_____	_____
16	[626]	_____	_____	_____	_____
17	[627]	_____	_____	_____	_____
18	[628]	_____	_____	_____	_____
19	[629]	_____	_____	_____	_____
20	[630]	_____	_____	_____	_____
21	[631]	_____	_____	_____	_____
22	[632]	_____	_____	_____	_____
23	[633]	_____	_____	_____	_____
24	[634]	_____	_____	_____	_____
25	[635]	_____	_____	_____	_____
26	[636]	_____	_____	_____	_____
27	[637]	_____	_____	_____	_____
28	[638]	_____	_____	_____	_____
29	[639]	_____	_____	_____	_____
30	[640]	_____	_____	_____	_____
31	[641]	_____	_____	_____	_____
32	[642]	_____	_____	_____	_____

WARNING: When section [610] is accessed, the control panel will copy the saved value of that section to all remote controls.

User Assignment for Remote Controls

Table 23: User assignment per remote control

Section	Description	Section	Description	Section	Description	Section	Description
[651]	RC 1 for user 1	[659]	RC 9 for user 9	[667]	RC 17 for user 17	[675]	RC 25 for user 25
[652]	RC 2 for user 2	[660]	RC 10 for user 10	[668]	RC 18 for user 18	[676]	RC 26 for user 26
[653]	RC 3 for user 3	[661]	RC 11 for user 11	[669]	RC 19 for user 19	[677]	RC 27 for user 27
[654]	RC 4 for user 4	[662]	RC 12 for user 12	[670]	RC 20 for user 20	[678]	RC 28 for user 28
[655]	RC 5 for user 5	[663]	RC 13 for user 13	[671]	RC 21 for user 21	[679]	RC 29 for user 29
[656]	RC 6 for user 6	[664]	RC 14 for user 14	[672]	RC 22 for user 22	[680]	RC 30 for user 30
[657]	RC 7 for user 7	[665]	RC 15 for user 15	[673]	RC 23 for user 23	[681]	RC 31 for user 31
[658]	RC 8 for user 8	[666]	RC 16 for user 16	[674]	RC 24 for user 24	[682]	RC 32 for user 32

Assigning a Remote Control

1. Enter the remote's respective section (see table 23).
2. Press any button on the designated remote twice, or manually enter the serial number.

Deleting a Remote Control

1. Enter the remote's respective section (see table 23).
2. Enter **000000**.

NOTE: To view a remote control's serial number, see section [960] in *Description of Sections [950], [955], and [960]* on page 51.

Wireless Siren Programming

Use the following section to program wireless sirens for your MG/SP control panel.

Wireless Siren Assignment

Use worksheet 27 to record your settings when assigning wireless sirens.

Worksheet 27: Wireless Siren Assignment

Section	Description	Wireless Siren Serial Number	Section	Description	Wireless Siren Serial Number
[683]	Siren 1	___/___/___/___/___	[685]	Siren 3	___/___/___/___/___
[684]	Siren 2	___/___/___/___/___	[686]	Siren 4	___/___/___/___/___

Wireless Siren Signal Strength

The signal strength for wireless keypads is visible in sections [687] to [690]; these sections represent sirens 1 through 4, respectively. To view the signal strength:

1. Enter the wireless siren's respective section (e.g., for siren 1, enter section [687]).
2. Note the number of beeps which are emitted. As shown in table 21, the number of beeps correspond to a preset signal strength range.

Table 24: Signal strength indicator for wireless sirens

Number of Beeps	Signal Strength	Result
3	8 to 10	Strong signal
2	5 to 7	Average signal
1	1 to 4	Weak signal (relocate)

NOTE: The visual representation of a siren's signal strength is dependent on the type of keypad. For LED keypads, zones 1 through 10 will illuminate, depending on the signal strength. For instance, a signal strength of 8 will result in zones 1 through 8 to illuminate. For LCD keypads, a ten-level progress bar composed of arrows will appear, followed by the numeric value. For a signal strength of 8, eight arrows will appear, followed by the number 8.

Wireless Siren Labels

Use worksheet 28 to record your settings for wireless siren labels. To reset these labels, see *Description of Section [965]* on page 51.

Worksheet 28: Wireless Siren Labels

Section	Description	Wireless Siren Label	Section	Description	Wireless Siren Label
[691]	Siren 1	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	[693]	Siren 3	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___
[692]	Siren 2	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___	[694]	Siren 4	___/___/___/___/___/___/___/___/___/___/___/___/___/___/___

NOTE: For special characters and keypad letter assignments, see *Label Programming with LCD Keypads* on page 52.

Cancelling the Tamper Supervision for Wireless Sirens

To cancel tamper supervision, access section [695], and then press **ENTER**. The tamper supervision is disabled until the cover is replaced or after 30 minutes have elapsed.

Description of Sections [700] to [704]


The following section provides information on sections [700] to [704]. See table 25 for details. For keypad programming instructions, refer to  on page 7.

Table 25: Description of sections [700] to [704]

	Option		OFF		ON		
	Option	Option Type	Description				
Section [700]	1	Partitioning	Partitioning	▲ Disabled	<input type="checkbox"/> Enabled		
	2	General system options	Battery charging, 350 mA or 700 mA (not applicable to SP4000 and SP65)	▲ 350 mA	<input type="checkbox"/> 700 mA		
	3		Audible trouble warning (except AC failure)	▲ Disabled	<input type="checkbox"/> Enabled		
	4		Audible trouble warning on AC failure	▲ Disabled	<input type="checkbox"/> Enabled		
	5	RF jamming supervision	RF jamming supervision	▲ Disabled	<input type="checkbox"/> Enabled		
	6	General system options	Exit delay termination	▲ Disabled	<input type="checkbox"/> Enabled		
	7		Tamper supervision on the bus module	▲ Disabled	<input type="checkbox"/> Enabled		
	8	Future use	-	-	-	-	
Section [702]	1	Panic options	Panic 1	▲ Disabled	<input type="checkbox"/> Enabled		
	2		Panic 2	▲ Disabled	<input type="checkbox"/> Enabled		
	3		Panic 3	▲ Disabled	<input type="checkbox"/> Enabled		
	4		Panic 1: report only or audible alarm	▲ Report only	<input type="checkbox"/> Audible		
	5		Panic 2: report only or audible alarm	▲ Report only	<input type="checkbox"/> Audible		
	6		Panic 3: report only or audible alarm	▲ Report only	<input type="checkbox"/> Audible		
	7	Future use	-	-	-	-	
	8	Future use	-	-	-	-	
Section [704]	1	Arming/disarming options	Regular arming switches to force arming	<input type="checkbox"/> Disabled	▲ Enabled		
	2		Stay arming switches to stay force arming	<input type="checkbox"/> Disabled	▲ Enabled		
	3		Sleep arming switches to sleep force arming	<input type="checkbox"/> Disabled	▲ Enabled		
	4		Bell squawk when arm/disarm with remote	▲ Disabled	<input type="checkbox"/> Enabled		
	5	Keypad options 3	Bell squawk when arm/disarm with a keypad	▲ Disabled	<input type="checkbox"/> Enabled		
	6		Beep on exit delay	<input type="checkbox"/> Disabled	▲ Enabled		
	7		No exit delay beeps and no bell squawk, when stay/sleep arm	<input type="checkbox"/> Disabled	▲ Enabled		
	8		Arming/disarming options	No exit delay when arm with remote	▲ Disabled	<input type="checkbox"/> Enabled	
Section [701]	1	Access/master code options	Access code length	<input type="checkbox"/> 6 digits	▲ 4 digits		
	2		Lock master code	▲ Disabled	<input type="checkbox"/> Enabled		
	3	Keypad options 1	Confidential mode	▲ Disabled	<input type="checkbox"/> Enabled		
	4		To exit confidential mode	▲ Enter code	<input type="checkbox"/> Press a key		
	5		Confidential mode timer	▲ 2 mins.	<input type="checkbox"/> 5 secs.		
	6	REM2 version number	REM2 version number	<input type="checkbox"/> V2.00	▲ V2.01 or higher		
	7	Keypad options 1	Display entry delay on LCD keypad	<input type="checkbox"/> Disabled	▲ Enabled		
	8		Display exit delay on LCD keypad	<input type="checkbox"/> Disabled	▲ Enabled		
Section [703]	1	Keypad options 2	One-touch regular arming (also REM3)	<input type="checkbox"/> Disabled	▲ Enabled		
	2		One-touch stay arming (also REM3)	<input type="checkbox"/> Disabled	▲ Enabled		
	3		One-touch sleep arming (also REM3)	<input type="checkbox"/> Disabled	▲ Enabled		
	4		One-touch bypass programming	<input type="checkbox"/> Disabled	▲ Enabled		
	5	Arming/disarming options	Restrict arming on battery failure	▲ Disabled	<input type="checkbox"/> Enabled		
	6		Restrict arming on tamper failure (zone + bus module + wireless PGM)	▲ Disabled	<input type="checkbox"/> Enabled		
	7		Restrict arming on supervision trouble; wireless zones & PGM + bus module	▲ Disabled	<input type="checkbox"/> Enabled		
	8	Arm/disarm with VDMP3	Arm/disarm with VDMP3	<input type="checkbox"/> Disabled	▲ Enabled		

▲ = Default

Zone Options

Use the following section to program zone options for your MG/SP control panel.

ATZ Options

Table 26: Description of section [705]

Option	Description	OFF		ON		
Section [705]	1	ATZ zone doubling	▲	Disabled	<input type="checkbox"/> Enabled	
	2	ATZ wiring options	▲	Series	<input type="checkbox"/> Parallel	
	3	Tamper recognition	(see table 27 for details)			
	4					
	5	Generate tamper on bypassed zone	<input type="checkbox"/>	No	▲	Yes
	6	Supervision options	(see table 27 for details)			
	7					
	8	Generate supervision on bypassed zone	<input type="checkbox"/>	No	▲	Yes

▲= Default

Table 27: Description of options 3 & 4 and 6 & 7, in section [705]

Option		Description	
3	4	RF Zone/Hardwired Zone Tamper Recognition Options	Keypad/Bus Module Tamper Recognition Options*
OFF	OFF	Disabled	Disabled
OFF	ON	Trouble only	Trouble only
ON	OFF	When disarmed: trouble only; when armed: follow zone's alarm type	Trouble only
ON	ON	When disarmed: audible alarm; when armed: follow zone's alarm type	Audible alarm
6	7	RF Zone Supervision Options	Keypad/Bus Module Supervision Options
OFF	OFF	Disabled	Disabled
OFF	ON	Trouble only	Trouble only
ON	OFF	When disarmed: trouble only; when armed: follow zone's alarm type	Trouble only
ON	ON	When disarmed: audible alarm; when armed: follow zone's alarm type	Audible alarm

* Tamper recognition of keypad/bus module, only if section [700], option 7, is enabled.

General Zone Options

Table 28: Description of section [706]

Option	Description	OFF		ON	
Section [706]	1	Check-in supervision time	▲	24 hours	<input type="checkbox"/> 80 minutes
	2	EOL resistors (applies to all hardwired zones – panel, keypad, ZX8)	▲	Disabled	<input type="checkbox"/> Enabled
	3	Zone input 1 becomes a two-wire smoke input (except SP4000, SP5500, and SP65)	▲	Disabled	<input type="checkbox"/> Enabled
	4	ZX8 ID A (panel + 1) input 1	▲	Zone input	<input type="checkbox"/> Tamper input
	5	ZX8 ID B (panel + 9) input 1	▲	Zone input	<input type="checkbox"/> Tamper input
	6	ZX8 ID C (panel + 17) input 1	▲	Zone input	<input type="checkbox"/> Tamper input

▲= Default

System Timers

Use the following section to program system timers on your MG/SP control panel. Use worksheet 29 to record your settings.

Worksheet 29: System Timers

Section	Data	Description	Section	Data	Description
[710]	___/___/___ 000 to 255 seconds	Entry delay 1 (default: 045)	[715]	___/___/___ 000 to 255	Recycle alarm counter (default: 000)
[711]	___/___/___ 000 to 255 seconds	Entry delay 2 (default: 045)	[718]	___/___/___ 000 to 255 seconds	Remote panic disarm lock delay (default: 000)
[712]	___/___/___ 000 to 015	Auto-zone shutdown counter (default: 005)	[719]	___/___/___ 000 to 255 days	Closing delinquency delay (default: 000)
[713]	___/___/___ 000 to 255 seconds	Intellizone delay (default: 048)	[720]	___/___/___ 000 to 255 seconds	Flex-instant delay (default: 015)
[714]	___/___/___ 000 to 255 minutes	Recycle alarm delay (default: 000)	[721]	___/___/___ 000 to 255 seconds	For StayD: re-arm delay (default: 005)

Keypad Lockout

Use the following section to program keypad lockout settings for your MG/SP control panel. Use worksheet 30 to record your settings.

Worksheet 30: Keypad Lockout

Section	Data	Description	Default
[716]	___/___/___ 000 to 255 minutes	Keypad lockout delay	000
[717]	___/___/___ 000 to 255 attempts before locking	Keypad lockout counter	000

Programming the Daylight Savings Feature

Use the following section to program Daylight Savings Time on your MG/SP control panel. Use worksheet 31 to record your settings.

Table 29: Description of section [730]

Section	Option	Description	OFF	ON
[730]	1	Daylight savings (not applicable to SP4000 and SP65)	▲ Disabled	□ Enabled

▲ = Default

Country Codes

Table 30 lists countries and their respective codes. This information is required when programming section [731] (see worksheet 31 for details).

Table 30: Country codes for MG/SP control panels

Input Value	Country
00	Mexico; St. Johns; Bahamas; Turks and Caicos
01	Cuba
02	Brazil
03	Chile
04	Falkland Islands
05	Paraguay
06	European Union; United Kingdom; Greenland
07	Russia and surrounding countries
08	South Australia; Victoria; Australian Capital Territory; New South Wales
09	Tasmania; Lord Howe Island
10	Chatham
11	Tonga
12	Iraq; Syria
13	Israel
14	Lebanon; Kyrgyzstan
15	Palestine
16	Egypt
17	Namibia
18	Canada; United States
19	New Zealand

Customized Daylight Savings Features

In addition to using the default Daylight Saving Time (DST) settings in section [731], you can also set a customized DST. In sections [732] and [733], you can program DST starting and ending periods, respectively. Both these sections recognize five different entries, consisting of two digits each. All entries must be made in the following order:

- Month:** 01 to 12, where 01 represents January
- Date:** 01 to 31, where 01 represents the first day of the month
- Day:** 00 to 07, where 00 is the default setting and 01 represents Sunday
- Hours:** 00 to 23, where 00 represents 12:00 AM
- Minutes:** 00 only, where 00 represents the top of the hour (e.g., 12:00 AM)

NOTE: If the *Day* value is set to 00, it is ignored and the DST change will only respect the *Date* value. If the *Day* setting is set to a value other than 00 (e.g., 03 for Tuesday), the DST time change will occur on the first Tuesday following the programmed *Date* value.

Worksheet 31: Daylight Savings Time

Section	Data	Description
[731]	___/___ 00 to 99	Country code
[732]	___/___/___/___/___/___/___/___/___/___	DST starting period
[733]	___/___/___/___/___/___/___/___/___/___	DST ending period

NOTE: If sections [732] and [733] have been modified, but you want to revert to a standard DST code, change all settings in sections [732] and [733] to 00.

Table 36: Auto-test report transmission options (section [801])

	Option		Description
	3	4	
1	OFF	OFF	Transmit the test report code when the days programmed in section [840] have elapsed, at the time programmed in section [850] (default).
2	OFF	ON	When disarmed: transmit test report code when the time programmed in section [852] has elapsed. When armed: transmit test report code when the time programmed in section [851] has elapsed.
3	ON	OFF	The control panel will transmit the test report code every hour, on the minute value programmed in section [850] (the last two digits); the first two digits of section [850] will be ignored. For example, if 10:25 was programmed into section [850], the test report code would be transmitted at the 25th minute of every hour, i.e., 11:25, 12:25, etc.
4	ON	ON	The test report code will be transmitted when the conditions in entries 2 or 3 above (option 3 = OFF and option 4 = ON; option 3 = ON and option 4 = OFF), are met.

Event Call Direction Options

Table 37: Description of event call direction options (sections [802] to [804])

	Option	Description	OFF	ON
Section [802] Event Call Direction Options 1	1	Call tel. #1/monitoring rcvr. #1 for arm/disarm report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	2	Call tel. #2/monitoring rcvr. #2 for arm/disarm report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	3	Call pager for arm/disarm report codes	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	5	Call tel. #1/monitoring rcvr. #1 for alarm/restore report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	6	Call tel. #2/monitoring rcvr. #2 for alarm/restore report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	7	Call pager for alarm/restore report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	Section [804] Event Call Direction Options 3	1	Call tel. #1/monitoring rcvr. #1 for special report codes	<input type="checkbox"/> Disabled
2		Call tel. #2/monitoring rcvr. #2 for special report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
3		Call pager for special report codes	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
5		Call personal tel. # on zone alarm (burglary/fire)	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
6		Call personal tel. # on panic alarms	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
7		Call personal tel. # on paramedic alarms	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
8		Call personal tel. # on panel power trouble	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled

	Option	Description	OFF	ON
Section [803] Event Call Direction Options 2	1	Call tel. #1/monitoring rcvr. #1 for tamper/restore report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	2	Call tel. #2/monitoring rcvr. #2 for tamper/restore report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	3	Call pager for tamper/restore report codes	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
	5	Call tel. #1/monitoring rcvr. #1 for trouble/restore report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	6	Call tel. #2/monitoring rcvr. #2 for trouble/restore report codes	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	7	Call pager for trouble/restore report codes	<input checked="" type="checkbox"/> Disabled	<input type="checkbox"/> Enabled

▲ = Default

GSM Options

Table 38: Description of GSM options (PCS series)

	Option	Description	OFF		ON		Option	Primary	Backup	Option		Description	
	1 & 2	3 & 4	5	6	1	2				5	6		
Section [805]	1 & 2	GSM reporting	<input type="checkbox"/>	See options 1 & 2, on right	<input type="checkbox"/>	See options 1 & 2, on right	OFF	OFF	Landline	Landline	OFF	OFF	Disabled
	3 & 4	Future use	-	-	-	-	OFF	ON	Landline	GSM	OFF	ON	Trouble only
	5 & 6	GSM no service trouble feedback	<input type="checkbox"/>	See options 5 & 6, on right	<input type="checkbox"/>	See options 5 & 6, on right	ON	OFF	GSM	Landline	ON	OFF	When disarmed: trouble only; when armed: audible alarm
	7	Future use	-	-	-	-	ON	ON	GSM	GSM	ON	ON	Silent alarm becomes audible alarm
	8	GSM RF jamming supervision	<input type="checkbox"/>	Disabled	<input checked="" type="checkbox"/>	Enabled							

▲ = Default

VDMP3 Options

Use worksheet 39 to record your setting for section [841]. For additional VDMP3 options, see worksheet 38.

Worksheet 39: VDMP3 Maximum Attempts

Section	Data	Description	Default	
[841]	___/___/___	000 to 032	Maximum voice dialing attempts	008

Test Report and Report Delays

Use worksheet 40 to record your settings for sections [850] to [852]. For additional timers, see worksheets 38 and 49 on pages 42 and 49, respectively.

Worksheet 40: Test Report and Report Delays

Section	Data	Description	Default	
[850]	___/___/___	HH:MM	Auto test report time of day (see table 36 on page 41)	00:00
[851]	___/___/___	000 to 255 minutes	Armed report delay	005
[852]	___/___/___	000 to 255 minutes	Disarmed report delay	060

GSM Settings

Use worksheet 41 to record your settings for sections [855] to [856]. See table 41 on page 43 for applicable SMS language codes.

Worksheet 41: GSM Settings (PCS series)

Section	Data	Description	Default	
[855]	___/___/___	000 to 255 x 2 seconds	GSM no service timer	016
[856]	___/___/___	000 to 255	SMS language (see table 41 for SMS language codes)	000

Table 41: SMS language codes for GSM settings

Input Value	SMS Language	Input Value	SMS Language	Input Value	SMS Language	Input Value	SMS Language	Input Value	SMS Language
000	English	005	Polish	010	Czech	015	Russian	020	Serbian
001	French	006	Portuguese	011	Dutch	016	Bulgarian	021 to 255	Future use
002	Spanish	007	German	012	Croatian	017	Romanian		
003	Italian	008	Turkish	013	Greek	018	Slovak		
004	Swedish	009	Hungarian	014	Hebrew	019	Chinese		

System and Communication Report Codes

Use the following section to program system report codes, as well as additional communication report codes on your MG/SP control panel.

Entering Report Codes

- **For Ademco slow, Silent Knight, SESCOA, and Ademco express formats**, key-in the desired two-digit hex value from 00 to FF.
- **For Ademco Programmable Format**, enter the desired two-digit hex value, found in table 43 on page 45. Entering FF will set the report code to those outlined in table 44 on page 47.
- **For Ademco All Codes Format**, the control panel automatically generates report codes from the ones found in table 44 on page 47.

Special Arming and Disarming Report Codes

Use worksheet 42 to record your settings for special arming and disarming report codes.

Worksheet 42: Special Arming and Disarming Report Codes

Section	Data	Description	Section	Data	Description	Section	Data	Description
[860]	___/___	Auto-arming	[861]	___/___	Quick arming	[862]	___/___	Cancel auto-arm
	___/___	Late to close		___/___	Arming via PC		___/___	Disarming via PC
	___/___	No movement		___/___	Arming with keyswitch		___/___	Cancel alarm with user, or WinLoad/BabyWare
	___/___	Partial arming		___/___	-		___/___	Cancel paramedic

Default: FF

Special Alarm Report Codes

Use worksheet 43 to record your settings for special alarm report codes.

Worksheet 43: Special Alarm Report Codes

Section	Data	Description	Section	Data	Description
[863]	___/___	Emergency panic	[864]	___/___	Zone shutdown
	___/___	Auxiliary panic		___/___	Duress
	___/___	Fire panic		___/___	Keypad lockout
	___/___	Recent closing		___/___	Paramedic alarm

Default: FF

System Trouble Report Codes

Use worksheet 44 to record your settings for system trouble report codes.

Worksheet 44: Special Trouble Report Codes

Section	Data	Description	Section	Data	Description	Section	Data	Description
[865]	___/___	-	[866]	___/___	Bell output overload	[867]	___/___	Fail to communicate
	___/___	AC failure		___/___	Bell output disconnected		___/___	RF jamming
	___/___	Battery failure		___/___	Timer loss		___/___	Module lost
	___/___	Auxiliary supply		___/___	Fire loop trouble		___/___	Module tamper
[868]	___/___	Module power fail	[869]	___/___	Wireless module supervision lost*	Default: FF		
	___/___	Module low/no battery*		___/___	Wireless module tamper*	* Does not apply to SP4000.		
	___/___	Wireless zone low battery		___/___	-			
	___/___	Wireless zone supervision lost		___/___	-			

System Trouble Restore Codes

Use worksheet 45 to record your settings for system trouble restore codes.

Worksheet 45: System Trouble Restore Codes

Section	Data	Description	Section	Data	Description	Section	Data	Description
[870]	___/___	TLM	[871]	___/___	Bell output overload	[872]	___/___	Fail to communicate
	___/___	AC failure		___/___	Bell output disconnect		___/___	RF jamming
	___/___	Battery failure		___/___	Timer loss		___/___	Module lost
	___/___	Auxiliary supply		___/___	Fire loop trouble		___/___	Module tamper
[873]	___/___	Module power fail	[874]	___/___	Wireless module supervision lost*	Default: FF		
	___/___	Module low/no battery*		___/___	Wireless module tamper*	* Does not apply to SP4000.		
	___/___	Wireless zone low battery		___/___	-			
	___/___	Wireless zone supervision lost		___/___	-			

System Special Report Codes

Use worksheet 46 to record your settings for system special report codes.

Worksheet 46: System Special Report Codes

Section	Data	Description	Section	Data	Description	Section	Data	Description
[875]	___/___	Cold start	[876]	___/___	Installer in	[878]	___/___	Disarm with keyswitch
	___/___	Test report		___/___	Installer out		___/___	Disarm with keyswitch after alarm
	___/___	-		___/___	Closing delinquency		___/___	Alarm cancelled with keyswitch
	___/___	Software out		___/___	-		___/___	-

Default: FF

NOTE: For report code formatting instructions, see *Entering Report Codes* on page 43.

Installer Function Keys

Table 42: Description of installer functions for MG/SP keypads

Function	Action	Description
Test report	ENTER + installer code + ENTER	Sends the <i>Test Report</i> report code programmed in section [875] , to the monitoring station.
Cancel communication	ENTER + installer code + STAY	Cancels all communication with the WinLoad/BabyWare software or with the monitoring station, until the next reportable event.
Answer WinLoad/BabyWare software	ENTER + installer code + SLEEP	Will force the console to answer an incoming call from the monitoring station, which is using the WinLoad/BabyWare software.
Call WinLoad/BabyWare software	ENTER + installer code + BYP	Will dial the PC telephone number programmed in section [915] , thereby initiating communication with a computer using the WinLoad software.
Installer test mode	ENTER + installer code + TBL	This mode allows to perform walk tests, where the siren will squawk to indicate opened zones. To exit, press TBL .

Contact ID Report Codes

Table 43: Ademco contact ID report codes

Type	CID #	Reporting Code	Value
Medical Alarms (100)	100	Medical alarm	01
	101	Pendant transmitter	02
	102	Fail to report in	03
Fire Alarms (110)	110	Fire Alarm	04
	111	Smoke	05
	112	Combustion	06
	113	Water Flow	07
	114	Heat	08
	115	Pull Station	09
	116	Duct	0A
	117	Flame	0B
	118	Near Alarm	0C
Panic Alarms (120)	120	Panic alarm	0D
	121	Duress	0E
	122	Silent	0F
	123	Audible	10
	124	Duress - access granted	11
	125	Duress - egress granted	12
Burglar Alarms (130)	130	Burglary	13
	131	Perimeter	14
	132	Interior	15
	133	24-hour	16
	134	Entry/exit	17
	135	Day/night	18
	136	Outdoor	19
	137	Tamper	1A
138	Near alarm	1B	
139	Intrusion verifier	1C	
General Alarms (140)	140	General alarm	1D
	141	Polling loop open	1E
	142	Polling loop short	1F
	143	Extension module failure	20
	144	Sensor tamper	21
	145	Expansion module tamper	22
	146	Silent burglary	23
	147	Sensor supervision failure	24

Table 43: Ademco contact ID report codes (Continued)

Type	CID #	Reporting Code	Value	
24-hour Non-burglary (150 & 160)	150	24-hour non-burglary	25	
	151	Gas detected	26	
	152	Refrigeration	27	
	153	Loss of heat	28	
	154	Water leakage	29	
	155	Foil break	2A	
	156	Day trouble	2B	
	157	Low bottled gas level	2C	
	158	High temperature	2D	
	159	Low temperature	2E	
	161	Loss of air flow	2F	
	162	Carbon monoxide detected	30	
	163	Tank level	31	
	Fire Supervisory (200 & 210)	200	Fire supervisory	32
		201	Low water pressure	33
202		Low CO2	34	
203		Gate valve sensor	35	
204		Low water level	36	
205		Pump activated	37	
206		Pump failure	38	
300		System trouble	39	
System Troubles (300 & 310)	301	AC loss	3A	
	302	Low system battery	3B	
	303	RAM checksum bad	3C	
	304	ROM checksum	3D	
	305	System reset	3E	
	306	Panel program changed	3F	
	307	Self-test failure	40	
	308	System shutdown	41	
	309	Battery test failure	42	
	310	Ground fault	43	
	311	Battery missing/dead	44	
	312	Powr. supply over current limit	45	
	313	Engineer reset	46	
Sounder/Relay Troubles (320)	320	Sounder relay	47	
	321	Bell 1	48	
	322	Bell 2	49	
	323	Alarm relay	4A	
	324	Trouble relay	4B	
	325	Reversing relay	4C	
	326	Notification appliance chk. #3	4D	
	327	Notification appliance chk. #4	4E	

Table 43: Ademco contact ID report codes (Continued)

Type	CID #	Reporting Code	Value	
System Peripheral Troubles (330 & 340)	330	System peripheral	4F	
	331	Polling loop open	50	
	332	Polling loop short	51	
	333	Expansion module failure	52	
	334	Repeater failure	53	
	335	Local printer paper out	54	
	336	Local printer failure	55	
	337	Exp. module DC loss	56	
	338	Exp. module low battery	57	
	339	Exp. module reset	58	
	341	Exp. module tamper	59	
	342	Exp. module AC loss	5A	
	343	Exp. module self-test fail	5B	
	344	RF receiver jam detected	5C	
	Communication Troubles (350 & 360)	350	Communication	5D
351		Telco fault 1	5E	
352		Telco fault 2	5F	
353		Long range radio	60	
354		Fail to communicate	61	
355		Loss of radio supervision	62	
356		Loss of central polling	63	
357		Long range radio VSWR problem	64	
Protection Loop Troubles (370)		370	Protection loop	65
		371	Protection loop open	66
		372	Protection loop short	67
		373	Fire trouble	68
		374	Exit error alarm	69
	375	Panic zone trouble	6A	
	376	Hold-up zone trouble	6B	
	377	Swinger trouble	6C	
	378	Cross-zone trouble	6D	
	Sensor Troubles (380 & 390)	380	Sensor trouble	6E
		381	Loss of supervision - RF	6F
382		Loss of supervision - RPM	70	
383		Sensor tamper	71	
384		RF transmitter low battery	72	
385		Smoke detector hi sensitivity	73	
386		Smoke detector low sensitivity	74	
387		Intrusion detector hi sensitivity	75	
388		Intrusion detector low sensitivity	76	
389		Sensor self-test failure	77	
391		Sensor watch trouble	78	
392		Drift compensation error	79	
393		Maintenance alert	7A	

Table 43: Ademco contact ID report codes (Continued)

Type	CID #	Reporting Code	Value
Open/Close (400)	400	Open/close	7B
	401	Open/close by user	7C
	402	Group open/close	7D
	403	Automatic open/close	7E
	406	Cancel	7F
	407	Remote arm/disarm	80
	408	Quick arm	81
	409	Keyswitch open/close	82
	Remote Access (410)	411	Call back request made
412		Successful - download access	84
413		Unsuccessful access	85
414		System shutdown	86
415		Dialer shutdown	87
416		Successful upload	88
Access Control (420 & 430)	421	Access denied	89
	422	Access report by user	8A
	423	Forced access	8B
	424	Egress denied	8C
	425	Egress granted	8D
	426	Access door propped open	8E
	427	Access point door status monitor trouble	8F
	428	Access point request to exit	90
	429	Access program mode entry	91
	430	Access program mode exit	92
	431	Access threat level change	93
	432	Access relay/trigger fail	94
	433	Access RTE shunt	95
	434	Access DSM shunt	96
Arming (440 & 450)	441	Armed stay	97
	442	Keyswitch armed stay	98
	450	Exception open/close	99
	451	Early open/close	9A
	452	Late open/close	9B
	453	Failed to open	9C
	454	Failed to close	9D
	455	Auto-arm failed	9E
	456	Partial arm	9F
	457	User exit error	A0
System (460)	458	User on premises	A1
	459	Recent close	A2
	461	Wrong code entry	A3
	462	Legal code entry	A4
	463	Re-arm after alarm	A5
	464	Auto-arm time extended	A6
	465	Panic alarm reset	A7
	466	Service ON/OFF premises	A8

Table 43: Ademco contact ID report codes (Continued)

Type	CID #	Reporting Code	Value
Sounder Relay Disabled (520)	520	Sounder/relay disabled	A9
	521	Bell 1 disabled	AA
	522	Bell 2 disabled	AB
	523	Alarm relay disabled	AC
	524	Trouble relay disabled	AD
	525	Reversing relay disabled	AE
	526	Notification appliance chk. #3 disabled	AF
	527	Notification appliance chk. #4 disabled	B0
Modules (530)	531	Module added	B1
	532	Module removed	B2
Communication Disabled (550 & 560)	551	Dialer disabled	B3
	552	Radio transmitter disabled	B4
	570	Zone bypass	B5
Bypasses (570)	571	Fire bypass	B6
	572	24-hour zone bypass	B7
	573	Burglary bypass	B8
	574	Group bypass	B9
	575	Swinger bypass	BA
	576	Access zone shunt	BB
	577	Access point bypass	BC

Table 43: Ademco contact ID report codes (Continued)

Type	CID #	Reporting Code	Value
Test/Misc (600)	601	Manual trigger test	BD
	602	Periodic test report	BE
	603	Periodic RF transmission	BF
	604	Fire test	C0
	605	Status report to follow	C1
	606	Listen-in to follow	C2
	607	Walk test mode	C3
	608	Periodic test - system trouble present	C4
	609	Video transmitter active	C5
	611	Point test OK	C6
	612	Point not tested	C7
	613	Intrusion zone walk tested	C8
	614	Fire zone walk tested	C9
	615	Panic zone walk tested	CA
	616	Service request	CB
	621	Event log reset	CC
	622	Event log 50% full	CD
	623	Event log 90% full	CE
	624	Event log overflow	CF
	625	Time/date reset	D0
	626	Time/date inaccurate	D1
	627	Program mode entry	D2
	628	Program mode exit	D3
	629	32-hour event log marker	D4
	630	Schedule change	D5
	631	Exception schedule change	D6
	632	Access schedule change	D7
	654	System inactivity	D8

Automatic Report Codes

Table 44: List of automatic report codes

System Event	Default Contact ID Report Code		Default SIA Report Code	
Arming with user code (##)	3 4A1	Close by user	CL	Closing report
Auto arming	3 4A3	Automatic close	CA	Automatic closing
Late to close	3 452	Late to close	OT	Late to close
No movement	3 452	Late to close	NA	No activity
Partial arming	1 456	Group bypass	CG	Close area
Quick arming	3 4A8	Quick arm	CL	Closing report
Arm with PC software	3 4A7	Remote arm/disarm	CQ	Remote arming
Keyswitch arming	3 4A9	Keyswitch arming	CS	Keyswitch arming
Disarm with user code (##)	1 4A1	Open by user	OP	Opening report
Disarm after alarm with user code (##)	1 4A1	Open by user	OP	Opening report
Cancel alarm with user code (##)	1 4A6	Cancel by user	OR	Disarm from alarm
Auto arming cancellation	1 464	Deferred open/close	CE	Closing extend
Disarm with PC software	1 4A7	Remote arm/disarm	OQ	Remote disarming
Disarm after an alarm with PC software	1 4A7	Remote arm/disarm	OR	Disarm from alarm
Cancel alarm with PC software	1 4A6	Cancel by user	OR	Disarm from alarm
Cancel paramedic alarm	1 4A6	Cancel by user	MH	Medical alarm restore
Keyswitch disarm	1 4A9	Keyswitch disarm	OS	Keyswitch disarm
Keyswitch disarm after alarm	1 4A1	Keyswitch disarm after alarm	OS	Keyswitch disarm after alarm
Keyswitch cancel alarm	1 4A6	Keyswitch cancel alarm	OS	Keyswitch cancel alarm
Zone bypassed (##)	1 57A	Zone bypass	UB	Untyped zone bypass
Zone alarm (##)	1 13A	Burglary alarm	BA	Burglary alarm
Fire alarm (##)	1 11A	Fire alarm	FA	Fire alarm
Zone alarm restore (##)	3 13A	Burglary alarm restore	BH	Burglary alarm restore
Fire alarm restore (##)	3 11A	Fire alarm restore	FH	Fire alarm restore
24-hr gas alarm (##)	1 151	Gas detected	GA	Gas alarm
24-hr heat alarm (##)	1 153	Loss of heat	KA	Heat alarm
24-hr water alarm (##)	1 154	Water leakage	WA	Water alarm
24-hr freeze alarm (##)	1 152	Refrigeration	ZA	Freeze alarm
24-hr gas alarm restore (##)	3 151	Gas restore	GR	Gas alarm restore
24-hr heat alarm restore (##)	3 153	Heat restore	KR	Heat alarm restore
24-hr water alarm restore (##)	3 154	Water restore	WR	Water alarm restore
24-hr freeze alarm restore (##)	3 152	Freeze restore	ZR	Freeze alarm restore
24-hr hold-up alarm	1 12A	Panic alarm	PA	Panic alarm
24-hr hold-up alarm restore	3 12A	Panic alarm restore	PR	Panic restore
Panic 1: emergency	1 12A	Panic alarm	PA	Panic alarm
Panic 2: medical	1 1AA	Medical alarm	MA	Medical alarm
Panic 3: fire	1 115	Pull station	FA	Fire alarm
Recent closing	3 459	Open/close	CR	Recent closing
Global zone shutdown	1 575	Group bypass	CG	Close area
Duress alarm	1 121	Duress	HA	Hold-up alarm
Keypad lockout	1 421	Access denied	JA	User code tamper
Zone shutdown (##)	1 57A	Zone bypass	UB	Untyped zone bypass
Zone tampered (##)	1 144	Sensor tamper	TA	Tamper alarm
Zone tamper restore (##)	3 144	Sensor tamper restore	TR	Tamper restoral
TLM Trouble	1 351	Telco 1 fault	LT	Phone line trouble
AC failure	1 3A1	AC loss	AT	AC trouble
Battery failure	1 3A9	Battery test failure	YT	System battery trouble
Auxiliary supply trouble	1 3AA	System trouble	YP	Power supply trouble
Bell output current limit	1 321	Bell 1	YA	Bell fault

Table 44: List of automatic report codes (Continued)

System Event	Default Contact ID Report Code		Default SIA Report Code	
Bell absent	1 321	Bell 1	YA	Bell fault
Clock lost	1 626	Time/date inaccurate	JT	Time changed
Fire loop trouble	1 373	Fire trouble	FT	Fire trouble
Communication fail	1 354	Communication fail	YC	Fail to communicate
RF jamming	1 344	RF receiver jam detection	XQ	RF jamming
GSM/GPRS module RF interference	1 552	Radio transmitter disabled	YS	Communication trouble
GSM/GPRS network failure	1 552	Radio transmitter disabled	YS	Communication trouble
GSM/GPRS supervision lost	1 552	Radio transmitter disabled	YS	Communication trouble
GSM/GPRS fail to communicate	1 354	Communication fails	YC	Fail to communicate
IP network failure	1 552	Radio transmitter disabled	YS	Communication trouble
IP supervision lost	1 552	Radio transmitter disabled	YS	Communication trouble
IP fail to communicate	1 354	Communication fails	YC	Fail to communicate
TLM trouble restore	3 351	Telco 1 fault restore	LR	Phone line restoral
AC failure restore	3 3A1	AC loss restore	AR	AC restoral
Battery failure restore	3 3A9	Battery test restore	YR	System battery restoral
Auxiliary supply trouble restore	3 3AA	System trouble restore	YQ	Power supply restored
Bell output current limit restore	3 321	Bell 1 restore	YH	Bell restored
Bell absent restore	3 321	Bell 1 restore	YH	Bell restored
Clock programmed	3 625	Time/date reset	JT	Time changed
Fire loop trouble restore	3 373	Fire trouble restore	FJ	Fire trouble restore
Fail to communicate with monitoring station restore	3 354	Fail to communicate restore	YK	Communication fails restore
RF jamming restore	3 344	RF receiver jam detection restore	XH	RF jamming restoral
GSM/GPRS module RF interference restore	3 552	Radio transmitter restore	YK	Communication restore
GSM/GPRS network restore	3 552	Radio transmitter restore	YK	Communication restore
GSM/GPRS supervision restore	3 552	Radio transmitter restore	YK	Communication restore
GSM/GPRS fail to communicate restore	3 354	Communication restore	YK	Fail to communicate restore
IP network restore	3 552	Radio transmitter restore	YK	Communication restore
IP supervision restore	3 552	Radio transmitter restore	YK	Communication restore
IP fail to communicate restore	3 354	Communication restore	YK	Fail to communicate restore
Combus fault	1 333	Expansion module failure	ET	Expansion trouble
Module tamper	1 341	Expansion module tamper	TA	Tamper alarm
Module AC fail	1 342	AC failure on module	AT	Module AC fail
Module battery fail	1 338	Battery failure on module	YT	Module battery fail
Bus fault restore	3 333	Expansion module failure restore	ER	Expansion restoral
Module tamper restore	3 341	Expansion module tamper restore	TR	Tamper restoral
Module AC fail restore	3 342	AC restored on module	AR	Module AC fail restore
Module battery fail restore	3 338	Battery failure on module	YR	Module battery fail restore
Cold start	1 3A8	System shutdown	RR	Power up
Test report engaged	1 6A2	Periodic test report	TX	Test report
PC software communication finished	1 412	Successful - download access	RS	Remote program success
Installer on site	1 627	Program mode entry	LB	Local program
Installer programming finished	1 628	Program mode exit	LS	Local program success
Maintenance in	1 627	Program mode entry	LB	Local program
Maintenance out	1 628	Program mode exit	LS	Local program success
Closing delinquency	1 654	System inactivity	CD	System inactivity
Manual trigger test in	1 6A1	Manual trigger test in	TS	Manual trigger test in
Manual trigger test out	3 6A1	Manual trigger test out	TS	Manual trigger test out
Exit error	1 374	Exit error	EE	Exit error
RF module low battery	1 384	RF transmitter low battery	XT	Transmitter battery trouble
RF module battery restore	3 384	RF transmitter battery restore	XR	Transmitter battery restoral

Table 44: List of automatic report codes (Continued)

System Event	Default Contact ID Report Code		Default SIA Report Code	
RF zone supervision lost	1 381	Loss of supervision - RF	US	Untype zone supervision
RF zone supervision restore	3 381	Supervision restore - RF	UR	Untyped zone restoral
RF module supervision lost	1 381	Loss of supervision - RF	US	Untyped zone supervision
RF module supervision restore	3 381	Loss of supervision - RF restore	UR	Untyped zone restoral
RF module tamper	1 145	Expansion module tamper	ES	Expansion device tamper
RF module tamper restore	3 145	Expansion module tamper restore	EJ	Expansion device restore
Paramedic alarm	1 1AA	Medical	MA	Medical alarm
Zone forced	1 57A	Zone forced	XW	Zone forced
Zone included	3 57A	Zone included	UU	Zone included

Communication Report Codes

Use worksheet 47 to record your settings for communication report codes. Sections [879] and [884] apply to both GSM and network (GPRS/GSM) communications. See *Communication Programming* on page 40, for more communication features. In addition, refer to *Description of Sections [966] and [967]* on page 52, for clearing and resetting codes.

Worksheet 47: Communication Report Codes

Section	Data	Description	Section	Data	Description	Section	Data	Description
[879]	___/___	PCS series RF jam	[880]	___/___	-	[884]	___/___	GSM lost communication with panel
	___/___	PCS series no service		___/___	IP100 no service		___/___	-
	___/___	PCS series module supervision lost		___/___	IP100 supervision lost		___/___	-
	___/___	Receiver fail to communicate (GPRS)		___/___	IP receiver fail to communicate		___/___	-

Communication Restore Report Codes

Use worksheet 48 to record your settings for communication restore report codes. Section [881] applies to both GSM and network (GPRS/GSM) communications.

Worksheet 48: Communication Restore Report Codes

Section	Data	Description	Section	Data	Description
[881]	___/___	PCS series RF jam	[882]	___/___	-
	___/___	PCS series no service		___/___	IP100 no service
	___/___	PCS series module supervision lost		___/___	IP100 supervision lost
	___/___	Receiver fail to communicate (GPRS)		___/___	IP receiver fail to communicate

Software Options and Additional Timers

Use the following section to program software options and additional communication timers on your MG/SP control panel.

Table 45: Description of section [900] (WinLoad/BabyWare options)

Section	Option	Description	OFF	ON
[900]	1	Call back	▲ Disabled	□ Enabled
	2	Automatic event buffer transmission	▲ Disabled	□ Enabled

▲ = Default

Additional Communication Timers

Use worksheet 49 to record your settings for sections [901] and [902]. For additional timers, see worksheets 38 and 40. Sections [901] and [902] are also applicable when using a VDMP3 Plug-in Voice Dialer.

Worksheet 49: Additional Communication Timers

Section	Data	Description	Default	
[901]	___/___/___	000 to 255 rings	Number of rings	008
[902]	___/___/___	000 to 255 secs. (max 127)	Answering machine override delay	030

Worksheet 53: IP Receiver 1 Configuration

Section	Data	Description	Default
[929]	__/__/__ . __/__/__ . __/__/__ . __/__/__	WAN1 IP address (e.g., 100.100.100.100); for one or two-digit numbers, add 0s before the first digit	-
[930]	__/__/__/__	WAN1 IP port	10000
[931]	__/__/__ . __/__/__ . __/__/__ . __/__/__	WAN2 IP address	-
[932]	__/__/__/__	WAN2 IP port	-
[933]	__/__/__/__/__/__/__/__/__/__/__/__/__	IP password	123456
[934]	__/_	IP profile (e.g., 01)	-
[935]	To view status or to register, press ARM (see table 46 on page 50)		IP receiver status

Worksheet 54: IP Receiver 2 Configuration

Section	Data	Description	Default
[936]	__/__/__ . __/__/__ . __/__/__ . __/__/__	WAN1 IP address (e.g., 100.100.100.100)	-
[937]	__/__/__/__	WAN1 IP port	10000
[938]	__/__/__ . __/__/__ . __/__/__ . __/__/__	WAN2 IP address	-
[939]	__/__/__/__	WAN2 IP port	-
[940]	__/__/__/__/__/__/__/__/__/__/__/__/__	IP password	123456
[941]	__/_	IP profile (e.g., 01)	-
[942]	To view status or to register, press ARM (see table 46 on page 50)		IP receiver status

Worksheet 55: IP Receiver Backup Configuration

Section	Data	Description	Default
[943]	__/__/__ . __/__/__ . __/__/__ . __/__/__	WAN1 IP address (e.g., 100.100.100.100)	-
[944]	__/__/__/__	WAN1 IP port	10000
[945]	__/__/__ . __/__/__ . __/__/__ . __/__/__	WAN2 IP address	-
[946]	__/__/__/__	WAN2 IP port	-
[947]	__/__/__/__/__/__/__/__/__/__/__/__/__	IP password	123456
[948]	__/_	IP profile (e.g., 01)	-
[949]	To view status or to register, press ARM (see table 46 on page 50)		IP receiver status

Usability Sections

The sections described in the ensuing segment are used to clear, reset, and display various settings and features on your MG/SP control panel.

Description of Sections [950], [955], and [960]

Table 47: Description of sections [950], [955], and [960]

Section	Description
[950]	Resets all programmable sections to their respective factory-set, default values. Once accessed, press ENTER to reset.
[955]	Clears bus module troubles. Once cleared, remove disconnected module from the bus.
[960]	Displays the wireless transmitter serial number. Once accessed, press any button on the assigned remote control or press the tamper switch of the download memory key. Press ENTER to view the next digit.

Description of Section [965]

Table 48: Description of section [965] (reset labels)

	Option	Description	OFF	ON
Section [965]	1	Reset zone labels	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	2	Reset user labels	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	3	Reset partition labels	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	4	Reset PGM labels	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	5	Reset bus module labels	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	6	Reset wireless repeater and siren labels	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled
	7	Reset wireless keypad, repeater, and siren labels	<input type="checkbox"/> Disabled	<input checked="" type="checkbox"/> Enabled

▲ = Default

NOTE: When resetting any option in section [965], ensure that all other options are deselected. Press **ENTER** to reset the respective set of labels to their default values, before exiting the section.

Description of Sections [966] and [967]

Table 49: Description of sections [966] and [967] (clear and reset report codes)

	Option	Description	OFF	ON		Option	Description	OFF	ON			
Section [966]	1	Clear zone report codes	<input type="checkbox"/>	Disabled	▲	Enabled	1	Reset zone report codes to default	<input type="checkbox"/>	Disabled	▲	Enabled
	2	Clear user report codes	<input type="checkbox"/>	Disabled	▲	Enabled	2	Reset user report codes to default	<input type="checkbox"/>	Disabled	▲	Enabled
	3	Clear arm/disarm/alarm report codes	<input type="checkbox"/>	Disabled	▲	Enabled	3	Reset arm/disarm/alarm report codes to default	<input type="checkbox"/>	Disabled	▲	Enabled
	4	Clear trouble report codes	<input type="checkbox"/>	Disabled	▲	Enabled	4	Reset trouble report codes to default	<input type="checkbox"/>	Disabled	▲	Enabled
	5	Clear system special report codes	<input type="checkbox"/>	Disabled	▲	Enabled	5	Reset system special report codes to default	<input type="checkbox"/>	Disabled	▲	Enabled
	6	Clear report code for GSM lost communication with panel	<input type="checkbox"/>	Disabled	▲	Enabled	6	Reset report code for GSM lost communication with panel	<input type="checkbox"/>	Disabled	▲	Enabled

▲= Default

NOTE: When clearing or resetting any option in sections [966] AND [967], ensure that all other options are deselected. Press **ENTER** to reset the respective set of labels to their default values, before exiting the section.

Description of Sections [970], [975], and [980]

Table 50: Description of sections [970], [975], and [980]

Section	Description
[970]	Downloads data from the memory key to the control panel. To download data, enter section [970], and then press ENTER .
[975]	Uploads data from the control panel to the memory key. To upload data, enter section [975], and then press ENTER .
[980]	Displays version number of the control panel. Once accessed, press ENTER to view the next digit.

Label Programming with LCD Keypads

Use the information in the following section to program system labels, using an LCD keypad (K32LCD/K32LX).

Function keys

Table 51: Description of the special function keys, used for programming labels on LCD keypads

Function	Keypad Key
Insert space	STAY
Delete	SLEEP
Delete entire entry	ARM
Toggle between numeric and alphanumeric keys	OFF
Toggle between lower and upper case keys	BYP
Insert special characters	ENTER

Catalogues of Special Characters

The following section outlines the different catalogues of special characters, including those in Hebrew, Greek, and Russian.

Figure 1: Standard special characters

032	048	064	080	096	112	128	144	160	176	192	208
0	@	P	`	p	Ù	Ê	à	§	Ø		
033	049	065	081	097	113	129	145	161	177	193	209
!	1	A	Q	a	q	Û	È	ì	±	Ł	¨
034	050	066	082	098	114	130	146	162	178	194	210
"	2	B	R	b	r	Ü	É	í	íj	Đ	°
035	051	067	083	099	115	131	147	163	179	195	211
#	3	C	S	c	s	Û	Ê	í	↑	β	`
036	052	068	084	100	116	132	148	164	180	196	212
\$	4	D	T	d	t	û	ê	ï	↓	ϕ	'
037	053	069	085	101	117	133	149	165	181	197	213
%	5	E	U	e	u	ù	è	î	↵	®	~
038	054	070	086	102	118	134	150	166	182	198	214
&	6	F	V	f	v	ú	é	ñ	f	□	÷
039	055	071	087	103	119	135	151	167	183	199	215
'	7	G	W	g	w	ô	ë	ñ	£	☐	«
040	056	072	088	104	120	136	152	168	184	200	216
(8	H	X	h	x	ò	ä	ñ	→	μ	»
041	057	073	089	105	121	137	153	169	185	201	217
)	9	I	Y	i	y	ó	ä	ñ	↓	∅	†
042	058	074	090	106	122	138	154	170	186	202	218
*	:	J	Z	j	z	õ	å	g	↑	ÿ	\
043	059	075	091	107	123	139	155	171	187	203	219
+	;	K	[k	{	ö	â	v	↓	Å	x
044	060	076	092	108	124	140	156	172	188	204	220
,	<	L	¥	l		ò	à	ÿ	↑	¢	©
045	061	077	093	109	125	141	157	173	189	205	221
-	=	M]	m	}	ó	á	w	½	ä	©
046	062	078	094	110	126	142	158	174	190	206	222
.	>	N	^	n	→	õ	â	w	½	Ö	©
047	063	079	095	111	127	143	159	175	191	207	223
/	?	O	_	o	←	ç	À	Æ	¼	ö	≡

Figure 3: Russian special characters

032	048	064	080	096	112	128	144	160	176	192	208	224	240
		Ð	Р	`	р			Б	Ю	Ч		Д	¼
033	049	065	081	097	113	129	145	161	177	193	209	225	241
!	1	A	Q	a	q			Г	Я	Ш		Ц	1/3
034	050	066	082	098	114	130	146	162	178	194	210	226	242
"	2	B	R	b	r			Е	Ё	Ъ		Щ	1/2
035	051	067	083	099	115	131	147	163	179	195	211	227	243
#	3	C	S	c	s			Ж	В	Ы	!!	Д	
036	052	068	084	100	116	132	148	164	180	196	212	228	244
\$	4	D	T	d	t			З	Г	Ь		Ф	
037	053	069	085	101	117	133	149	165	181	197	213	229	245
%	5	E	U	e	u			И	ё	Э		И	
038	054	070	086	102	118	134	150	166	182	198	214	230	246
&	6	F	V	f	v			Й	ж	Ю		Ш	
039	055	071	087	103	119	135	151	167	183	199	215	231	247
'	7	G	W	g	w			Л	з	Я			
040	056	072	088	104	120	136	152	168	184	200	216	232	248
(8	H	X	h	x			П	И	«		»	
041	057	073	089	105	121	137	153	169	185	201	217	233	249
)	9	I	Y	i	y			У	й	»	↑	~	
042	058	074	090	106	122	138	154	170	186	202	218	234	250
*	:	J	Z	j	z			Ф	К	»	↓		
043	059	075	091	107	123	139	155	171	187	203	219	235	251
+	;	K	[k	10			Ч	Л	»	↵		
044	060	076	092	108	124	140	156	172	188	204	220	236	252
,	<	L	€	l	12			Ш	М			ij	
045	061	077	093	109	125	141	157	173	189	205	221	237	253
-	=	M]	m	15			Ъ	И	ç		§	
046	062	078	094	110	126	142	158	174	190	206	222	238	254
.	>	N	^	n	←			Ы	П	f		¶	
047	063	079	095	111	127	143	159	175	191	207	223	239	255
/	?	O	_	o				Э	Т	£		°	

Figure 2: Hebrew special characters

032	048	064	080	096	112	128	144	160	176	192	208	224	240
0	Ø	Й	Р	У	Р	С	Э	à	·	Г	М	β	τ
033	049	065	081	097	113	129	145	161	177	193	209	225	241
!	1	A	Q	a	q	ו	ו	ו	ו	ו	ו	ו	ו
034	050	066	082	098	114	130	146	162	178	194	210	226	242
"	2	B	R	b	r	ב	ב	ב	ב	ב	ב	ב	ב
035	051	067	083	099	115	131	147	163	179	195	211	227	243
#	3	C	S	c	s	ט	ט	ט	ט	ט	ט	ט	ט
036	052	068	084	100	116	132	148	164	180	196	212	228	244
\$	4	D	T	d	t	ד	ד	ד	ד	ד	ד	ד	ד
037	053	069	085	101	117	133	149	165	181	197	213	229	245
%	5	E	U	e	u	י	י	י	י	י	י	י	י
038	054	070	086	102	118	134	150	166	182	198	214	230	246
&	6	F	V	f	v	פ	פ	פ	פ	פ	פ	פ	פ
039	055	071	087	103	119	135	151	167	183	199	215	231	247
'	7	G	W	g	w	ג	ג	ג	ג	ג	ג	ג	ג
040	056	072	088	104	120	136	152	168	184	200	216	232	248
<	8	H	X	h	x	ח	ח	ח	ח	ח	ח	ח	ח
041	057	073	089	105	121	137	153	169	185	201	217	233	249
)	9	I	Y	i	y	י	י	י	י	י	י	י	י
042	058	074	090	106	122	138	154	170	186	202	218	234	250
*	:	J	Z	j	z	ז	ז	ז	ז	ז	ז	ז	ז
043	059	075	091	107	123	139	155	171	187	203	219	235	251
+	;	K	[k	{	כ	כ	כ	כ	כ	כ	כ	כ
044	060	076	092	108	124	140	156	172	188	204	220	236	252
,	<	L	¥	l		ל	ל	ל	ל	ל	ל	ל	ל
045	061	077	093	109	125	141	157	173	189	205	221	237	253
-	=	M]	m	}	מ	מ	מ	מ	מ	מ	מ	מ
046	062	078	094	110	126	142	158	174	190	206	222	238	254
.	>	N	^	n	→	נ	נ	נ	נ	נ	נ	נ	נ
047	063	079	095	111	127	143	159	175	191	207	223	239	255
/	?	O	_	o	←	ו	ו	ו	ו	ו	ו	ו	ו

Figure 4: Greek special characters

016	032	048	064	080	096	112	128	144	160	176	192	208	224	240
±	Ø	Ð	Р	`	р	С	Э	à	·	Г	М	β	τ	
017	033	049	065	081	097	113	129	145	161	177	193	209	225	241
≡	!	A	Q	a	q	α	α	α	α	α	α	α	α	α
018	034	050	066	082	098	114	130	146	162	178	194	210	226	242
∞	"	B	R	b	r	β	β	β	β	β	β	β	β	β
019	035	051	067	083	099	115	131	147	163	179	195	211	227	243
λ	#	C	S	c	s	σ	σ	σ	σ	σ	σ	σ	σ	σ
020	036	052	068	084	100	116	132	148	164	180	196	212	228	244
∫	\$	4	D	T	d	t	δ	δ	δ	δ	δ	δ	δ	δ
021	037	053	069	085	101	117	133	149	165	181	197	213	229	245
∫	%	5	E	U	e	u	ε	ε	ε	ε	ε	ε	ε	ε
022	038	054	070	086	102	118	134	150	166	182	198	214	230	246
∫	&	6	F	V	f	v	φ	φ	φ	φ	φ	φ	φ	φ
023	039	055	071	087	103	119	135	151	167	183	199	215	231	247
∫	'	7	G	W	g	w	ψ	ψ	ψ	ψ	ψ	ψ	ψ	ψ
024	040	056	072	088	104	120	136	152	168	184	200	216	232	248
∫	<	8	H	X	h	x	χ	χ	χ	χ	χ	χ	χ	χ
025	041	057	073	089	105	121	137	153	169	185	201	217	233	249
∫)	9	I	Y	i	y	ι	ι	ι	ι	ι	ι	ι	ι
026	042	058	074	090	106	122	138	154	170	186	202	218	234	250
∫	*	:	J	Z	j	z	ξ	ξ	ξ	ξ	ξ	ξ	ξ	ξ
027	043	059	075	091	107	123	139	155	171	187	203	219	235	251
∫	+	;	K	[k	{	κ	κ	κ	κ	κ	κ	κ	κ
028	044	060	076	092	108	124	140	156	172	188	204	220	236	252
∫	=	'	<	L										

Keypad Letter Assignments

The following section outlines the different configurations for keypad letter assignments, including those in Hebrew, Greek, and Russian.

Table 52: Standard keypad letter assignment

Key	Press Key Once	Press Key Twice	Press Key Three Times
1	A	B	C
2	D	E	F
3	G	H	I
4	J	K	L
5	M	N	O
6	P	Q	R
7	S	T	U
8	V	W	X
9	Y	Z	

Table 53: Greek keypad letter assignment

Key	Press Key Once	Press Key Twice	Press Key Three Times
1	A	B	Γ
2	Δ	E	Z
3	H	Θ	I
4	K	Λ	M
5	N	Ξ	O
6	Π	P	Σ
7	T	Υ	Φ
8	X	Ψ	Ω

Figure 6: Hebrew keypad letter assignment

Key	Press key once	Press key twice	Press key three times
[1]	א	ב	ג
[2]	ד	ה	ו
[3]	ז	ח	ט
[4]	י	כ	ל
[5]	מ	נ	ס
[6]	ע	פ	צ
[7]	ק	ר	ש
[8]	ת		
[9]			

Figure 7: Russian keypad letter assignment

Key	Press key once	Press key twice	Press key three times	Press key four times
[1]	A	Б	В	Г
[2]	Д	Е	Ё	Ж
[3]	З	И	Й	К
[4]	Л	М	Н	О
[5]	П	Р	С	Т
[6]	У	Ф	Х	Ц
[7]	Ч	Ш	Щ	Ъ
[8]	Ы	Ь	Э	Ю
[9]	Я			

Trouble Display

The following section provides information on the different troubles associated with your MG/SP control panel. To view the trouble display, press **TBL** on your MG/SP keypad. Table 54 outlines the troubles appearing in the main menu and their corresponding sub-menu troubles. To view the sub-menu troubles, press the trouble's respective key in the main menu.

NOTE: Keypads can be programmed to emit a beep every five seconds, whenever a new trouble condition has occurred. Press **TBL** to stop the beeping.

Table 54: Description of troubles for MG/SP control panels

Key	Main Menu Trouble	Key	Sub-menu Trouble
1	Wireless zone low battery	1 to 32	Zones in low battery
2	Power trouble	1	Low/no battery on the control panel
		2	AC failure on control panel
		3	Auxiliary overload on control panel
		4	Wireless keypad AC failure
		5	Wireless keypad battery failure
		6	Wireless repeater AC failure
		7	Wireless repeater battery failure
		8	Wireless siren AC failure
		9	Wireless siren battery failure
3	Bell trouble	1	Bell disconnected on control panel
		2	Bell overload on control panel

Table 54: Description of troubles for MG/SP control panels

4	Communication trouble	1	Telephone line monitoring on control panel
		2	Fail to communicate on monitoring telephone 1, on control panel
		3	Fail to communicate on monitoring telephone 2, on control panel
		5	Fail to communicate on voice telephone, on control panel
		6	Fail to communicate with PC, on control panel
		7	Fail to communicate with IP receiver 1 or 2 (GPRS)
		8	Fail to communicate with IP receiver 1 or 2 (IP)
		9	GSM no service (GSM network failure)
		10	IP module no service (network failure)
		STAY	GSM RF jamming
		OFF	IP receiver unregistered (IP/GPRS)
		5	Tamper and zone wiring failure
6	Module tamper trouble	1	2WPGM
		2	Keypad bus
		3	ZX8 bus module
		4	RTX3 bus module
		5	Wireless siren
7	Fire loop trouble	1 to 32	Zones in fire loop trouble
8	Timer loss	-	
9	Wireless zone supervision loss	1 to 32	Zones in supervision lost
		STAY	RF jamming trouble
0 (10), or 10	Module supervision loss	1	2WPGM
		2	Keypad bus (panel reset will not clear this trouble; clear it in section [955])
		3	ZX8 bus module
		4	RTX3 bus module
		5	Wireless keypad
		6	Wireless repeater
		7	-
		8	VDMP3
		9	PCS series
		10	IP100
STAY	Wireless siren		
16	Keypad fault (K32, K32RF, K37, K35 only)	-	
17	Upgrade panel to V3.2 or higher (K37 only)	-	
SLEEP	Keypad fault (K636, K10V/H only)	-	

Product Compatibility Chart

Table 55: Product compatibility chart for MG/SP control panels

 
Product Type	Product	MG5000	MG5050	SP4000	SP65	SP5500			SP6000			SP7000		
		V4.1 - V4.5	V4.1 - V4.5	V4.5 - V4.7	V4.7	V4.5	V4.7	V5.0	V4.5	V4.7	V5.0	V4.5	V4.7	V5.0
Hardwired Keypads	K32LCD (V1.30 or higher)	✓	✓	-	-	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	K32LX	-	-	-	-	-	✓	-	-	✓	-	-	✓	-
	K32	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	K10V/K10H	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	K35 (K32I)	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	K636	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
Wireless Keypads	K37 (K32IRF)	✓	✓	-	✓ ²	✓ ²			✓ ²			✓ ²		
	K32RF (K32LRF)	✓	✓	-	✓ ²	✓ ²			✓ ²			✓ ²		
Zone Expansion Modules	ZX8	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	ZX8SP	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	RTX3	-	-	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	RX1	-	-	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
Wireless Sirens	SR150 (V1.10)	✓	✓	-	✓ ²	✓			✓			✓		
Wireless Programmable Output	2WPGM	✓	✓	-	✓ ²	✓ ²			✓ ²			✓ ²		
Remote Controls	REM1	✓	✓	✓ ¹	✓ ¹	✓ ¹			✓ ¹			✓ ¹		
	REM15	✓	✓	✓ ¹	✓ ¹	✓ ¹			✓ ¹			✓ ¹		
	REM2	✓	✓	✓ ²	✓ ²	✓ ²			✓ ²			✓ ²		
	REM3	✓	✓	✓ ²	✓ ²	✓ ²			✓ ²			✓ ²		
	RAC1	✓	✓	✓ ¹	✓ ¹	✓ ¹			✓ ¹			✓ ¹		
Wireless Repeaters	RPT1	✓	✓	-	✓ ²	✓ ²			✓ ²			✓ ²		
Reporting and Communication	PCS200 (V2.01 GSM/GPRS)	✓	✓	✓	✓	✓			✓			✓		
	PCS200 (V1.00 GSM edition)	✓	✓	✓	✓	✓			✓			✓		
	IP100 (V1.50 IP reporting)	✓	✓	✓	✓	✓			✓			✓		
	IP100 (V1.00)	✓	✓	✓	✓	✓			✓			✓		
	VDMP3	✓	✓	✓	✓	✓			✓			✓		
Peripheral Modules	HUB2	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	PGM4 (V3.00 and up)	✓	✓	✓	✓	✓	✓	✓ ³	✓	✓	✓ ³	✓	✓	✓ ³
	PRT3	-	✓	✓	✓	-			-			-		
Programming Keys	PMC5	✓	✓	✓	✓	✓			✓			✓		
Software	WinLoad	✓	✓	-	✓	✓			✓			✓		
	BabyWare	-	-	✓	✓	-			-			-		

¹ Requires RTX3/RX1

² Requires RTX3

³ Requires modules V5.00 only

NOTE: For the most up-to-date and comprehensive MG/SP product compatibility chart, always refer to paradox.com.



The whole Paradox team wishes you a successful and easy installation. We hope this product performs to your complete satisfaction. Should you have any questions or comments, please contact us.

For support, please contact your local distributor, or dial 1-800-791-1919 (in North America) or +1-450-491-7444 (outside North America), Monday to Friday, from 8:00 a.m. to 8:00 p.m. EST.

You may also e-mail us at support@paradox.com.
Additional information can be found at PARADOX.COM

P ▲ R ▲ D O X[®]
Printed in Canada - 12/2010 PARADOX.COM MGSP-EP25