

Programming instruction: RF5132-X Wireless Receiver

Function - Output Programming (DSC)

| Step 1 | Enter Keypad Programming | |
|--------|-------------------------------------|-----------------------------------|
| Enter: | *8, Then enter installer code, *, | [This is to enter LCD Section] |
| LOC | 077 | |
| | Switch Option 3 on and then press # | [Toggle Option 1-8 now displayed] |
| | 080 | [Output #5] |
| | Then enter O5 | |
| | #, #, # | To get out of programming |

| Step 2 | Panel Programming | |
|--------|--------------------------------|---------------------------|
| Enter: | *8, Then enter installer code, | [PGM3-PGM5] |
| LOC | 010 | |
| | -- | [PGM3] |
| | 2 2 [Command Output 4] | [PGM4] |
| | 3 0 [Partition Status], # | [PGM5] |
| | #, # | To get out of programming |

| Step 3 | Keyfob Wireless Programming | |
|--------|---|-----------------------------|
| Enter: | *8, Then enter installer code, 804, | [Wireless Programming] |
| LOC | 804 | |
| | 41, Then enter ESN no. that is on the Keyfob | |
| | 61, Key1 - 03 | [Keyfob button programming] |
| | Key2 - 04 | |
| | Key3 - 27 | |
| | Key4 - 21 | [*74 Command Output 4] |
| | #, # | To get out of programming |

NOTE: Key 4 Programming on Keyfob must be the same as PGM4 programming.(* 74 Command)
| Repeat STEP 3 for all additional Keyfobs

27 Greenstone Place, Greenstone Hill, Lethabong, 1609
+27 11 401 6700 | info@elvey.co.za | www.elvey.co.za