



Wireless-N WiFi REPEATER

Quick Installation Guide(Q.I.G.)



REV.1.4

Introduction :

The WiFi Repeater is a combined wireless network connection device designed specifically for small business, office, and home office networking requirements. It allows a wireless network to be expanded using multiple access points without the need for a wired backbone to link them. It also works well with other 802.11g and 802.11n protocol wireless products.



NOTE: If you need to reset the Wi-Fi Repeater, you need press and hold the reset button inside the tiny hole for 10 seconds.

Package Contents:

Before you starting to use this router, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing items:

- 1 x Wireless N Repeater
- 1 x RJ45 Networking Cable
- 1 x Quick Installation Guide

01 Wireless-N Wifi Repeater




Getting Started

Setting up a Wireless Infrastructure Network

For a typical wireless setup at home (as shown below), please do the following:

Wireless Repeater Mode

You will need WiFi AP/Router internet access

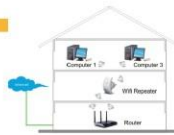

Wireless AP Mode

You will need broadband Router internet access



Connect the WiFi Repeater to your Router/Switch with RJ45 Cable

02 Wireless-N Wifi Repeater



How to configure the Wi-Fi Repeater

You can configure the Wi-Fi Repeater after connecting it with your computer/laptop with enclosed RJ45 cable or wireless.

A. Configure the Wi-Fi Repeater by WebUI

A1. Plug the Wi-Fi Repeater to a wall socket.



A2. Click on the network icon (or) on the right bottom of your desktop. You will see the signal from the Wi-Fi Repeater. Click on 'Connect' and wait for a few seconds.



A3. Open web browser and type <http://192.168.1.1> in the browser's address box. This number is the default IP address for this device.

Note: Please check whether the WiFi Repeater accord with factory default settings once you can open <http://192.168.1.1>. If you are still not sure what reasons, you can reset the WiFi Repeater. Just needs press the reset button for 10 seconds, then try again.

03 Wireless-N Wifi Repeater



A4. The login screen below will appear. Enter the "User Name" and "Password" and click "OK" to login. The default User name is "admin" and the Password is "admin".



A5. After logging in and click "Setup Wizard" you will see the web page below. Select "Wireless Repeater Mode (Repeater)" and click on "Next" to continue.



A6. Click on "Repeater" -> CheckKey Setting button



A7. Wait a few seconds and you will see the site below and please click on "Wireless Network Selection" button.



 
A8. Click on "Refresh List" button. Select your AP/Router SSID and click "Next" to continue.



A9. When you see the site below, please do not change any setting but only insert the Key of your AP/Router.

Wireless Site Survey

This page provides tool to scan the wireless network. If any Access Point or SSID is found, physical channel is scanned if channel when Repeater mode is enabled. Based on this list, the radio network you would like to select.



Click on "Apply and Reboot" button.



Click on "OK" to confirm. The Repeater will restart. Wait for a few seconds your Wi-Fi Repeater is ready for use.

* The Repeater SSID is WiFi Repeater1. The Repeater KEY is same as your AP/Router.

B. Configure the Wi-Fi Repeater with RJ45 Cable

1. Plug the Wi-Fi Repeater to a wall socket. Connect your computer / laptop with the Wi-Fi Repeater with enclosed RJ45 Cable.

2. Follow process A1 to A9 to configure your Wi-Fi Repeater.

C. Configure the Wi-Fi Repeater with WPS Button



1. Plug the Wi-Fi Repeater into a wall socket.
2. Make sure your WPS-Repeater to be "Wireless Repeater mode (Station)" Mode. Step 1: Press the WPS button of the AP/Router directly for 3 seconds. (Please check your AP/Router Manual with WPS configuration)
- Step 2: Press the WPS button of the WiFi Repeater for 7-10 seconds.
- Step 3: Wait a few seconds your Wi-Fi Repeater is ready for use.

04 Wireless-N Wifi Repeater



05 Wireless-N Wifi Repeater



06 Wireless-N Wifi Repeater



07 Wireless-N Wifi Repeater



D. Configure the Wireless AP Mode.

1. Plug the Wi-Fi Repeater to a wall socket.
2. Follow process A to A6.
3. Select "Standard Wireless AP Mode" and click on "Next" to continue.



4. Click on "AP - CheckKey Setting" button



5. Wait for a few seconds your Wi-Fi Repeater is ready for use.

How to connect your computer/laptop with the Wi-Fi Repeater

Adding a Wireless computers to the Wi-Fi Repeater

1. Log on to the computer.
2. Open Control Panel by right-clicking the network icon () in the notification area.
3. Choose the wireless network from the list that appears, and then click Connect.
4. Type the network security key or passphrase if you are asked to do so, and then click OK. You'll see a confirmation message when you are connected to the network.
5. To confirm that you added the computer, do the following:

Open Network by clicking the View button, and then clicking Control Panel. In the search box, type network, and then, under Network and Sharing Center, click View network and devices. You should see icons for the computer you added and for the other computers and devices that are part of the network.

Note: If you don't see icons in the Network folder, then network discovery and file sharing might be turned off.

1. Plug the Wi-Fi Repeater to a wall socket. Connect your computer /laptop with the Wi-Fi Repeater with enclosed RJ45 Cable.
2. To confirm that you added the computer, do the following:

Open Network by clicking the View button, and then clicking Control Panel. In the search box, type network, and then, under Network and Sharing Center, click View network and devices. You should see icons for the computer you added and for the other computers and devices that are part of the network.

For more information:
<http://windows.microsoft.com/en-US/windows7/7-how-a-device-or-computer-to-a-network>
<http://windows.microsoft.com/en-US/windows7/Setting-up-a-wireless-network>
<http://windows.microsoft.com/en-US/windows-vista/Setting-up-a-wireless-network>



How to configure your computer/laptop with the Network IP Address

1. Log on to the computer.

2. Click the "Start" button (it should be located at the lower-left corner of your screen), then click "Control Panel", and then click "Network Connections". Right-click "Local Area Network" and select "Properties". When the "Local Area Connection Properties" window appears, select "Internet Protocol Version 4 (TCP/IPv4)" and then click "Properties".



3. Setting IP address manually: Type IP address is 192.168.88.1 (in from 2 to 254, and Subnet mask is 255.255.255.0). Type the Router's LAN IP address (the default IP is 192.168.1.1) into the Default gateway field.

Configuring via Web Browser

Wireless Base Configuration

Please click "Wireless - Basic Settings" located at the web management interface, the following message will be displayed on your web browser:

You could configure the minimum number of Wireless settings for communication, such as Network Name (SSID) and Channel. The Access Point can be set simply with all the minimum setting items.



Disable Wireless	Wireless On/Off
Mode	Supports AP / Repeater modes.
SSID of AP or SSID of Connect to	Main Service Set Identifier. It's the "name" of your wireless network.
SSID of Extended	Universal Repeater Mode (Acting as AP and client simultaneously)
Band	Supports 11B/11G/1N mixed modes.

08 Wireless-N Wifi Repeater

Wireless Security Configuration

Please click "Wireless+Security" located at the web management interface, the following message will be displayed on your web browser.

Setup the wireless security and encryption to prevent from unauthorized access and monitoring. Supports 64/128bit WEP, WPA, WPA2 encryption methods.



Select SSID:	
Root - Client - XXXX:	The password of the WiFi Repeater will be the same as your XXXX router.
Repeater AP - WiFi Repeater:	Select this option to set up the password for your WiFi Repeater

09 Wireless-N Wifi Repeater

Factory Default and Settings Backup - Restore

You can backup all Setting of this router to a file, so you can make several copies of router configuration for security reason.

To backup or restore router setting, please follow the following instructions: Please click "Save/Reset" setting located at the web management interface, then the following message will be displayed on your web browser:



Save Settings	Please "Save" button and you'll be prompted to download the configuration as a file. you can please save it as another filename for different versions, and keep it in a safe place.
Load Settings	Press "Browse" to pick a previously-saved configuration file from your computer, and then click "Upload" to transfer the configuration file to router. After the configuration is uploaded, the router's configuration will be replaced by the file you just uploaded.
Reset Settings	Click this "Reset" button to remove all settings you made, and restore the configuration of this router back to factory default settings.

10 Wireless-N Wifi Repeater

Firmware Upgrade

The system software used by this router is called as "Firmware". Just like any applications on your computer, when you replace the old application with a new one, your computer will be equipped with new function. You can also use this firmware upgrade function to add new functions to your router, even to the bugs of this router.

Please click "Management - Upgrade Firmware" located at the web management interface, then the following message will be displayed on your web browser:



After a firmware upgrade file is selected, click "Upload" button, and the router will start firmware upgrade procedure automatically. The procedure may take several minutes, please be patient.

NOTE: Never interrupt the upgrade procedure by closing the web browser or physically disconnect your computer from router. If the firmware you uploaded is corrupt, the firmware upgrade will fail, and you may have to return this router to the dealer or purchase it as a new one. (Warranty voids if you interrupted the upgrade procedure).

11 Wireless-N Wifi Repeater

Change Management password

Default password of Wireless Router is "admin" and it's displayed on the login prompt when accessed from web browser. There's a security risk if you don't change the default password, since everyone can see it. This is very important when you have wireless function enabled.

To change password, please follow the following instructions: Please click "Management -> Password" menu on the web management interface, the following message will be displayed on your web browser:



click "Apply Changes"; if you want to keep original password unchanged, click "Reset".

WEEE Directive & Product Disposal
 At the end of its service-life, this product should not be treated as household or general waste. It should be handled over to the appropriate collection point for the recycling of electronic and electrical equipment.
 or returned to the supplier for disposal.

12 Wireless-N Wifi Repeater

13 Wireless-N Wifi Repeater

14 Wireless-N Wifi Repeater

15 Wireless-N Wifi Repeater