
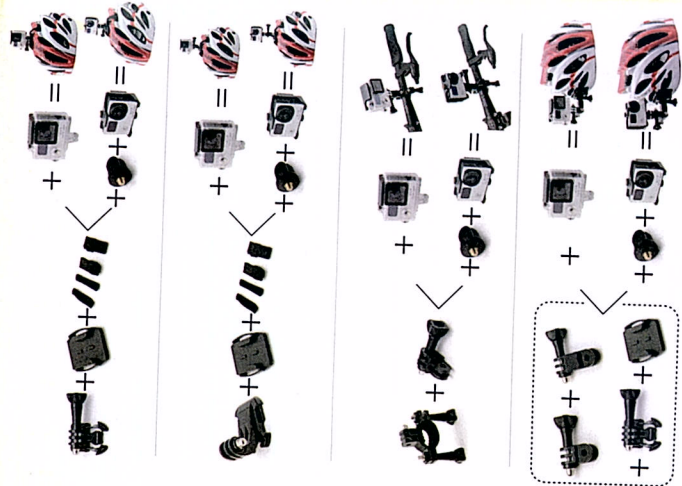 



Action Camera

Wi-Fi · Waterproof · Ultra HD

-  Wide Angle Lens
-  HDMI
-  4K Ultra HD
-  Waterproof up to 30m
-  Long-lasting Battery



 THE BASICS

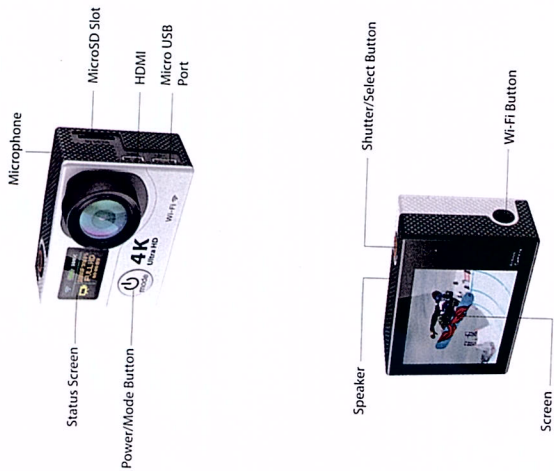

GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:

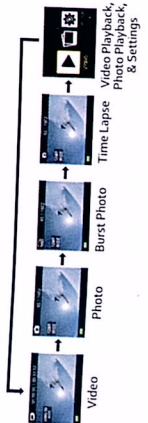


ACCESSORIES



MOUNTING YOUR CAMERA

 Attach your camera to helmets, gear and equipment.

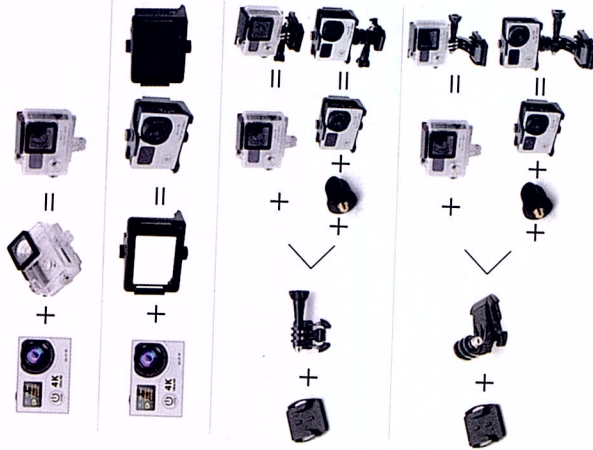

Video Resolution:

4K/25/2.7K/30/1080p60/1080p30

MicroSD Card	4k/25/2.7k/30	1080p60	1080p30
32 GB	60 mins	120 mins	240 mins
16 GB	30 mins	60 mins	120 mins

Looping Video: Off/On (4K & 2.7K not supported)

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Photo Resolution: 12M/8M/5M/4M

Burst Photo: 3 Photos

Time Lapse: 2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Traditional Chinese

/Italian/Spanish/Portuguese/German/Dutch/France/Czech/Polish/Turkish/Russian/Japanese/Korean/Thai

Date & Time: MM/DD/YY, DD/MM/YY, or YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up 1/2/3/None, Beep On/Off, Volume

0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE



To record Video, verify the camera is in Video mode. If the Video icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the Camera Status Lights will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The Camera Status Lights stop flashing and the camera emits one beep to indicate recording has stopped.

BATTERY

Charging The Battery

To charge the battery:

1. Connect your camera to a USB power supply.

* Charging Time: 5 hours

CAMERA APP


Connecting to the Ez iCam App (4K & 2.7K not supported)

The Ez iCam App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the Ez iCam App to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera ON.
3. Make sure the camera is in Camera modes.

This camera automatically stops recording when the battery is out of power. Your Video will be saved before the camera powers OFF.

 PHOTO MODE




To capture a Photo, verify the camera is in Photo mode. If the Photo icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

 BURST PHOTO MODE



To capture a Burst Photo series, verify the camera is in Burst Photo mode. If the Burst Photo icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In Burst Photo mode, your camera takes 3 photos in 1.5 seconds.

4. Press the **Wi-Fi Button** to turn on **Wi-Fi**.*

5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "iCAM-H3 (R) " followed by a series of numbers.

6. Open the Ez iCam App on your smartphone or tablet.

* Press and hold the **Wi-Fi Button** for three seconds to turn OFF Wi-Fi.

The Ez iCam App is compatible with smartphones and tablets listed below.

For Apple iOS

* iPhone 5, 5s, 6 (Plus), & 6s (Plus) (iOS9)

* iPad Air & Mini (iOS9)

 
For Android:

* Android 4X Quad-core devices

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE



To capture a Time Lapse series, verify the Continuous Lapse is ON and camera is in Time Lapse mode. If the Time Lapse icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In Time Lapse mode, your camera captures a series of photos at 2,3,5,10,20,30 or 60 second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a Photo is taken.



iOS / Android
App Download

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:

1. Press the **Power/Mode Button** to select Video or Photo.
2. Press the **Shutter/Select Button** to enter the Playback menu.
3. Use **Power/Mode Button** to cycle through the various options.
4. Press the **Shutter/Select Button**.
5. To return to the Playback menu, press the **Wi-Fi Button**.

STORAGE/MICROSD CARDS

This camera is compatible with 16GB and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with at least a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.