

## GETTING STARTED

### HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

#### To power ON:

 
Press the **Power/Mode Button**.

#### To power OFF:

Press and hold the **Power/Mode Button**.

## OVERVIEW


Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:




 **Video** Record Video

 **Photo** Capture a single photo.

 **Burst Photo** Capture photo bursts

 **Time Lapse** Shoot a series of photos at set time intervals

 **Settings** Adjust camera settings, resolution and more.

## SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

### Video Resolution:

4K25/2.7K30/1080p60/1080p30/720p120

MicroSD Card	4k25/2.7k30	1080p60	1080p30/720p120
32 GB	60 mins	120 mins	240 mins
16 GB	30 mins	60 mins	120 mins

**Looping Video:** Off/On (4K & 2.7K not supported)

**Time Stamp:** Off/Date/Date & Time

**Exposure:** +-2.0/+1.7/+1.3/+1.0/+0.7/+0.3/0

**Photo Resolution:** 12M/8M/5M/4M

**Burst Photo:** 3 Photos

**Time Lapse:** 2s/3s/5s/10s/20s/30s/60s

**Continuous Lapse:** Off/On

**Power Frequency:** 50Hz/60Hz/Auto

**Language:** English/Tranditional Chinese  
/Italian/Spanish/Portuguese/German/  
Dutch/France/Czech/Polish/Turkish/  
Russian/Japanese/Korean/Thai

**Date & Time:** MM/DD/YY, DD/MM/YY,  
or YY/MM/DD

**Sound Indicator:** Shutter On/Off, Start Up 1/2/3/  
None, Beep On/Off, Volume  
0/1/2/3

**Upside Down:** On/Off

**Screen Saver:** Off/1 min/3 min/5 min

**Power Saver:** Off/1 min/3 min/5 min

**Format:** No/Yes

**Reset:** No/Yes

**Version**

## VIDEO MODE

 **Video**

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

#### To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

#### To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

---

## PHOTO MODE

---

### Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

#### **To take a photo:**

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

---

## BURST PHOTO MODE

---

### Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

#### **To take a Burst Photo series:**

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

---

## TIME LAPSE MODE

---

### Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

#### **To take Time Lapse:**

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

---

## PLAYBACK

---

### **Playing Back Videos and Photos**

#### **To enter the Playback menu:**

1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button** or **Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button**.
7. To return to the **Playback menu**, press the **Power/Mode Button**.
8. To **exit**, hold down the **Up/Playback Button** for two seconds.

---

## STORAGE/MICROSD CARDS

---

This camera is compatible with **16GB** and **32GB** capacity **microSD**, **microSDHC**, and

**microSDXC** memory cards. You must use a **microSD** card with at least a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

---

## BATTERY

---

### **To charge the battery**

Use the 1A USB charger and USB cable that come standard with your camera.

\*Third-party chargers and accessories may not be supported.

\* Charging Time: 5 hours

---

## COMPATIBILITY

---

\* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

---

## CAMERA APP

---

### Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi\***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**ICAM-Hg(R)**" followed by a series of numbers.
6. Enter the password "**1234567890**".
7. Open the **Ez iCam App** on your smartphone or tablet.

\* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

#### For Apple iOS

- \* iPhone 6/6s/7 (Plus)(iOS10)
- \* iPad Air & Mini (iOS10)

#### For Android:

- \* Android 4X Quad-core devices



iOS / Android  
App Download