 


FM Hi-Fi Wireless Headphone User's Manual

Appearance and Function Illustrations

 
A Receiver

1. Battery compartment cover
2. Volume control (VOL)/Power/Function switch (OFF-WIRELESS-FM)
3. Audio socket
4. Reset key (RESET)
5. Scan key (SCAN)
6. Power indicator

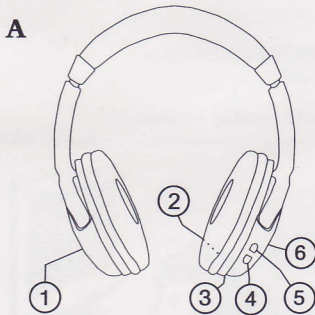

B Emitter

7. Power indicator (Front)
8. Power and function switch
9. Microphone socket (MIC)
10. Power socket (4.5V DC)
11. Microphone (MIC)
12. Audio cable of emitter
13. Battery compartment cover (bottom)

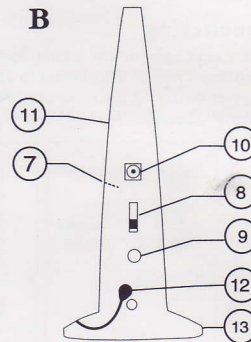

Parts

● Package include	
● Emitter	1
● Receiver(Headphone)	1
● Instruction Manual	1
● Audio cable	1

Installation

● Installing the receiver:

Insert two AAA batteries into the battery compartment according to the + and- polarity. turn the function switch (8) to the location of WIRELESS or FM. The indicator on the headphone shine to ensure that the headphone work well.

● Installing the emitter:

Insert two AAA batteries into the battery compartment according to the + and- polarity, or insert the power adaptor (optional) into power socket of emitter (4.5V DC). Insert audio plug of the emitter into AUDIO-OUT socket of audio source (such as TV set, audio device, PC, DVD player, CD player, MP3 player, etc.). Please see Fig.1, Fig.2, Fig.3, Fig.4 (Note: locate the emitter at a high position in order to achieve best reception effect)

Operation

● Wireless headphone

- (1) Please see Fig. 1, Insert the emitter audio cable into the AUDIO-OUT socket of the electronic device or headphone socket, and turn the function switch of the emitter to the "WIRELESS" position, then the emitter indicator shine.
- (2) Built in the battery on the emitter and the receiver, draw the function switch to the "ON" position, the indicator of the headphone go on. Put the volume control to a suitable position, Press the "RESET" then "SCAN" button adjust tiny modulation on the receiver (Headphone) till getting a best effect.

● Wireless net audio chat

- (1) Connect the emitter audio cable into the audio out socket of the PC, then insert one end of audio cable (optional) into the microphone socket (MIC) on the emitter, and insert the other end into the microphone socket in off the PC (see Fig.2).
- (2) Turn on the power switch of the emitter, then the indicator go on well, put the out-built MIC forward yourself and keep away with the distance of 0.5M(see Fig.2).
- (3) open your chat tool and turn the switch to the "Audio chat" position, turn on the receiver, then the indicator of the headphone go on well. Adjust the volume to the suitable position, then headphone can receive the sound via the SKYPE/MSN/QQ from your friends in the other end.

● Listen to the radio

The receiver can be used separately as an FM radio. Turn on the receiver, press the "RESET" once, then press the "SCAN" key in turn to search a higher range and lock one radio channel; when the highest range is reached, press "RESET" key, and the frequency returns to the lowest range. Press "SCAN" key again, and the receiver will search the radio channels from the low range again.

● Wired Headphone (without batteries)

Insert one end of the audio cable (optional) into the audio socket of the receiver (see Fig.4), and insert the other end into the headphone socket of the electronic devices, such as MP3 player, VCD player, DVD player, etc., and then the unit can be used as a wired headphone.

● Wireless monitoring

Place the emitter near baby or any wards. Put the out-built Microphone(MIC) forward monitor.

- (1), Turn the power switch of the emitter to "MONITOR", the indicator bright.
- (2), Turn the power switch of the receiver (ON/OFF) the indicator bright. Press the "RESET", then the "SCAN" button, the sound of the monitor can be heard by receiver.

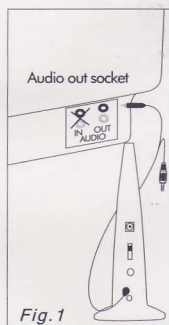 


Fig.1

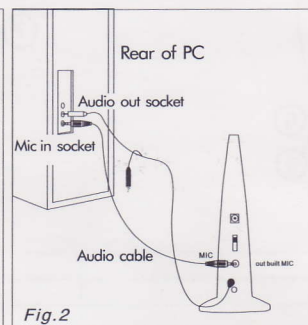 
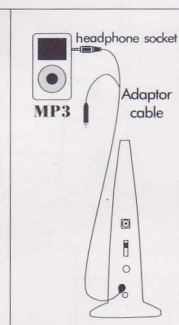 


Fig.2

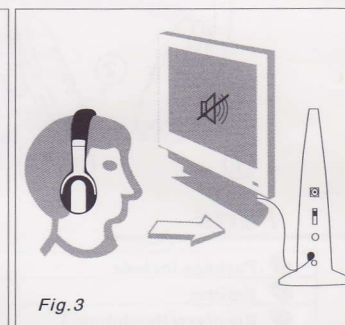 


Fig.3

Technical Specifications

Emitter

Emission frequency: $86 \pm 0.5\text{MHz}$
Modulation mode: FM
Emission distance: 30M (with no interference)
Power supply: 2xAAA batteries or 4.5V DC. (not contain)

Receiver(headphone)

Frequency range: 86MHz for wireless headphone and 87-108MHz for FM radio.
Reception Mode: FM
Distortion: $\leq 2\%$
Power Supply: 2xAAA batteries (not contain)

Notes

- To achieve best reception spread out emitter audio cable of the emitter or locate the emitter at a higher position. (the emitter audio cable can also be used as antenna).
- If the sound is distorted or too strong, adjust the volume of the signal source (TV set, VCD, player, DVD player, PC, MP3, walkman etc.) To a lower level, and reception performance may be improved.
- Replace the batteries if you are having the following problems
 - 1) The emitter indicator becomes dim.
 - 2) The receiver reception is poor.
 - 3) The volume becomes weak and the sound is distorted.

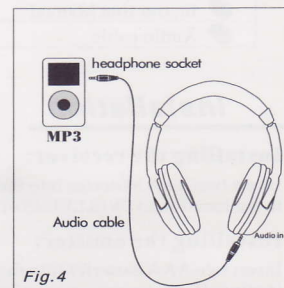 


Fig.4