


Obstacle avoidance car

STEAM



Assembly Instructions

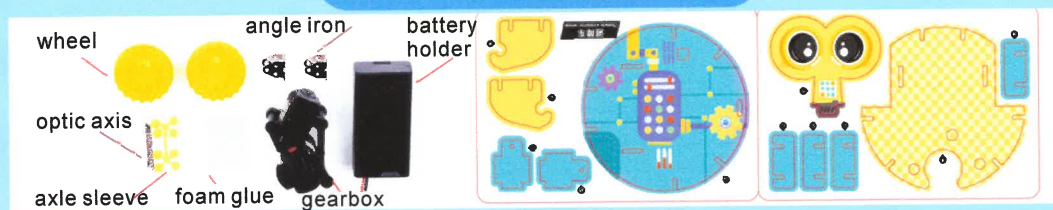

1. Prepare materials



2. Glue the foam onto the dental box



3. Glue the tooth box to the frame and install the bracket



4. Insert the Angle iron next to the bracket



5. Assemble the body as shown



6. Install the axle in the position shown, paying attention to the distance between the axle sleeve and the board



7. Fit the wheel



8. Connect the battery box wire to the motor of the tooth box and glue the battery box to the body of the car