


Small crawlers with wire remote control




1 All components

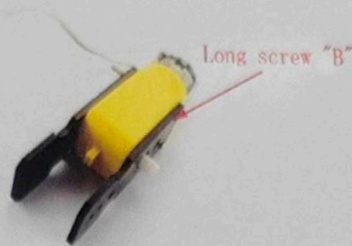


2 Install the "I" part on the motor




3 Use the "E" screw to install the Yellow wheel on the motor

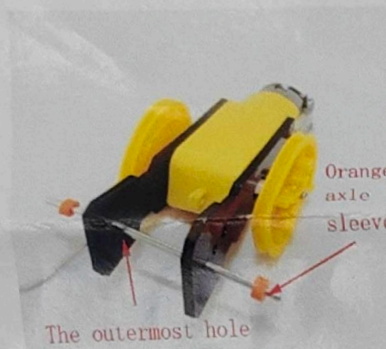


4 Install the axle sleeve on the shaft, and then install it on the "I" board

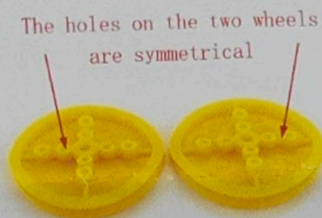


5 Pay attention to the position of the "F" axis on the wheel

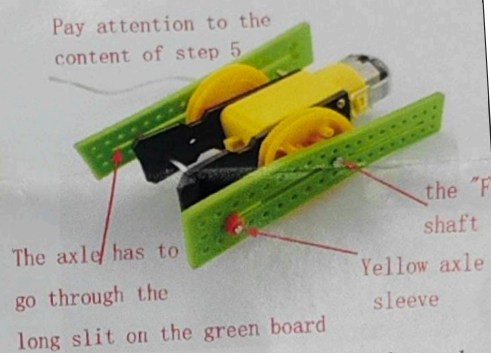

6 Install the green board onto the Yellow wheel with the "F" shaft

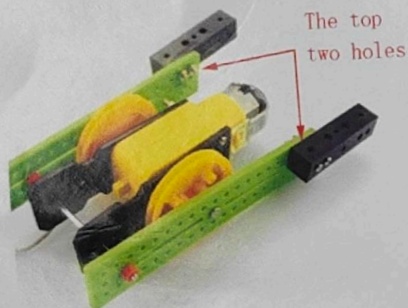

7 Install the "H" part onto the green board with the "A" screw

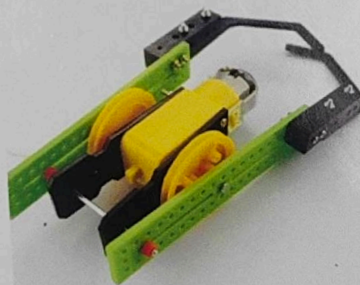

8 Install the "J" part onto the "H" plate with a short screw



9 Glued the eyes to the motor