


# WIFI + GSM Smart Alarm System

INTEGRA Quick Guide

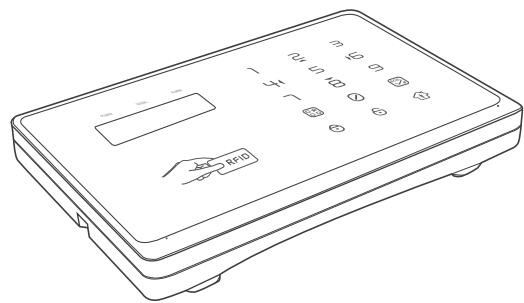

INT-GSM+WIFI+RFID ALARM KIT 80+2

## Security overview

Before use, please understand the following safety precautions to prevent product damage.

- Use the correct power supply, specifications: 12V 1A or more.
- Use Professional equipment to install, to avoid wiring errors leading to host damage.
- Do not squeeze the touch keyboard and display area.
- Do not use in a humid environment.
- Do not operate in flammable or explosive atmospheres.
- Keep the product surface clean and dry.
- Maintain adequate ventilation.

## Installation

The host should be installed in the center of the alarm place for the best receiving result from all wireless detectors. Note that the host installation should be as far as possible away from large-scale metal objects or household appliances with high-frequency interference, while keep away from the reinforced concrete walls and fire doors and other shielding materials.

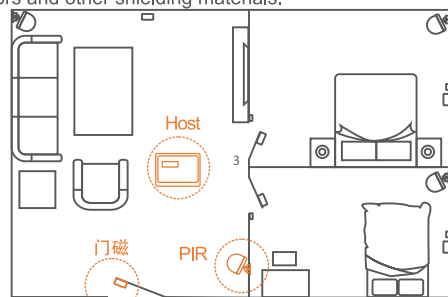


Fig (5)

- Note:**
- Host Installed in the center of the defense area.
  - Door senso Can be installed on the doors, windows, drawers.etc.
  - PIR detector The PIR detector has 120 degree sector region, installed 2 meters above the ground, where human active and easily being intruded.

## Preparation Before Use

1.The right to start the host is very important, it will be related to the normal operation of the host and service life.

- GSM:**
- 1 must install the SIM card when the host is powered off.
  - 2 Connect to the power, turn on the main power switch, enter the initial state.
  - 3 Wait for the host to register the network, after registered successfully, the GSM signal icon on the display always shows.
  - 4 Wait for the host time information to be updated and start up. (if not updated for a long time, then reboot)

## Product Introduction

WIFI + GSM + RFID intelligent alarm system is powerful alarm system with a combination of host and accessories. Host is the core of the system, accessories will send the signal to the host when being triggered, then the host makes an alarm sound to frighten intruders, and to alarm through the network or SIM card. Host can be remotely controlled, and monitoring, intercom and other operations.

### Features

- WiFi (IEEE 802.11b standard) and GSM dual-network alarm technology.
- LCD display and capacitive touch buttons, easy and convenient operation.
- Can learn 8 wireless remote controllers and 10 RFID cards.
- 10 wireless zones (80 detectors in total) and 2 wired zones.
- Each zone can be independently armed, support accessories alarm / low voltage alarm / tamper alarm and other SMS tips.
- Can preset 6 groups of alarm calls, 3 groups of SMS alarms.
- Support mobile phone APP (Android and IOS) operation.
- With one-way relay alarm linkage output, 4-way wireless home appliances control.
- Timing arm / disarm, delay arm, delay alarm, alarm time can be reset.
- Remote arm, disarm, monitor, intercom and other functions.
- 30 alarm records can be queried.
- Built-in high-capacity lithium battery, can also work properly when power off.

## Product Knowledge


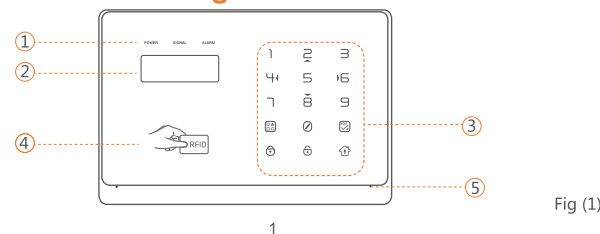


Fig (1)

① light	Power	light on after power on/flash after power off
	Signal	Flash after receiving signal
	Alarm	Fast flash when alarm

② Display: Resolution: 128X32

• Host Interface Description



**Note:** GSM Signal:no flicker signal card / signal strength.

- /-- --:-- Date&Time:Hour-Day-Month
- WiFi signal: indicating the host WIFI signal strength, flashing means not connected to the service cloud;
- Increment indicates SmartLink mode;
- Decrement indicates SoftAP mode;
- Indicates only connecting to LAN.

③ Touch keypad area

- ⊖ Away Arm:The light will be normally on if the host in the arm state.
  - ⊕ Home arm:The light will be normally on if the host in the home arm state.
  - ⊖ Disarm: Operation password (default 123456) + Disarm key. The light will be normally on if the host in the disarm state.
  - ☒ SOS key/Confirm key/# key: Press this key when encountering an emergency situation, press the 0 key and confirm key to enter the SoftAP mode.
  - ☑ On behalf of the Up, Down, Left, Right.
  - ☑/☑/☑/☑ On behalf of the upper and lower, left and right keys.
- ④ RFID card area: in the standby mode, short swipe card to arm the system, long swipe the card to disarm. short swipe card to stop the alarming when system alarmed.
- ⑤ Microphone: Intercom.

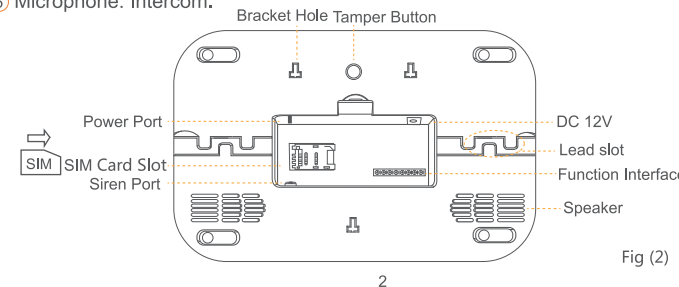


Fig (2)

## WiFi Pairing:

- 1 The first step: download the mobile APP, register with a Email account, login the account, click the plus button on top right corner
- 2 Please make sure that the cell-phone is connected to the WIFI network
- 3 Select to enter SmartLink mode (WIFI connection mode), enter the WIFI password.
- 4 Long press "0" key , the host beep twice, The signal on the top right corner of home screen become stronger, indicating it's searching network, , Click confirm on the mobile phone APP to complete the matching host. The signal tower changing indicating the signal strength of WIFI connection, the host long "Beep" sound, signal tower become weaker showing entering SoftAP mode (WIFI connection mode).

### 2.Download App

Android: Go to Google to search "S-Home" to download APP.  
IOS: Go to APP Store to Search "S-Home" to download APP.  
You can also scan the two-dimensional code to download and install.



Note: Only applies to Android version 4.0 and above (Please use the mobile browser to scan)




Note: Only Applies to IOS version 8.0 or above


## 3. App Operation

Default Access Password: 123456  
Default Administrator password : 123123


### 1.User login

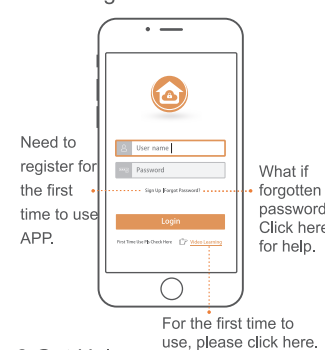


### 2.Enter The Device List

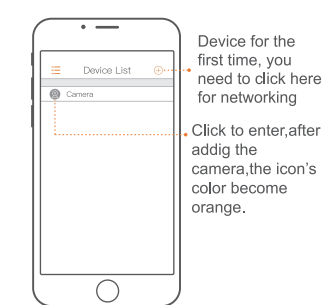

### 3.Get Help

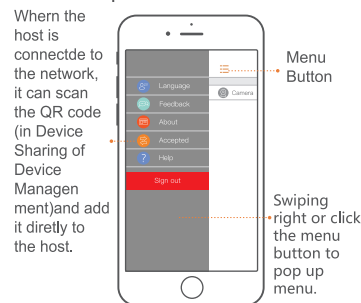

### 4.Control Interface

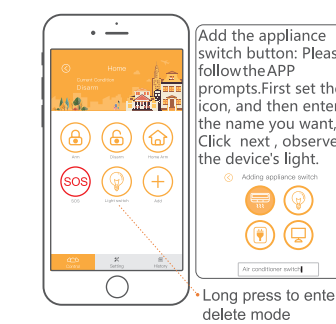

## Daily Use & Maintenance

**1.Remote control Quick Arm & Disarm:** Press the button on the remote control, the host will enter the state corresponding to the button.




Fig (4)

Host function interface description:

1	NC	Relay output closed, alarm interrupt
2	COM	Relay output common port
3	NO	Relay output normally open, the alarm closed
4	Z1	Wired zone 1 input, support normally open, normally closed probe
5	GND	Ground
6	Z2	Wired zone 2 input, support normally open, normally closed probe
7	GND	Negative
8	+12V	Positive (uncontrolled)

Host function interface diagram:

1.WIRED IR: The user needs to connect the wired IR alarm (tamper) output terminal to the host's Z1, GND, wired infrared' GND and + 12V port should be respectively connected to the GND and + 12V.port of the host.

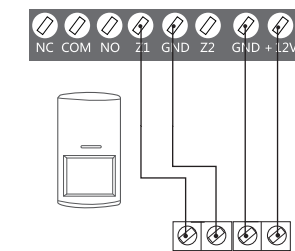


Fig (3)

2. Electronic control lock: Users need to connect One end of the electric lock NC and the other end to COM.

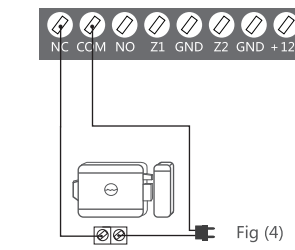


Fig (4)

## 2.Phone connected Operation

Once the host alarms, Siren immediately issued a warning sound; at the same time automatically dial the default phone (phone) for voice alarm. When the call is not answered, the host will automatically dial the next group of phone number, looping through all the preset phone numbers three times.If the dialed telephone has answered and turn off the siren, the telephone handset immediately transmits an alarm message and repeats the alarm zone number. At this point, press the phone (cell-phone) keypad, you can achieve different functions:

- Direct on-hook: The host loops all three times for all calls.
- Press [1 #] key: the host stops the alarm, and arm; host no longer call.
- Press [2 #] key: the host stops the alarm, and disarm; host no longer call.
- Press [3 #] key: the host will turn off the siren and to monitor the spot for 60s. to check if there is abnormal sound or thieves invasion at home.
- Press [4 #] key: start the intercom function for 60s, then exit the intercom until the next command.

**Note:** When the system receives the wrong instruction, the system will play the alarm message, and will turn off the intercom, for intercom, please re-enter [4 #].

### 3.Remotely Control

By phone (cell-phone) to dial the phone number corresponding to the alarm host SIM card, the phone handset to hear long "beep". Meanwhile, Input the password, If the password is right, the receiver will hear the "beep". If the password is right, the receiver will hear the "beep""beep""beep""beep", Please input the password again. (The system will hang up the phone when the password is wrong for three times.) After entering the remotely control operation, Users can remotely operate the host through the telephone keypad.

- Press the [1 #] key: to arm the host.
- Press [2 #] to disarm the host.
- Press the [3 #] key: Live monitor, monitor the home if there is abnormal sound or thieves invasion.
- Press [4 #] key: start the intercom function, until the next command to exit the intercom.

### 4.SMS control

Send text messages to control the host, control password 123456 # 1 # Arming; 123456 # 2 # disarm; 123456 # 3 # home arm.

**5. Check the alarm records**

Host can save 30 alarm records. When the alarm record exceeds 30, the oldest alarm record will be deleted automatically. alarm records checking method: In the disarmed state, short press [F5] key to enter the alarm record checking. Press 4 or 6 to scroll through the page. Press the [F5] button to exit the checking status. In the checking status, if there is a alarm situation, the system will automatically exit the checking state, into the alarm state. The diagram is as follows




**6. remote checking of host status:**

The user can check the current status of the host anytime and anywhere via SMS commands. Method: Send 123456 # 61 # to the SIM card number within the host. Reply message contents are:  
 -->The system status: disarm -->The system status: arm  
 -->The system status: home arm

**7. Restore the factory password setting**

When the user forgets the password, you can enter the command: 95175308246 in the standby status (non-alarm state, non-remote control state) of the system, then press [F5]. The host displays: "Restore default password, please wait". Graphic as follows:



**8. System check**

Although the alarm system is used every day, it must also be regular maintained and tested, in order to ensure the alarm system is stable, reliable and of safe operation. Usually, the alarm host should have a comprehensive detection in every three months, the detector should be tested in every month, at least once every three months.

- Host detection:
- 1 whether the host could normally arm and disarm
  - 2 whether host could normally dial out in GSM network when alarm.
  - 3 Whether host WIFI signal indication is normal.



- 4 whether the host could normally receive the detector signal or back-up battery and whether the backup battery is normal.
- Probe detection:
- 1 Manually trigger the detector, check whether the alarm is normal.
  - 2 Check the battery of all detectors to see if the voltage is low.
  - 3 Test the launch of the wireless detector to see if it can communicate with the host.

**VI System Troubleshooting**

Symptom	Possible Cause	Solution
No network detected	Is the SIM card installed or not?	Reload
	Is the PIN set on the SIM card?	cancel
	Is the mounting position of strong signal enough to accept the signal?	Change the mounting place
Can not alarm	Whether coding is normal or the code is successful?	Confirm the correct code, and then re-code
	Whether the probe is of enough power to launch?	Replace the battery
Can not dial the Phone	Is the mobile signal strong enough?	Change the place
	Is your cell-phone topped-up?	Check and top up
	Check if the phone number is set correctly	Reset
Siren does not ring	Is the siren of good contact? Is the zone muted?	Examination Reset
Can not be remotely controlled	Is the remote control password input correct?	The original is 123456
System false alarm	Whether paired with other detectors?	Re-code

**VI Product Introduction**

- Enter The System  
Default Access Password: 123456  
Default Administrator password : 123123  
The above passwords are factory default and can be modified (refer to step 11 of the operation flow chart).
- Operation Flow Chart

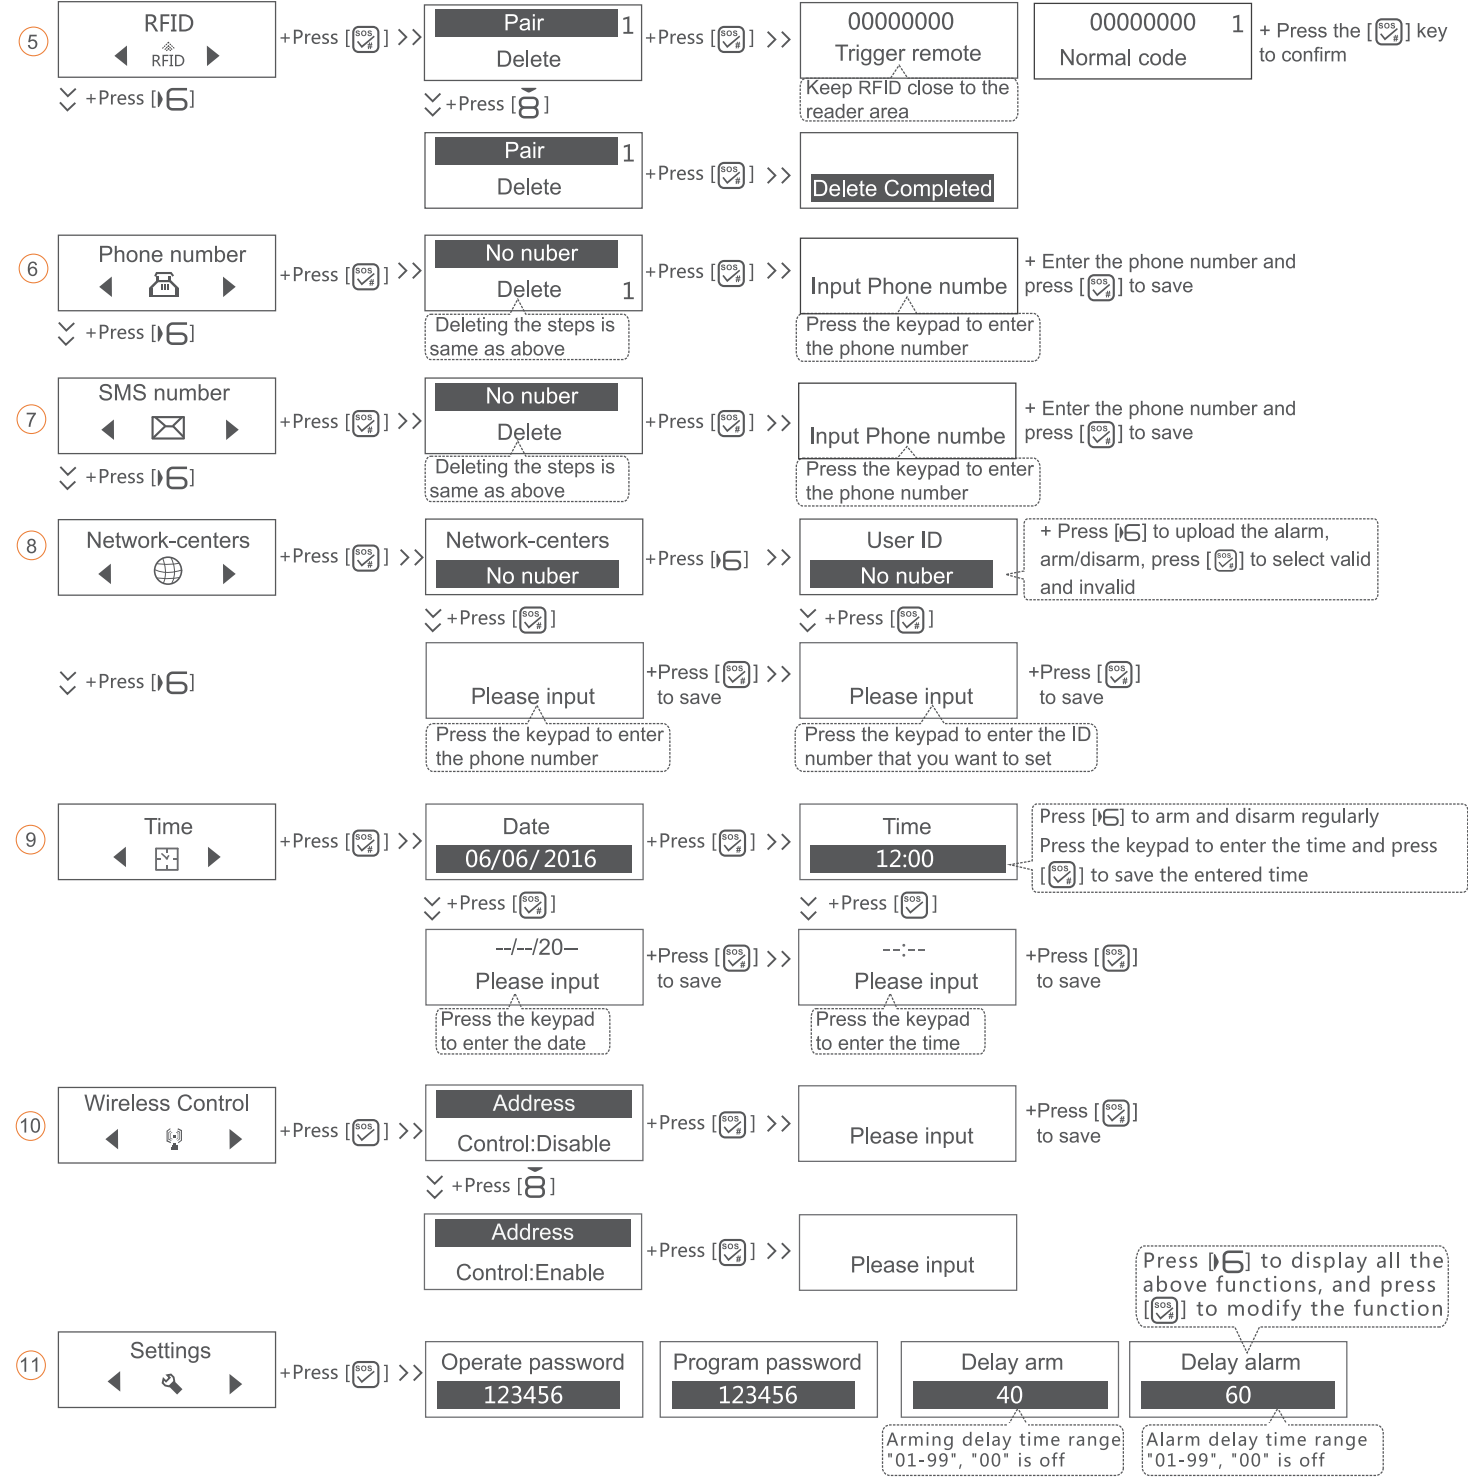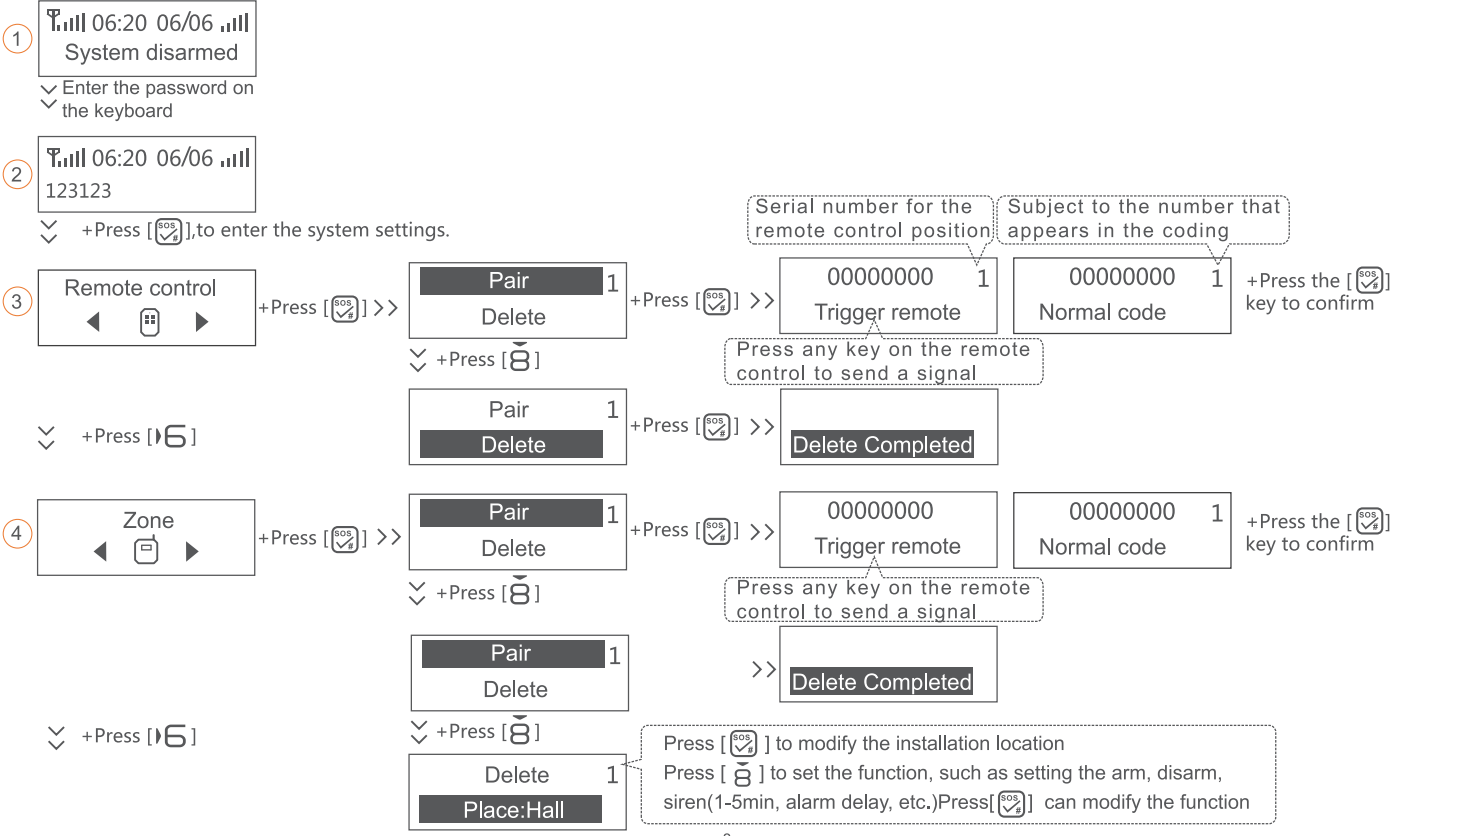

**VIII Main Technical Parameters**

Power Supply: AC = 110-240V ± 10% DC = 12V (built-in lithium battery rechargeable battery)  
 Quiescent Current: <180mA  
 Alarm Current: <450mA  
 WiFi frequency range: 2.412GHZ-2.484GHZ  
 WiFi standard: IEEE 802.11 b / g / n  
 Wireless Reception frequency: 433MHZ ± 0.5MHZ  
 GSM Band: 850/900/1800 / 1900MHZ 4band  
 Wireless Receiving sensitivity: 5mV / m  
 Anti-interference strength: 1V / m (frequency range 20-1000 MHZ)  
 External Alarm Siren Sound Intensity: 110db  
 Working Environment: Temperature -10°C ~ +40°C Relative humidity ≤90% without condensation  
 Configurable Wireless Device Capacity: 8 remote controls 80 detectors  
 Wireless Transmission Frequency: 315MHZ  
 Wireless Reception Frequency: 433 MHZ

**IX Packing List**

- |   |                                 |
|---|---------------------------------|
| 1.Host ×1                                 | 2.Remote controls ×2            |
| 3.Wireless Door sensor ×1                 | 4.Wireless infrared detector ×1 |
| 5. Siren 1                                | 6.Power adapter DC12V / 1.2A ×1 |
| 7. Rechargeable backup battery (built-in) | 8. User Manual ×1               |

**X Storage&Transportation**

Storage Conditions: temperature -10°C ~ +40°C, relative humidity less than 90%, ventilation, non-corrosive objects, the standard carton, stacking layer is less than 6 layers.  
 Transport Conditions: stacking layers less than 6 layers, avoid shock in handling process , adding other appropriate conditions.