


WP3082ADAM

User's Manual

Version 1.42A

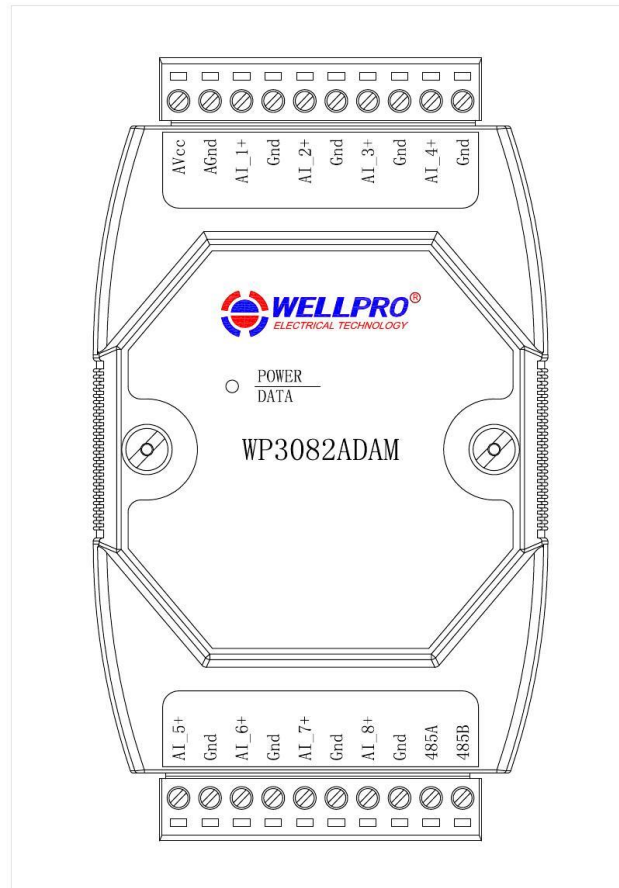

Shanghai Wellpro Electrical Technology Co., Ltd.
www.shwellpro.com

1、Product description

- Eight current input channel: DC0~20mA / DC4~20mA
- RS485 MODBUS RTU standard communication protocol
- Netted with configuration software, PLC or industry touch panel
- Communication status LED
- Communication circuit designed for thunder protection and interference immunity
- Used for signal collection and control in industrial field


2、Specification

- Analog input channel 8ch
- Analog input range DC0~20mA / DC4~20mA
- Analog input accuracy ±0.02mA
- Working temperature -20~70°C
- External power supply DC9V~30V/2W
- Isolation protection DC1500V
- Installation method Standard DIN slide rail or screw
- Dimension 125×73×35mm

3、Interface description

AVcc	External power supply input positive
AGnd	External power supply input negative / Power ground
AI_1+	Current input channel 1 positive
Gnd	Current input channel negative / Common analog ground
AI_2+	Current input channel 2 positive
Gnd	Current input channel negative / Common analog ground
AI_3+	Current input channel 3 positive
Gnd	Current input channel negative / Common analog ground
AI_4+	Current input channel 4 positive
Gnd	Current input channel negative / Common analog ground
AI_5+	Current input channel 5 positive
Gnd	Current input channel negative / Common analog ground
AI_6+	Current input channel 6 positive
Gnd	Current input channel negative / Common analog ground
AI_7+	Current input channel 7 positive
Gnd	Current input channel negative / Common analog ground
AI_8+	Current input channel 8 positive
Gnd	Current input channel negative / Common analog ground
485B	RS485 signal B-
485A	RS485 signal A+

4、Analog input application diagram

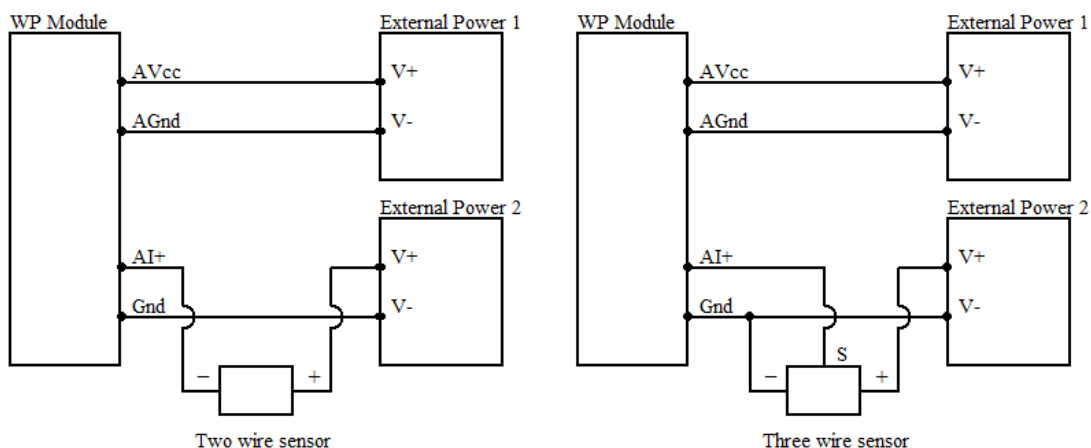

5、Communication description

5.1、Communication parameter: 9600, None, 8, 1 (default setting)

Parameter	Description
9600	baud rate
None	check bit
8	data bit
1	stop bit

5.2、Command for analog input data reading

Send: 01 03 00 00 00 08 44 0C (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
03	1	function code	03-read holding register
0000	2	register address (4X type)	0000-starting register address
0008	2	register number	0008-read 8 registers
440C	2	CRC check code	CRC check code for all data

Receive: 01 03 10 09 CE 00 00 00 00 00 00 00 00 00 00 00 00 00 00 6C 5B (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
03	1	function code	03-read holding register
10	1	byte of data	10-read 16 bytes
09CE	16	read data	09CE-analog input channel 1 data
0000			0000-analog input channel 2 data
0000			0000-analog input channel 3 data
0000			0000-analog input channel 4 data
0000			0000-analog input channel 5 data
0000			0000-analog input channel 6 data
0000			0000-analog input channel 7 data
0000			0000-analog input channel 8 data
6C5B	2	CRC check code	CRC check code for all data

This command reads module's current input data.

The data of the analog input channel 1 is "09CE", it will be 2510 after converting to decimal data. Put it in the formula: $I=DATA*20/4095=2510*20/4095\approx 12.26\text{mA}$. The current of other analog input channel is 0mA.

5.3、Command for module address setting

Send: 00 06 00 64 00 01 08 04 (example/hex)

date	byte	data description	remark
00	1	module address	00-broadcast address
06	1	function code	06-write single holding register
0064	2	register address (4X type)	0064-module address register
0001	2	write data	0001- module address, range:0001-00FE
0804	2	CRC check code	CRC check code for all data

Receive: 00 06 00 64 00 01 08 04 (example/hex)

This command sets module address (slave address) as "01" (default setting). This setting could be saved when power off. This is a broadcast command. It needs to ensure that only one module is connected to the master. When module receives correct command, it will send response back to the master.

5.4. Command for communication parameter setting

Send: 01 06 00 65 00 02 18 14 (example/hex)

data	byte	data description	remark
01	1	module address	address range:01-FE
06	1	function code	06-write single holding register
0065	2	register address (4X type)	0065-communication parameter register
0002	2	write data	0001- 4800, None, 8, 1 0002- 9600, None, 8, 1 0003- 19200, None, 8, 1 0004- 38400, None, 8, 1 0005- 4800, Even, 8, 1 0006- 9600, Even, 8, 1 0007- 19200, Even, 8, 1 0008- 38400, Even, 8, 1
1814	2	CRC check code	CRC check code for all data

Receive: 01 06 00 65 00 02 18 14 (example/hex)

This command sets communication parameter as “9600, None, 8, 1” (default setting). This setting could be saved when power off.

When module receives correct command, it will send response back to the master.


6. POWER/DATA LED description

- When module powered on, LED is green.
- When module is under communication, LED is twinkling.
- When module receives correct command, LED is green.
- When module receives incorrect command or other module’s command, LED is red.

7. PC debugging description

We provide a debugging software for function testing and parameter setting. Please follow the steps below:

- Connect computer to module with RS485 converter.
- Connect DC12V or DC24V power to module and power on. To avoid any unnecessary damage, please make sure the power positive and negative terminals are correctly connected before power on.
- Open the software and select the model of module, you will see the window of function testing or parameter setting.
- Set communication parameter and open the serial port.
- Select corresponding setting and click “Read” or “Write” button.

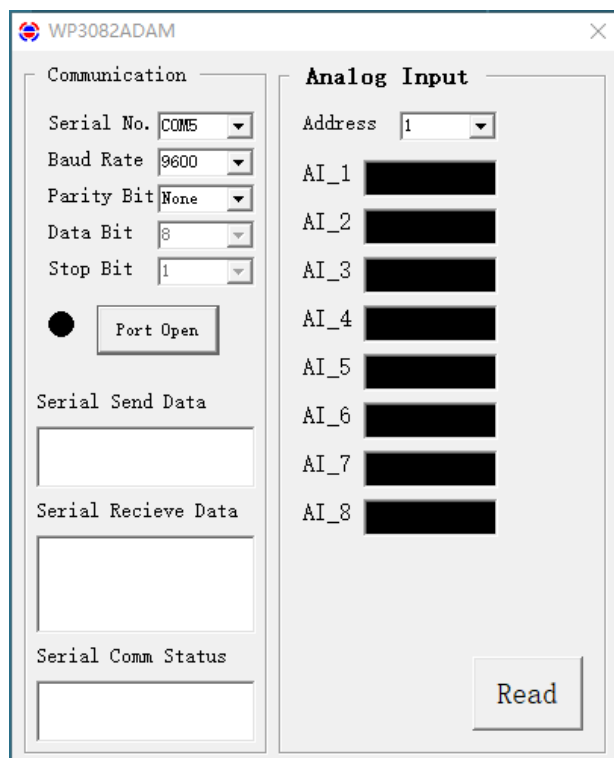

8、RS485 network diagram

